


True wireless speaker mode.

You can pair two same model speakers (43173716 or 43173754) to enjoy louder volume and stereo sound.


Purchase another same model from Kmart store.

1. Turn on both speakers.
2. Press and hold both  button at the same time to pair.
3. A notify sound will be heard mean two speaker paired successfully in TWS mode.
4. Select Bluetooth device name 'KM43173716 or 43173754 in your Bluetooth settings menu to pair.
5. Pairing with your external device by Bluetooth.
6. The speaker will connect automatically when both turned on.

FM mode

Plug-in the 3.5mm Aux cable as antenna for use with FM radio.


 
Press "M" button to change FM mode


 
Press and hold  (9) to search the FM station. Radio station will store automatically.

Press  (7) and  (8) to select the stored radio station.

Play music with TF card and USB drive

Insert the MicroSD card or USB drive into the slot, music will play automatically when there is MP3 files stored.

Press and hold  (7) and  (8) for Volume Control

Press  (7) and  (8) for track selection

TF card: compatible for 32GB max memory.

USB drive: compatible for 32GB max memory.

Hands free

Press  button to answer or hang up a phone call

Press  button twice to redial the last number

AUX-in mode.

To connect with mobile phone, computer or other audio equipment.

Use the 3.5mm stereo cable to connect the headphone jack to the AUX-in.

The speaker will turn into AUX-in mode when plug in cable. if not, Press the "M" button to switch to AUX-IN mode.

Specifications:

- Bluetooth version: 5.0
- Speaker power: 2×5W
- Sensitivity: 80±2dB
- Frequency: 100Hz-20KHz
- Distortion rate ≤1%
- Build-in Rechargeable battery
- Charging time up to 4 hours
- Input: DC 5V / 700mA

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation

anko

User Manual
Bluetooth® Speaker Barrel
43173716 / 43173754

Notice :

Please read user manual carefully before any operations, and keep it for your records.

Safety instructions:

 
- Do not disassemble this product.
- This product is not a toy. Use extra caution while children are using this product.
- Keep the speaker away from direct sunlight, fire and high voltage equipment.
- Do not store the speaker inside a car during hot weather.
- Speaker shall not be exposed to excessive heat such as sunshine, fire or the like.
- Device may become warm while charging.
- Be assured to turn product completely off when plugging and unplugging into outlet.
- The marking information is located at the bottom of apparatus.

CAUTION

- Minimum distances 20 cm around the apparatus for sufficient ventilations.
- The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, tablecloths, curtains etc.
- No naked flame sources such as lighted candles should be placed on the apparatus.

Package includes:

- 1×Bluetooth® speaker
- 1×USB charging cable
- 1×3.5mm Aux cable
- 1×User Manual

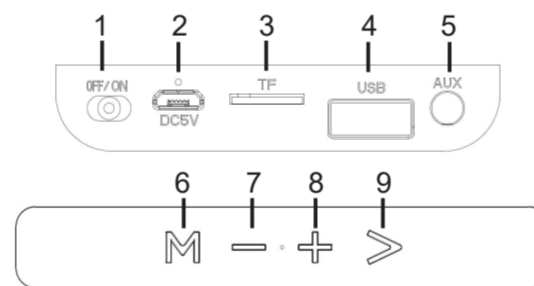

Functionality:

- 1 - Power On/OFF switch
- 2 - DC 5V USB charge port
- 3 - TF card slot
- 4 - USB port for USB flash drive
- 5 - AUX port (AUX cable included)
- 6 - Mode (Bluetooth / FM / AUX / USB)
- 7 - Volume and Track Control
- 8 - Volume and Track Control
- 9 - Play/Pause/Phone Button

Charging:

The speakers are powered via an integrated rechargeable battery.

The battery cannot be removed or replaced.

Upon initial use, the battery should be charged fully to ensure optimal performance and battery life.

Charge the device with the included USB charging cable.

Plug the micro USB end of the charging cable into the DC 5V USB charge port (2) and the USB end into a suitable USB port on your computer or a USB wall charger with DC5V.

Charging time approx. 4 hours, when connected to a standard USB port.

Power On/Off

1. To turn the unit on, push the Power On/OFF switch (1) to ON. The blue LED will light up and a sound is emitted.
2. Turn the unit off, push the Power On/OFF switch (1) to OFF. The LED will switch off.

Pairing a Bluetooth device for the first time

1. Turn the unit on.
2. Turn on your external device. Refer to its user manual for instructions on pairing and connecting Bluetooth devices.
3. Using the native controls on your Bluetooth device, select Bluetooth device name "KM43173716 or 43173754" in your Bluetooth settings menu to pair.
4. When successfully paired and connected, a sound will issue from the unit. After initial pairing, the unit will stay paired unless unpaired manually by the user.
5. If your device asks for a password, use "0000" or "1234" to complete the pairing process.

If you have used Bluetooth connection before, the system will start searching for the device last connected. When the device is found, the system will re-connect automatically.

NOTE: Only one Bluetooth device can be connected to the speakers at one time.

When Aux in is connected, Bluetooth function will be switched off, please disconnect the Aux in cable before using Bluetooth.

NOTE:

Should your device become unpaired or you are not able to connect it, repeat the above steps.