

CAMPING CHAIR INSTRUCTIONS

Keycode: 43181896

**Please read completely before setting
up your Camping Chair**

Please read and understand these instructions before attempting to set up your Camping Chair. Follow all safety precautions, care and maintenance tips listed below when using your Camping Chair.

Warning!

1. Please check that all parts in good condition before using. Never use if there are any broken or loose parts.
2. Never set up or continue to use in any rain, wind or stormy conditions.
3. Please don't stand and step on the frame, joint or chair.
4. This chair is for one person only.
5. Avoid bending the frame or pinching your fingers or hands while opening or closing the frame.
6. Avoid setting up your Camping Chair on steep inclines or on uneven ground.
7. Keep the Camping Chair away from heat and flames at all times.
8. Max weight capacity:100KG

WARNING:

Max weight capacity:100KG



Cleaning!

If your chair material is dirty, you can wash it below 30°C water.

Please do not bleach, do not tumble dry, do not iron and do not dry clean.

Assembly Instructions

Follow these instructions carefully to avoid pinching your hands or fingers in any of the moving parts as the frame opens and closes.

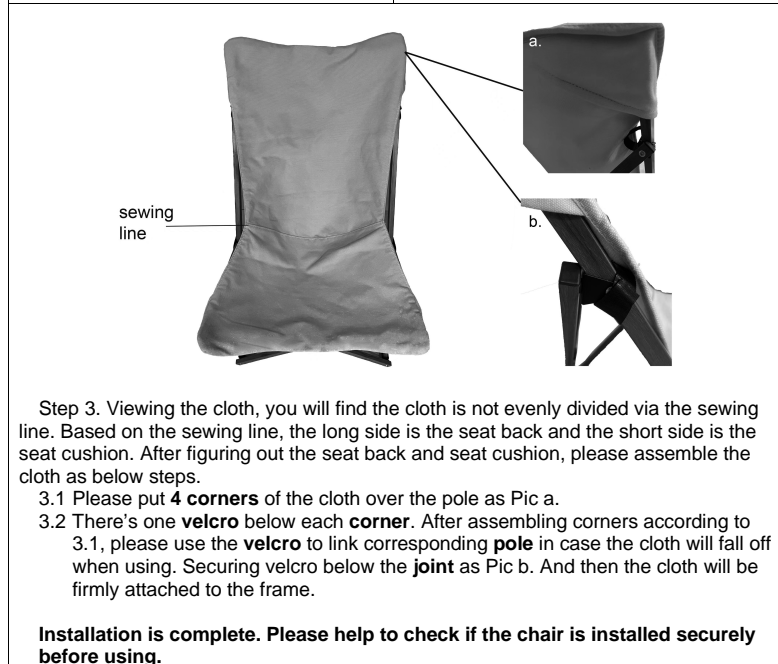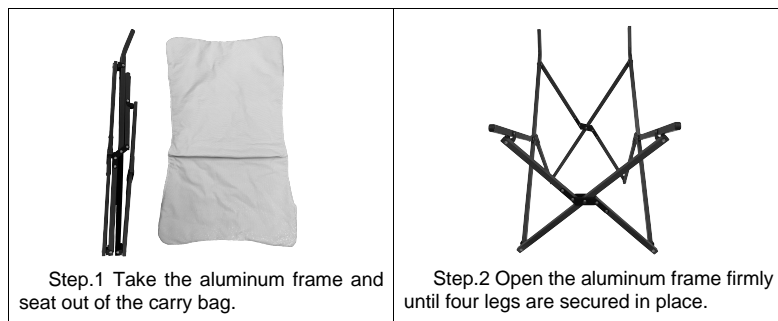

CAUTION: BE CAREFUL NOT TO PINCH FINGERS. DO NOT PUSH HARD.

Disassembly Instructions

When you're ready to fold the camping chair, please make sure there's nothing on the chair and keep the cloth dry.

Step1. Releasing 4 velcros of 4 corners.

Step2. Removing the cloth and folding the frame.

Step3. Packed the cloth and frame into carry bag.

CAUTION: BE CAREFUL NOT TO PINCH FINGERS. DO NOT PUSH HARD.

Final having made sure the cloth is completely dry return your fold up chair to its storage bag.

MADE IN CHINA