

# anko

## Karaoke Party Speaker 43183364 User Manual



Please read all instructions carefully and keep for future use.

### Important Precautions:

1. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
2. Minimum distances 100 cm around the apparatus for sufficient ventilation.
3. The ventilation should not be impeded by covering the ventilation opening with items, such as news papers, table-cloths or curtains.
4. No naked flame sources such as lighted candles, should be placed on the apparatus.
5. When the mains plug or and appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
6. Working temperature: -10 °C ~ +45 °C.
7. The use of apparatus in moderate climates.
8. Do not use this apparatus near the water.

### Avoids to use battery in following conditions:

1. Attention should be drawn to the environmental aspects of battery disposal.
2. Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
3. Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
4. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
5. Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
6. A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
7. Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
8. The internal battery is non-user replaceable.


### Product Specification

Charging input rating: 5V 500mA  
Charging time: 4 Hours  
Playback time at 50% volume: 4.5 Hours  
Power: 10W  
Speaker: 6.5 Inch  
FM Radio: 87.5-108MHz  
AUX In: 3.5mm  
Microphone Input: 6.35mm

### Product feature:

- 3 lighting effects .
- Bluetooth version 5.0, compatible with all audio devices with Bluetooth function, as MP3/4, mobile, computer, iPad.
- Built-in rechargeable lithium battery

### Button and interface:

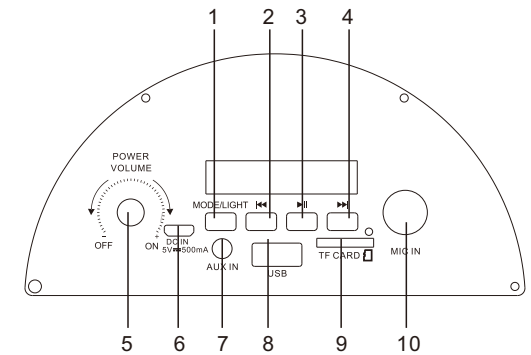

1. MODE-LIGHT Key : Short press to change the modes, long press to change the light effects.
2. Previous Key : To goto previous track in USB or BT mode, or to goto CH- in FM mode.
3. Play/Pause Key : To play or pause the track in USB or BT modes.
4. Next Key : To goto next track in BT/USB sources, or to goto CH+ in FM source.
5. POWER/VOLUME Knob : Power ON/OFF Knob; Music Volume and Microphone Volume knob.
6. DC Input
7. Aux Input Insert the 3.5 mm cable in Aux input.
8. USB Input : Insert the USB driver to play the tracks.
9. TF Card Input : Insert the TF Card to play the tracks.
10. Mic Input : Insert the wired microphone.

### Charging the Speaker

The speaker comes with a built-in rechargeable, follow the below steps to charge it:  
1. Plug the end of USB charging cable (included) with USB charger (not included) to the DC 5V input slot, another end plug into a wall outlet to start charge.  
2. The battery indicator will show RED on the top and turn off when fully charged.  
3. When the speaker battery is lower power, a DIDIDI top tone will be heard indicating that need to charge.

### Powering ON/OFF

1. Make sure that the speaker has been charged.
2. Turn the [ POWER/VOLUME ] knob clockwise until it clicks to power ON. The speaker will enter Bluetooth pairing mode.
3. The speaker may automatically re-pair to any nearby, previously paired device.
4. Turn the [ POWER/VOLUME ] knob counterclockwise until it clicks to power OFF.

### Changing Function Modes

1. Press the [ MODE/LIGHT ] button on the top panel of the speaker to switch function modes.
2. The LED screen on the top of the speaker will indicate the mode.  
**Note:** You must have a micro TF card or USB device inserted or AUX cable connected to switch to these modes.

### Adjusting Volume & Playback

1. Adjust volume with the [ POWER/VOLUME ] knob or the controls on a connected device.
2. Press the [ ►► ] and [ ◀◀ ] buttons on the speaker to switch the tracks in Bluetooth/USB mode or stations in FM mode .
3. Press the [ ►◄ ] button to pause and resume playback in Bluetooth/USB mode.

### Connecting with Bluetooth

1. Power on the speaker. speaker the LED screen will display the word "bBLUE."
2. Open the bluetooth on your mobile device and search Bluetooth name 43183364 to pair.
3. In Bluetooth mode, playback and volume can be controlled by your paired device or the controls on the top of the speaker.

### Switching the Speaker Light Effects

1. The LED light effect will automatically turn on when the speaker is powered on.
2. Long press the [ MODE/LIGHT ] button on the top of the speaker to switch LED light effect and turn the lights off.

### Using the FM Radio (FM Antenna cable the same as AUX cable, included)

1. Power on the speaker and switch to FM mode, the LED screen will display the current FM frequency.
2. Insert the FM/AUX cable into the AUX jack.
3. Long press the [ ►► ] button to start scanning and saving available stations. The LED screen will show scanning progress.
4. Press the [ ►► ] and [ ◀◀ ] buttons to the switch to the saved stations.

### Connecting to an AUX Device


1. Insert one connector of 3.5mm AUX cable (included) into the 3.5mm AUX input jack on the top of the speaker. Insert the other connector into the headphone jack or audio output jack of your media playing device. The LED screen will display the word "LINE".


In AUX mode, all playback will be controlled by your connect device.

### TWS Connecting

- \*This speaker supports TWS pairing function, please buy two same speaker to enjoy this function.
1. Long press [ ►► ] button on two speakers to turn on the TWS pairing function, there is a DI sound from the speaker and " bL ON " will short display on the screen.
  2. The TWS will pair automatically once both speakers turn on the TWS function.
  3. Turn the volume knob on the top panel of any speaker increase or decrease the music volume.
  4. If not using the TWS function, please long press [ ►► ] to disconnected TWS.

### Connecting to Wired Microphone (Not included)

 MIC IN  
Insert 6.35mm wired microphone, and use control knob to adjust the sound level.

 POWER VOLUME  
When playing with the wired microphone, please use this knob to adjust the volume of microphone.

## 12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.