

INSTRUCTION MANUAL

43183388

 
43183388_Wireless Portable Karaoke Machine_IM_V

Artwork Proof Date: 6.9.2022

PAPER:


80gsm
Bright white uncoated paper

PRINT COLOURS:

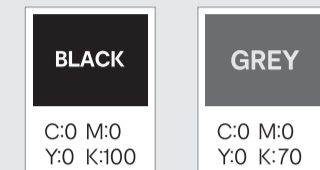

PRINT FINISH:

 Double sided

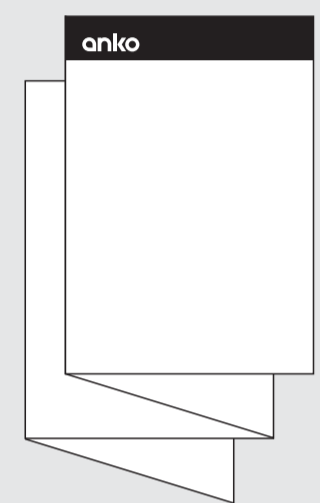

2. BLUETOOTH Mode

- ▶ Select Bluetooth from main interface or press the Bluetooth button on control panel or remote directly to enter Bluetooth mode
- ▶ Turn on the Bluetooth feature on your portable device.
- ▶ Find and pair with the "KM43183388" speaker.
- ▶ Music playback via your device.
- ▶ Press the PLAY/PAUSE button or "⏸" button to play or pause.
- ▶ Press PREVIOUS/NEXT button or "◀/▶" button to select a specific track for playback.

Note:

- ▶ Remote cannot adjust volume when in BT mode.
- ▶ Repeat function and R/L function not valid when in BT mode.

3. RECORD Mode

- ▶ Insert your USB stick or TF card, the screen will auto enter to explorer mode, press RETURN button to return to main interface and connect microphone.
- ▶ Select Record feature from interface or press record button on remote directly.
- ▶ Before record, press PREVIOUS / NEXT button or "◀/▶" button to select "Quality" and "Type", you can select Good/Normal/Poor voice quality and WAV/MP3 voice format.
- ▶ Then Press the PLAY/PAUSE or "⏸" to start and stop record.
- ▶ After recording stops, press PREVIOUS / NEXT button or "◀/▶" button to select "Save" to save your record.
- ▶ Press PREVIOUS/NEXT button or "◀/▶" button to select "List", select your record to playback.

Note: The "RECORD" function only can recording voice from Microphone source.

4. PHOTO Mode

- ▶ Insert your USB stick or TF card (with photos inside), the screen will auto enter to explorer mode, press RETURN button to return to main interface.
- ▶ Select PHOTO feature from main interface or press photo button on remote directly.
- ▶ Press the PLAY/PAUSE button or "⏸" button to start or stop photo auto-playback.
- ▶ Press PREVIOUS/NEXT button or "◀/▶" button to review the photo one by one.
- ▶ Supports JPG, JPEG, PNG format.

5. EXPLORER

- ▶ Insert your USB stick or TF card, the screen will auto enter EXPLORER mode.
- ▶ You also can select EXPLORER feature from main interface or press explorer button on remote directly at any time.
- ▶ Press PREVIOUS/NEXT button or "◀/▶" button to select USB/TF card to browse the file (Video/Audio/Photo/Record,etc).

- ▶ Press the MENU button to delete the selected file then press the PLAY/PAUSE or "⏸" button to confirm.

6. AUX INPUT

- ▶ Connect an AUX Cable to the AUX-IN JACK of the unit and to your external audio device (e.g MP3 player/mobile phone), then the screen will auto enter AUX mode
- ▶ You also can select AUX feature from main interface or press AUX IN button on remote to enter AUX mode directly.
- ▶ Music playback via your external audio device.

7. SETTING

 
- ▶ Select SETTING from main interface or press Setting button on remote directly.
- ▶ Press PREVIOUS/NEXT or "◀/▶" button to select specific item.
- ▶ Press the PLAY/PAUSE or "⏸" button to change the option.

Microphone Use Instruction

- ▶ You can connect the wired microphone through MIC IN jack or turn on the wireless microphone to use directly.
- ▶ The wireless microphone and wired microphone can be used at the same time.
- ▶ When speaking with MIC and playing music at the same time, press MIC FIRST, music will turn to min volume automatically, and mic volume will be clearer.
- ▶ The MIC Volume can be adjusted through MIC Volume knob on the control panel.
- ▶ The ECHO effects can be adjusted through ECHO knob on the control panel.
- ▶ Please do not get too close to the speaker when using the microphone.
- ▶ Turn off the microphone when not in use.

Pull Rod instruction

- ▶ Press and hold (A) button and pull out to make trolley longer.
- ▶ The height can be adjusted from 25.5cm to 44cm.

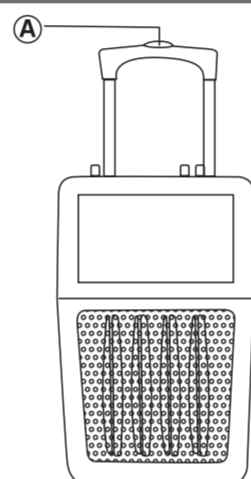

12 month warranty

Thank you for your purchase from Kmart.
Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.
Please retain your receipt as proof of purchase and contact our Customer Service Centre on **1800 124 125 (Australia)** or **0800 945 995 (New Zealand)** or alternatively, via Customer Help at **kmart.com.au** for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.
Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

WARNING ▶ Do not dispose of unit in fire or water. ▶ Never attempt to disassemble and reassemble. Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. Check with your local authority for recycle advice. ▶ Keep your device and all accessories out of reach of children and animals. Small parts may cause choking or serious injury if swallowed. ▶ Avoid exposing your device to very cold or very hot temperatures (below -10°C or above 45°C). ▶ Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. ▶ Do not allow your device to get wet, liquids can cause serious damage. Do not handle your device with wet hands.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.
iPhone, iPad and Mac is a trademark of Apple Inc., registered in the U.S. and other countries.



142.5mm

 
anko

Portable Karaoke Machine With Screen

User Manual

Package Contents

- ▶ Karaoke Machine x 1
- ▶ AC Adapter x 1
- ▶ Remote Control x 1
- ▶ Wireless Microphone x 1
- ▶ User Manual x 1
- ▶ Audio cable x 1

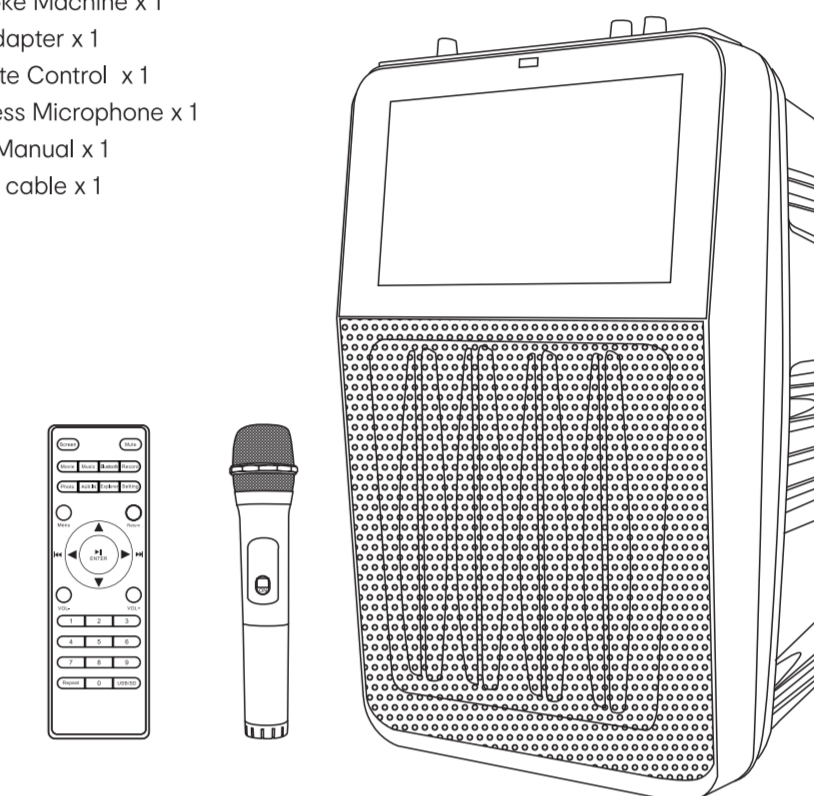

210mm

43-183-388

Warning

- ▶ Do not disassemble, repair or modify this product by yourself, contact your authorized specialist.
- ▶ Use extra caution in high temperatures.
- ▶ Do not use product in a hospital or on an airplane.
- ▶ Do not expose the device to direct sunlight, heat or flame.
- ▶ Product is not covered under warranty when the product has metal rust, surface spalling and any other natural oxidation.
- ▶ Damage, shock, and/or injury can occur if these warnings are not heeded.
- ▶ Device may become warm while charging.
- ▶ Make sure you always turn the product and the power outlet off completely before unplugging the product.
- ▶ Make sure the product has plenty of ventilation.
- ▶ Do not press the buttons too hard as it could damage the product.
- ▶ Only use dry cloth to keep product clean from dust.
- ▶ Do not use chemicals on this product.
- ▶ Do not insert foreign objects into the product.
- ▶ Avoid dropping the product, as harsh impacts could damage the product.
- ▶ Never store or use this product in temperatures below -10°C or above 45°C.

Specification

 
Device:

- ▶ Output power: 30W
- ▶ Display: 8" TFT HD
- ▶ Battery capacity: 7.4V 2000mAh Li-ion battery
- ▶ Charging time: 4-5 hours
- ▶ Working time: 2-3 hours at 100% volume.
- ▶ Bluetooth distance: 10m
- ▶ Working temperature: -10~45°C

Adaptor:


- ▶ Brand: GKY
- ▶ Model: GKYZA0100120AU
- ▶ Input: 100-240~, 50/60Hz, 0.5A
- ▶ Output: DC 12V, 1A
- ▶ Working temperature: -10~45°C

Control Panel

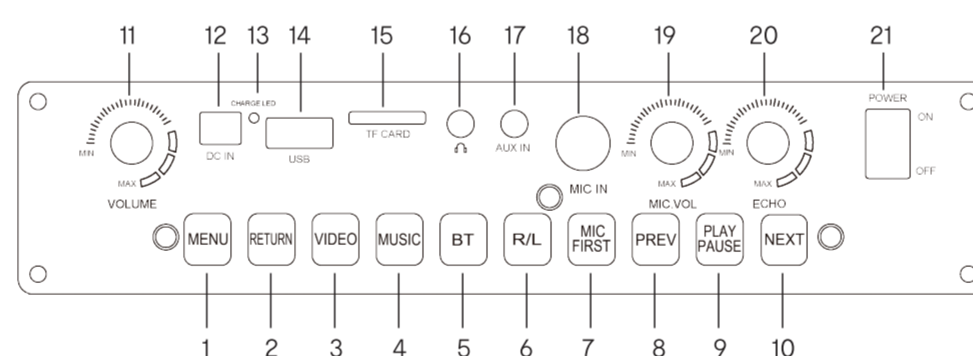

1. Menu Button (Operation at video/music/BT/Record/explorer mode)
2. Back Button
3. Video Mode Button
4. Music Mode Button
5. Bluetooth Mode Button
6. Switch Right or Left channel (Not available in Bluetooth Mode.)
7. Microphone Priority ON/OFF Button
8. Previous Track Button
9. OK Button or Play/Pause Button
10. Next Track Button
11. Master Volume Knob
12. DC Input port
13. Charging Indicator
14. USB port
15. TF Card Slot
16. Wired Earphones Jack
17. AUX IN Jack
18. Wired Microphone Input Slot
19. Microphone Volume Knob
20. Microphone Echo Knob
21. Power ON/OFF Switch

 Remote Control

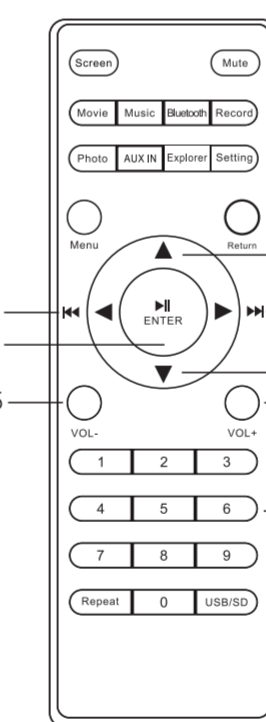


1. Up
2. Down
3. Right/next track
4. Left/previous track
5. Volume down
6. Volume up
7. Channel selection
8. Play/Pause

- Screen:** ON/OFF screen
- Mute:** ON/OFF mute
- Movie:** Enter movie mode
- Music:** Enter music mode
- Bluetooth:** Enter Bluetooth mode
- Record:** Enter Record mode
- Photo:** Enter photo mode
- Aux in:** Enter AUX IN mode
- Explorer:** File Browsing mode
- Setting:** Setting mode
- Menu:** ON/OFF menu at Video /Music/ BT/ Record/ Explorer mode
- Return:** Return to main interface
- Repeat:** Change playback mode
- USB/SD:** Change USB/SD mode

Power adaptor

- ▶ Ensure that the power supply voltage is in the voltage of 240Vac, 50Hz.
- ▶ Use provided power supply to charge the unit only.
- ▶ It is not recommended to use the device during charging.
- ▶ Unplug the adaptor from the outlet when the unit has fully charged.

 Function view

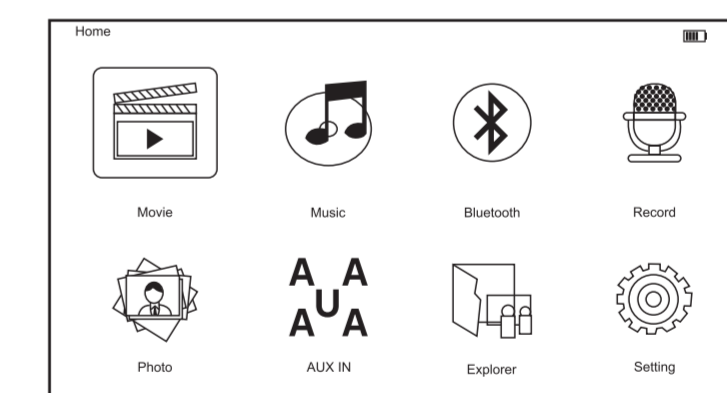

- ▶ Press the power button, the main interface will display after system start-up for 7 seconds.
- ▶ After system start-up, please operate the unit according to below steps.

1. MOVIE/ MUSIC Mode

- ▶ Insert USB stick or TF card (with Video/Audio inside), the screen will auto enter explorer mode, you can select the Video/Audio file in the explorer or press VIDEO/MUSIC button on control panel or remote directly to playback.
- ▶ Playback will begin automatically.
- ▶ Press the PLAY/PAUSE button or "⏸" button to play or pause.
- ▶ Press PREVIOUS/NEXT button or "◀/▶" button to select a specific track for playback.
- ▶ Press and hold PREVIOUS / NEXT button or "◀/▶" button to rewind /fast forward.
- ▶ Support video format: MKV/AVI/MOV/MP4/TS/ASF/FLV
- ▶ Support music format: WAV/MP3/MID/RM/APE/FLAC

LASER All rights reserved.