

anko

COSMETICS COOLER WITH LED MIRROR



USER MANUAL

Model No.: CC-LED


READ AND UNDERSTAND FULLY THE INFORMATION SUPPLIED IN THIS MANUAL
BEFORE USING THIS PRODUCT. RETAIN FOR FUTURE REFERENCE.

Contents

Safety Instructions	1
Product Specifications	3
Setup	3
Usage Recommendations	4
Cleaning and maintenance	5
Troubleshooting	5
Technical Data	5
12 Month Warranty	6

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Carefully read this user manual before using this appliance. 
- Keep appliance out of reach of young children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Ensure children and babies do not play with plastic bags or any packaging materials.
- Do not disassemble the appliance. There are no user serviceable parts inside.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged.

WARNING: Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

VERY IMPORTANT

- Ensure the appliance does not get wet (water splashes etc.). Do not use appliance with wet hands.
- Do not immerse appliance in water or other liquids or use near sinks, baths or showers.
- Always operate the appliance from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
- Position the power supply lead properly so that they will not be walked on or pinched by items placed on or against them.
- Use appliance only for its intended use. Appliance is intended for household use only and not for commercial or industrial use.
- Do not use appliance if it has been dropped or any part of appliance (including cord or plug) has been damaged. For electrical safety, any repairs to the product must be performed by a qualified electrical person only.
- If the supply cord is damaged, it must be replaced in order to avoid a hazard.
- Use only accessories supplied with the product. The use of accessories not intended for use with this appliance may cause injuries to the user or damage to the appliance.


-
- Do not install the unit on other appliances, on uneven surfaces or where it could be subject to: warm sources (e.g. radiators or stoves), direct sunlight, excessive dust or mechanical vibrations.
 - Appliance should not be used outdoors, placed near a hot gas or electrical burner or placed in a warmed oven.
 - Do not install near any heat sources such as radiators, stoves or other apparatus that produces heat.
 - Do not operate appliance underneath or near flammable or combustible materials (e.g., curtains). Keep at least 300mm clearance around sides, back, front and top.
 - Unplug this apparatus during lightning storms or when unused for long periods of time.
 - Do not block any ventilation openings.
 - Unplug the appliance before cleaning.
 - Any repairs to the product must be carried out by a qualified electrical person only or the product must be disposed of. There are no user serviceable parts in this appliance.
 - If this appliance is used by a third party, please supply the user manual with it.
 - Do not misuse the cord. Never carry the appliance by the cord or pull to disconnect it from the outlet. Instead, grasp the plug and pull to disconnect.
 - Do not insert or allow foreign objects to enter the grill openings as this may cause damage to the appliance and/or injury to the user.
 - Be sure the unit is placed on stable surface when operating.
 - Turn OFF and unplug the unit before moving. Move the unit slowly and carefully.
 - Turn OFF, unplug and empty the water from the unit if you are not going to use it for a long time.
 - If using the warming function, take care as the internal surface temperatures can burn the skin.
 - No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling of the appliance.

Additional Safety Instructions

If using an extension cord:

- The technical specifications of the extension cord must match or exceed the technical specifications of this appliance.
- DO NOT allow the cord to hang over the edge of the work surface or to come into contact with stoves or other hot surfaces.
- If the cord or plugs are worn or damaged, do not use.
- Unplug from the power socket by grasping the plug body - DO NOT pull on the cord.

Product Specifications

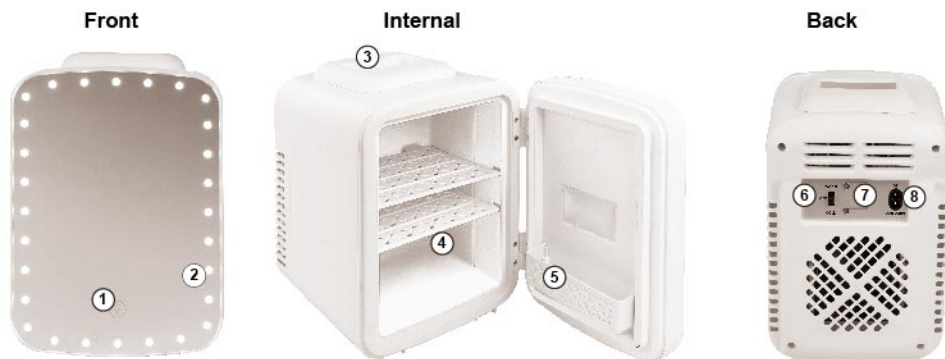

1 Touch Sensor: ON / OFF & Dimmer

2 LED Lights

3 Carry Handle Recess

4 Internal Shelving

5 Door Basket

6 Cold / Warm Selector Switch

7 Cooling & Warming Indicator Lights

8 Power Socket

Set Up

- Insert the small end of the plug into the power socket firmly pushing it in.

LED Light Operating Instructions


- LED light on the mirror door is adjusted by the touch light bulb icon, found on the lower part of the door.
- Gently touch the light bulb icon to select the light functions - low, medium, high and off.

Function

- Choose warm or cold function using the selector switch.
- When the switch is in the cold position the indicator light will be green.
- When the switch is in the warm position the indicator light will be red.
- Choose OFF to turn the appliance OFF.

Important

DO NOT switch the appliance from cold to warm without allowing the appliance to warm up naturally to room temperature.

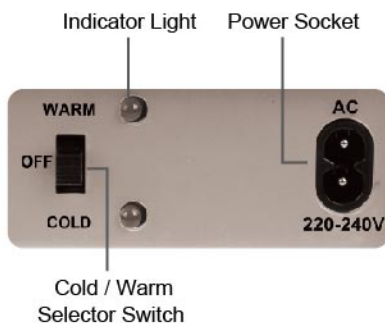

Open the door and let it sit for at least 30 minutes prior to changing the function.

DO NOT switch the appliance from warm to cold without first allowing the appliance to cold down to room temperature.

Open the door and let it sit for at least 30 minutes prior to changing the function.

Note: Depending on the room temperature and the items placed inside, it could take a few hours to reach the desired temperature for warming or colding.

Usage Recommendations

Note: This appliance is not suitable for food and drink.

Storing items at a colder temperature helps prevent most liquids and gels from drying out or thickening.

DO NOT overfill the cooler as this may prevent air circulation from creating an effective cooling or warming environment.

Recommended cosmetic products:

Cold Setting	Warm Setting
Nail Polish	Hair Removal Products
Nail Polish Remover	Wax
Perfume	Wax Strips
Lipstick	Oils
Cream	Facial Cloths
Lotion	
Pencils	

Note: The appliance is not limited to these products.

Cleaning and maintenance

Precautions for internal and external cleaning of colder

- Remove the power plug before cleaning.
- When cleaning, ensure that water does not enter the electrical areas.
- Use a soft towel dipped in warm water or neutral detergent to scrub the inside and outside of the cooler except the door seal.
- Clean the door seal, must use clean water, and wipe with a dry cloth.
- DO NOT scrub with cleaners containing abrasives (such as toothpaste), acids, chemical solvents (such as alcohol) or polishes.
- DO NOT rinse directly with water.
- Keep the cooler in a dry and well-ventilated place, away from warm sources and direct sunlight.

Troubleshooting

Issue	Possible Cause	Solution
The indicator light is OFF and the fan does not work.	The power plug is not inserted properly.	Make sure the power cord is firmly inserted into the power socket.
The fan is working but the indicator light is OFF.	The indicator light might be broken.	Need a qualified electrical person to repair.
The indicator light is on but the fan does not work.	The fan wiring may be faulty.	Need a qualified electrical person to inspect and repair.
Indicator light is working, fan is working but there is no warming or cooling.	Internal electrical parts may be faulty.	Need a qualified electrical person to inspect and repair.
Indicator light is working, fan is working but the warming and cooling is poor.	The ventilation grill may be blocked or the door may not be secured.	Move items or dust away from the ventilation grill. Close the door properly.

WARNING: Ensure that the appliance is in the OFF position and disconnected from the mains power supply before performing any troubleshooting.

Technical Data

Model No.: CC-LED

Voltage: 220-240V

Frequency: 50-60Hz

Power: Warm 45W / Cold 50W

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at [Kmart.com.au](https://www.kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.