

anko

110cm Tower Fan User Manual




Model No.: HEG LF-03
Rev 2

Note: The specifications and/or components of this appliance are subject to change without prior notice.

1	Safety Instructions	3
2	Components	5
3	Getting to know your Tower Fan	6
5	Instructions for Use	8
5.1	Remote Control	8
5.2	Fan Only	9
5.3	Fan + Swing (Oscillating)	10
5.4	Wind Modes	10
5.5	Auto Off Timer	11
6	Care and Cleaning	11
7	Storage	11
8	Guarantee	12

1 Safety Instructions

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Carefully read this instruction manual before using appliance. 
- Keep appliance out of reach of young children and pets.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Ensure children and babies do not play with plastic bags or any packaging materials.
- Do Not disassemble the appliance. There are no user serviceable parts inside.
- **VERY IMPORTANT:**
Ensure that appliance does not get wet (water splashes etc.).
Do not use appliance with wet hands.
Do not immerse appliance in water or other liquids or use near sinks, baths or showers.
- Always operate the appliance from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
- Position the power supply lead properly so that they will not be walked on or pinched by items placed on or against them.
- Use appliance only for its intended use. Appliance is intended for household use only and not for commercial or industrial use.
- Do not use appliance if it has been dropped or any part of appliance (including cord or plug) has been damaged.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The use of accessories not intended for use with this appliance may cause injuries to the user or damage to the appliance.
- Do not install the unit on other appliances, on uneven surfaces or where it could be subject to: heat sources (e.g., radiators or stoves), direct sunlight, excessive dust or mechanical vibrations.
- Appliance should not be used outdoors or exposed to weather.

- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- Do not hang or wall-mount the appliance.
- Do not operate appliance underneath or near flammable or combustible materials (e.g., curtains). Keep at least 300mm clearance around sides, back, front and top.
- Do not allow curtains, drapes or any other items to drape across the appliance or openings.
- Unplug this appliance during lightning storms or when unused for long periods of time.
- Do not block any ventilation openings.
- Never insert fingers or any other objects through the fan guard and ventilation openings.
- Do not use the product in oily or dirty areas (i.e., the kitchen, smoky place, etc), as the air vents may become blocked.
- Turn off and unplug before cleaning or storing.
- For cleaning, refer to section “Care and Cleaning” in this instruction manual.
- Any type of servicing, apart from ordinary cleaning, must be carried out by qualified electrical person only. There are no user serviceable parts in this appliance.
- If this appliance is used by a third party, please supply the instruction manual with it.
- Do not misuse the cord. Never carry the appliance by the cord or pull to disconnect it from the outlet. Instead, grasp the plug and pull to disconnect.
- Do not insert or allow foreign objects to enter the grille openings as this may cause damage to the appliance and/or injury to the user.
- No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling of appliance.

 
Additional Safety Instructions

If using an extension cord:

- The technical specifications of the extension cord must match or exceed the technical specifications of this appliance.
- Do not allow the cord to hang over the edge of the work surface or to come into contact with stoves or other hot surfaces.
- If the cord or plugs are worn or damaged, do not use.
- Unplug from the power socket by grasping the plug body - Do Not pull on the cord.

Read and Save These Instructions

2 Components

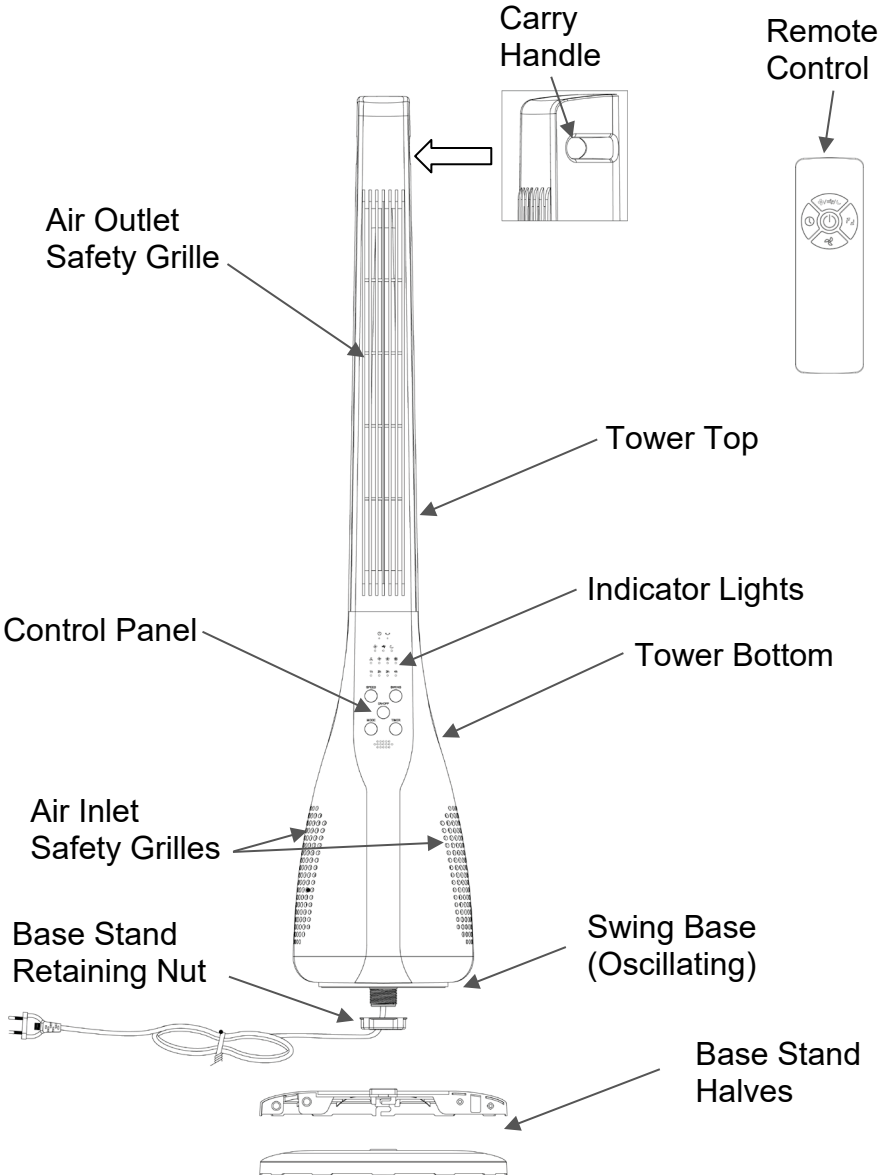

Note: 2 x AAA batteries for the Remote Control are not included.

3 Getting to know your Tower Fan

Congratulations on the purchase of your new Tower Fan.

Before first using your new Tower Fan, it is most important that you read and follow the instructions in this booklet, even if you feel you are familiar with this type of appliance.

Your attention is drawn particularly to the section "SAFETY INSTRUCTIONS".

Find a safe and convenient place to keep this booklet handy for future reference.

4 Before First Use

 
Before using, there is some assembly required as follows:

CAUTION: Ensure the product is fully assembled before plugging it into an electrical outlet.

The Tower Fan Top needs to be assembled to the Tower Fan Bottom and the Base Stand needs to be fitted to the bottom of the Tower Fan.


Start by assembling the Base to the bottom of the Tower Fan as follows:

1. Tip the lower section of the fan upside down and unscrew the plastic retaining nut from the threaded section by unscrewing anticlockwise.
2. Take the two Base halves and clip them together as shown, then screw on the retaining nut and tighten.

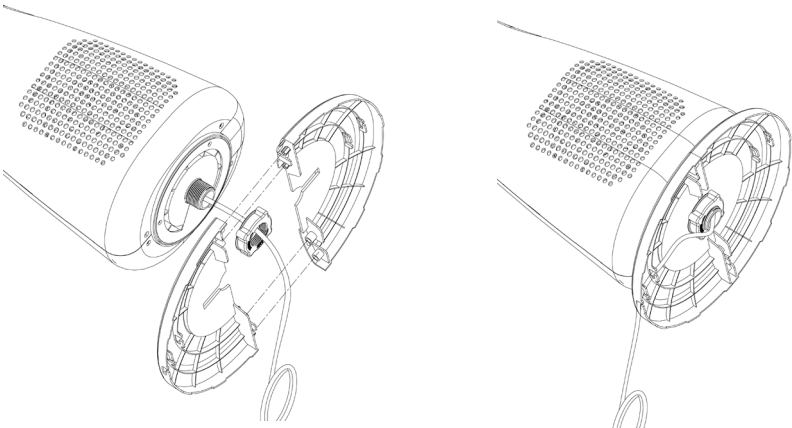

To Assemble the Top:

 
3. Place the Tower Fan Bottom Section on a flat level and stable surface.

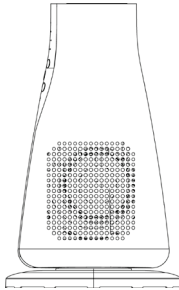

4. Take the Tower Fan Top Section and align all six hooks over the holes in the top of the Tower base and lower down.
5. With the Tower Top now sitting down on the Tower Bottom, slide the Tower Top forward until the front and back faces are flush with each other.

Note: you may need to use a small amount of force to get the two halves to align as the fitment is tight.

 Whilst bracing the Tower Fan Bottom front face, tap the Tower Fan Top with the palm of your hand until the two halves are fully assembled.

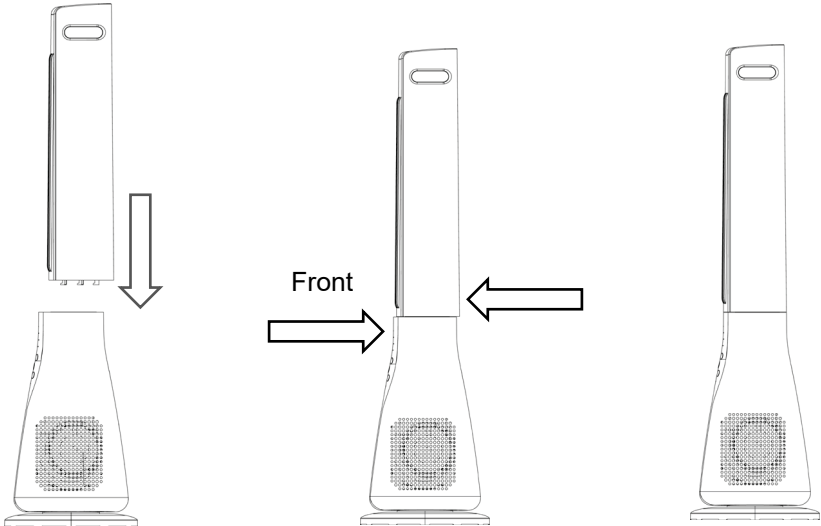

6. The Fan is now ready to use.

 
5 Instructions for Use

5.1 Remote Control

Note: 2 x AAA batteries are not included.


The Fan comes with a remote control for your convenience.

The functions on the remote control are the same as the buttons on the Tower Fan.



- To install the batteries, first remove the back of the remote control by pressing down on the Thumb Grip, then sliding the battery cover down and lift off as shown
- Insert the batteries inside the battery compartment matching polarity icons with those in the battery compartment and then refit the cover securely by sliding back on.

 Battery Type: "1.5V 2 x AAA"

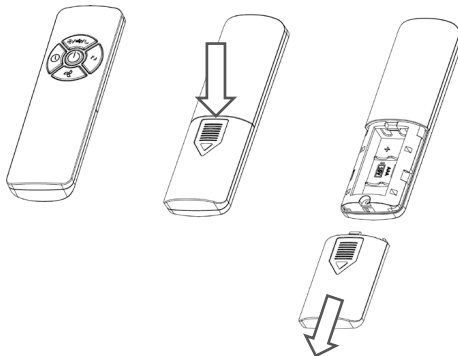


Do Not mix new and old batteries, or batteries of different types (e.g., Alkaline with Non-Alkaline) in the remote control.

To prevent corrosion, remove the batteries if the remote control will not be used over a lengthy period.

Point the Remote Control at the control panel as this is the location of the receiver, then press your desired button.

 
Important: Always operate the product on a flat, level, steady, and stable surface to avoid it overturning.

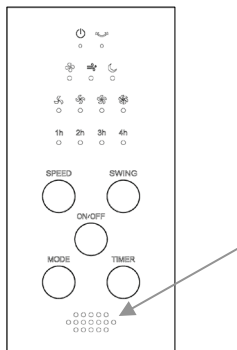




 5.2 Fan Only


 

 

- Insert the plug into a standard electrical power point and switch on at the power point.


The indicator light underneath the On/Off Symbol on the front panel will illuminate Red indicating Power is supplied to the unit.

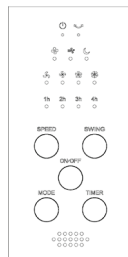- Press the On/Off button on the control panel, or the  button on the remote control to turn the fan on.
- The Fan will briefly start with “Medium” fan level and will then switch to “Low” Fan speed and “Normal” fan mode.





This is the default setting indicated by the “Low” Fan speed and “Normal” Fan mode lights illuminating underneath the Fan Speed Symbol  and the Normal Mode Symbol .

 
- To increase the fan speed, press the “Speed” button on the control panel, or the  button on the remote control and the fan will increase speed to the “Medium” setting.
- Press the speed button on the control panel, or the  button on the remote control again, and the fan will increase to “High” fan setting.
- Press the speed button on the control panel, or the  button on the remote control again, and the fan will increase to “MAX” fan setting.
- Press the speed button on the control panel, or the  button on the remote control again, and the speed will cycle back around to “Low” fan speed.
- To Turn Off, press the On/Off button on the control panel, or the  button on the remote control.

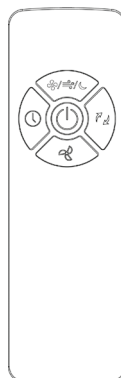

 
5.3 Fan + Swing (Oscillating)


- With the Fan already in use, press the “Swing” button on the control panel, or the  button on the remote control to start the Tower swinging (Oscillating) side to side.
- To turn Off the Swing, or to stop the fan swinging in a set position, press the “Swing” button on the control panel, or the  button on the remote control.


5.4 Wind Modes

- With the Fan already in use, press the “MODE” button on the control panel, or the  button on the remote control.
- Each press will cycle between, “Normal”, “Natural” and “Sleep” fan wind patterns.

Note:

 “Normal Mode” is indicated by the light underneath the  Symbol Illuminating.

“Natural Mode” is indicated by the light underneath the  Symbol Illuminating.

“Sleep Mode” is indicated by the light underneath the  Symbol Illuminating.

- Normal:** The “Normal” Default Mode is set when the unit is first turned on. The wind remains a constant flow.
- Natural:** The “Natural” variable speed wind mode automatically selects one of three variable speed wind speed patterns. Each Pattern produces a different wind pattern depending on the Speed Setting Selected.

These Wind Patterns simulate the variable speed wind that you would experience outdoors.


- Sleep:** The “Sleep” mode creates wind patterns that are the same as the Natural Mode wind patterns, however, when the fan is set to either Maximum, High or Medium Speed, the pattern will drop a speed level after approximately 30 minutes.
 - Low speed: low natural wind.
 - Medium speed: medium natural wind for 30minutes then low natural wind.
 - High speed: high natural wind for 30 minutes then medium natural wind for 30 minutes then low natural wind.
 - Max Speed: max natural wind for 30 minutes then high natural wind for 30 minutes then medium natural wind for 30 minutes then low natural wind.

For Example: If Maximum Fan Speed and Sleep Mode is selected, the maximum fan speed will run for 30 minutes in “Natural Mode”, then drop down to high speed for 30 minutes in “Natural Mode”, then drop down to medium speed for 30 minutes in “Natural Mode” and will then drop down to low speed in “Natural Mode” until you turn off or change settings.


Note: To have the fan automatically turn off at your desired time in this mode, use the “Timer” function to select the auto off timer.

5.5 Auto Off Timer



Use this power-saving feature if you want the appliance to turn off automatically.

To select the Off time, press the “TIMER” button on the control panel, or the  button on the remote control once.

It will advance to 1h as indicated by the indicator lights on the control panel. The Fan will turn off after approximately 1 hour.

- Each consecutive press of the “TIMER” button on the control panel, or the  button on the remote control will advance the timer at 1 hour increments until it reaches a maximum time of 10h.

The time set will be indicated by the sum of the lights which are illuminated. i.e., if the 4h + 3h + 1h lights are illuminated, this adds up to be 8 hours. The Fan will turn off after approximately 8 hours.

- To turn the timer off, or to reset to a new time, continue to press the “TIMER” button on the control panel, or the  button on the remote control until it cycles back around where no time lights are illuminated.
- Press the “ON/OFF” button on the control panel, or the  button on the remote control to turn the appliance off.

6 Care and Cleaning

- Turn off and unplug the unit prior to cleaning.
- Clean the body assembly with a clean, damp cloth and wipe dry.
- Never spray with liquids or submerge the Fan in water or any other liquid.
- Do not use flammable liquids, chemicals, abrasive creams, steel wool or scouring pads for cleaning.

7 Storage

- Switch off and unplug the unit.
- The Power Cord can be coiled and stored in the base of the Tower fan. Do not kink or pull the cable tight.
- Store in a cool dry well-ventilated area.

8 Guarantee

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

IMPORTANT!

For all technical queries or difficulties in operating the product and for spare parts, contact H.E. Group customer service 1300 105 888 (Australia) and 09 8870 447 (New Zealand).