
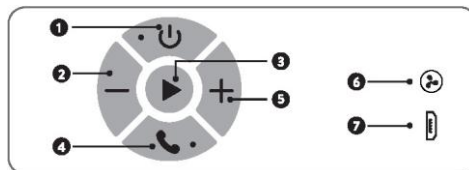


anko

43190379 FAN WITH BLUETOOTH® SPEAKER

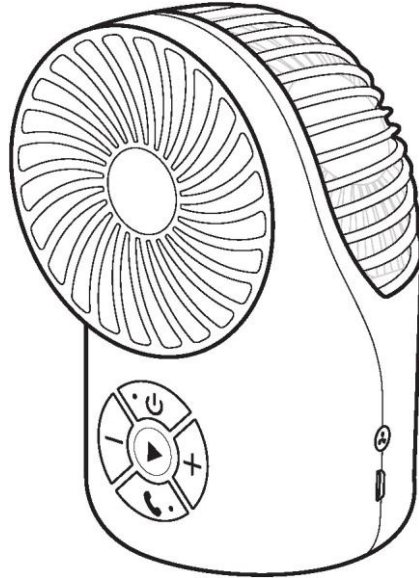

1. On / Off button
2. Previous song / Turn down volume button.
3. Next song/Turn up volume button
4. Hands-free button
5. Play/Pause button
6. Fan On/Off Switch
7. DC charging port

Specifications:

Bluetooth Version: 5.0

Bluetooth Range: 10M

Speaker: 4Q/3W

Input: 5V / 500mA

Battery Capacity: 1200mAh



Item Size: 80(Diameter) x 135(Height) MM

Charging Time: 1-2H

Play Time: 2-4H

Frequency Range of Speaker: 20Hz -20KHz

To power on/ power off:

Turn on the speaker by long pressing the  button, you will hear a remind sound. Turn off the speaker by long pressing the  button again.

Bluetooth Pairing:

1. After pressing the On/Off button, it will flash blue to be ready for pairing. Before using the Bluetooth Speaker, you must pair it with a Bluetooth enabled device.
2. Search " KM43190379 " pairing name from your Bluetooth menu to pair with your device.
3. Once they are paired successfully, you will hear a confirmation sound.
4. The speaker will automatically connect next time.


Volume Up / Down:


Hold the button (-/+) to adjust the volume up or down.

Music track Next/ Previous:


Short press the button (-/+) to go next or previous track.

Phone Calls:

When there is an incoming call, press  call button to pick up /end the phone call.

Hold  call button to reject the phone call. Press the call button twice to redial the last phone number.

Pause / play:

Short press the button  to stop music or play music.

Fan Function

1. Press and hold the Fan Switch button for 2 seconds to turn on the fan, it will go to Minimum Low Speed Wind automatically.
2. Press once to get the Medium Speed.
3. Press once again to get the Max Speed.
4. Hold the Fan Switch 2 seconds to turn off the Fan against any above speed mode

Charging:

Insert the charging cable into the Micro USB jack, and connect the USB to a PC or USB adapter to charge the speaker Fan, Red light stays on when charging. Once fully charged, the red light will go off.

WARNING :

1. Never leave the product exposed to high temperatures and direct sunlight.
2. In case of overheating, smoke, or unpleasant smell in the process of charging, unplug your device immediately to prevent fire hazard.
3. The built-in rechargeable battery is not replaceable.
4. CAUTION: Risk of explosion if the battery is replaced by an incorrect type.
 - high or low extreme temperatures that a battery can be subjected to during use, storage or Transportation; and low air pressure at high altitude.
 - replacement of a battery with an incorrect type that can defeat a safeguard
 - disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
 - leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;
 - a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
5. To prevent the products from further damages, it is prohibited to dismantle the broken device without permit.
6. Please put the product in a place where children cannot reach.
7. Read this manual carefully before using this device and keep it for future reference.