

A5 210x148mm 150g铜版纸彩色印刷, 三折页

anko

LED Neon Light

Keycode: 43190423

Instruction manual



Instructions:

- Please read this product manual carefully.
- Do not touch the power supply or power cord with wet hands.
- Only use the included cable with the light.
- Use only a microfiber and dry cloth for cleaning the product.
- Operate carefully to not cause any damage by dropping or physical shocking it.
- Do not leave the product in excessive heat, high temperatures can cause the product to malfunction.
- The light source of this luminaire is not replaceable.

- When the light source reaches its end of life, the whole luminaire shall be replaced.
- The external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed.
- For indoor use only.


Packing list:

LED neon strip light (3M)

Five mounting clip

How to use:

1. Fully unroll the neon light before use. Use the mounting clip to fix the neon light on wood surface. Ensure there is no wire or cable under the mounting area.

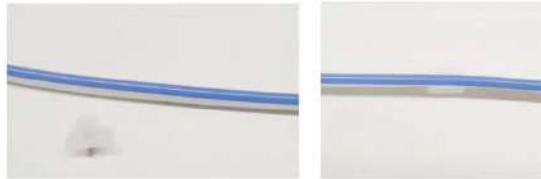

2. Insert the plug into the power supply.



3. Press the button to switch on or change the light modes.

Controller function:

A. Long press to turn on/off the neon strip light.

B. Short press the controller button to change the light mode.

There are three light modes: constant/ light wave/flash.

