

anko

Instruction manual

Bluetooth® Speaker

Keycode: 43190485



Safety Instructions:

Please read the instruction manual before using this device and follow all the safety instructions to avoid damage caused by improper use.

1. Keep the instruction manual for future reference. Should this appliance be given to a third party, then this instruction manual must also be handed over.
2. Use this appliance solely for its intended purpose.
3. This appliance is intended for household use only.
4. The manufacturer assumes no liability for possible damages that may have been caused by incorrect usage or mishandling of the appliance.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Children should be supervised to ensure that they don't play with the appliance.
7. Before connecting the appliance to the mains supply, please check that the type of power and mains voltage match the information provided on the type plate.
8. Keep the appliance away from all hot surfaces and naked flames. Always put the appliance on a level, stable, clean, dry surface. Protect the appliance from extreme heat and cold, dust, direct sunlight, humidity and drops or jets of water.
9. The appliance is only suitable for use in temperate latitudes. Do not use it in the tropics climate or in humid climatic conditions.
10. Do not use the appliance if it is damaged. To avoid hazards, defective components must only be replaced by the manufacturer, his customer service or similar qualified persons.
11. Do not open the housing under any circumstances. Do not introduce any objects into the interior of the housing.
12. Do not immerse the appliance, power cord or power plug in water or in other liquids.
13. Do not place the appliance in the direct vicinity of liquids - e.g. bathtubs and sinks, in a damp basement or close to a swimming pool.
14. Do not charge the speaker in wet condition. Close the rubber cover when using the speaker.
15. Ice bucket for use with chilling only.

Package Include:

Bluetooth® speaker x 1
USB Charging cable x 1
AUX in cable x 1
User manual x 1

Specification

Bluetooth version 5.0
Speaker: 5W
Play time: up to 5 hours
Charge Voltage: DC5V 1A
Built-In Rechargeable Battery: 3.7V

Product Overview



Power / Mode button	<ol style="list-style-type: none"> 1. Long press button to turn/off speaker. 2. Short press button to switch different mode: Bluetooth mode-FM mode-Line in mode
Previous/-	<ol style="list-style-type: none"> 1. Short Press to play the previous song or decrease FM channel 2. Double click to turn off TWS function 3. Long press to decrease volume.
Play/Pause	<ol style="list-style-type: none"> 1. Short Press to play / pause song/answer call. 2. Double click to call back. 3. Long press to reject the call.
Next/+	<ol style="list-style-type: none"> 1. Short Press to play the next song or Increase FM channel. 2. Double click to turn on TWS function 2. Long press to increase volume.
Light Mode	Short press to change different light modes.
AUX interface	AUX-IN
USB interface	USB disk
TF card slot	Micro SD card slot
Charging port	5V 1A

Bluetooth connection

If you have used Bluetooth connection before, the system will start searching for the device last connected. When the device is found, it will re-connect automatically.

If you want to switch between devices, you have to turn off Bluetooth on the device last connected.

Bluetooth connection

1. Long press the power button 2-3 seconds to turn on the speaker.
2. Turn on Bluetooth on your smart phone. Refer to its user manual for instructions on pairing and connecting Bluetooth devices.
3. Select "KM43190485" from the Bluetooth device list. There will have a notice sound when connected successfully.

True Wireless connection

1. Turn off the Bluetooth connection before Paring the
 2. Long press power button to turn on 2 speakers, keep stay on Bluetooth mode.
 3. Double click Next/+ button of either speaker to turn on TWS function, there will have notice ring if connected successfully.
 4. Turn on your smartphone, connect with "KM43190485" from the Bluetooth device list. Then open your music app, play music on your device. 2 speakers will play simultaneously.
 5. Double click Previous/- button of either speaker to turn off TWS function
- ** True wireless speaker function only work with the same model speaker. Purchase a same model speaker to enjoy the True Wireless function.

Micro SD or USB Operation

Playing mp3 files from Micro SD or USB Device

1. Insert the USB drive into USB port or Micro SD card into TF Slot.
2. Play, pause or skip a selected track using the controls on the speaker.

NOTE: a. Support of USB drive 32Gb max
b. USB port does not support USB charging for external device

FM Function

1. Connect the USB-C cable to the USB-C port as a FM antenna.
2. Short press the power button to change to FM mode.
3. Short press Previous/- or Next/+ button search FM channel

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at [Kmart.com.au](https://www.kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.