

anko

30cm Box Fan User Manual




Model No.: YS-1202B
Rev 1

Note: The specifications and/or components of this appliance are subject to change without prior notice.

1	Safety Instructions	3
2	Components	5
3	Instructions for Use	6
3.1	Fan / Fan Speed	6
3.2	Front Louvre	6
3.3	Auto-Off Timer	6
4	Care and Cleaning	7
5	Storage	7
6	Guarantee	8

1 Safety Instructions

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Carefully read this instruction manual before using the appliance. 
- Keep the appliance out of reach of young children and pets.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Ensure children and babies do not play with plastic bags or any packaging materials.
- Do Not disassemble the appliance. There are no user-serviceable parts inside.
- **VERY IMPORTANT:**
Ensure that the appliance does not get wet (water splashes etc.).
Do not use the appliance with wet hands.
Do not immerse the appliance in water or other liquids or use near sinks, baths or showers.
- Always operate the appliance from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
- Position the power supply lead properly so that they will not be walked on or pinched by items placed on or against them.
- Use appliance only for its intended use. The appliance is intended for household use only and not for commercial or industrial use.
- Do not use the appliance if it has been dropped or any part of the appliance (including cord or plug) has been damaged.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The use of accessories not intended for use with this appliance may cause injuries to the user or damage to the appliance.
- Do not install the unit on other appliances, on uneven surfaces or where it could be subject to heat sources (e.g., radiators or stoves), direct sunlight, excessive dust or mechanical vibrations.
- The appliance should not be used outdoors.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.

- Do not hang or wall-mount the appliance.
- Do not operate the appliance underneath or near flammable or combustible materials (e.g., curtains). Keep at least 300mm clearance around the sides, back, front and top.
- Do not allow curtains, drapes or any other items to drape across the appliance or openings.
- Unplug this appliance during lightning storms or when unused for long periods of time.
- Do not block any ventilation openings.
- Never insert fingers or any other objects through the fan guard and ventilation openings.
- Do not use the product in oily or dirty areas (i.e., the kitchen, smoky place, etc), as the air vents may become blocked.
- Turn off and unplug before cleaning or storing.
- For cleaning, refer to section “Care and Cleaning” in this instruction manual.
- Any type of servicing, apart from ordinary cleaning, must be carried out by a qualified electrical person only. There are no user-serviceable parts in this appliance.
- If this appliance is used by a third party, please supply the instruction manual with it.
- Do not misuse the cord. Never carry the appliance by the cord or pull to disconnect it from the outlet. Instead, grasp the plug and pull to disconnect.
- Do not insert or allow foreign objects to enter the grille openings as this may cause damage to the appliance and/or injury to the user.
- No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling of the appliance.


Additional Safety Instructions

If using an extension cord:

- The technical specifications of the extension cord must match or exceed the technical specifications of this appliance.
- Do not allow the cord to hang over the edge of the work surface or to come into contact with stoves or other hot surfaces.
- If the cord or plug are worn or damaged, do not use.
- Unplug from the power socket by grasping the plug body - Do Not pull on the cord.

Read and Save These Instructions

2 Components

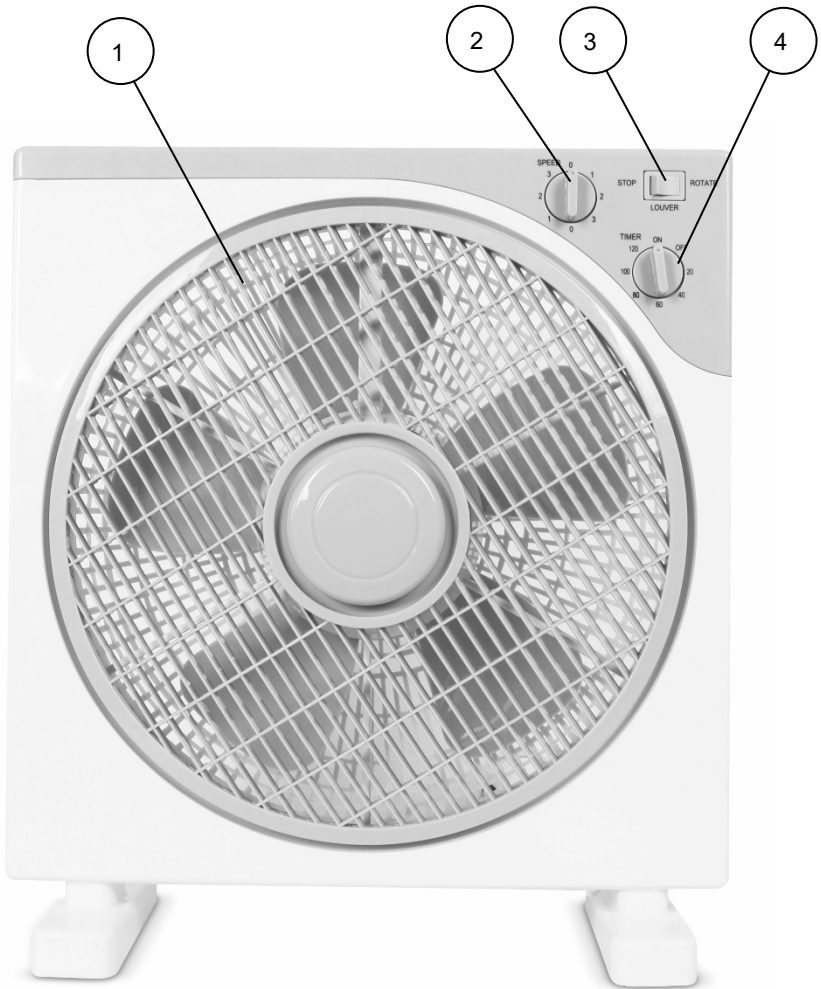

1	Rotary Louvre / Air Outlet	3	Rotary Louvre On / Off Switch
2	Speed Control Dial	4	Auto-Off Timer

3 Instructions for Use

3.1 Fan / Fan Speed

- Unravel the power cord and insert the plug into a standard electrical power point and switch it on at the power point.
- Ensuring the Timer Knob is set to Position “ON”, rotate the Speed knob on the control panel to either position “1, 2 or 3” to turn the fan on.

Note:

Setting 1 is Low Fan Speed

Setting 2 is Med Fan Speed

Setting 3 is High Fan Speed

Setting 0 is Fan Off

3.2 Front Louvre

- With the fan already in use, toggle the “Louvre” switch to position “Rotate” and the front louvre will start to rotate.
- Toggle the switch back to “Stop” at your desired position, or to simply stop the louvre from rotating in any position.

3.3 Auto-Off Timer

Use this power-saving feature if you want the appliance to turn off automatically.

- To select the desired Auto Off time, rotate the “Timer” knob around to the time required, from a couple of minutes around to 120 minutes. **Note:** these times are approximate.
- The timer will start to count down and will turn off when the knob dial reached the “Off” position.

Note: The Fan knob must be set to position 1, 2 or 3 for the fan to work.

- To turn the timer off, manually rotate the Timer Knob back around to the “Off” position.

4 Care and Cleaning

- Turn off and unplug the unit prior to cleaning or any maintenance.
- Clean the body with a clean, damp cloth and wipe dry.
- Never spray with liquids or submerge the Fan in water or any other liquid.
- Do not use flammable liquids, chemicals, abrasive creams, steel wool or scouring pads for cleaning.

5 Storage

- Switch off and unplug the unit.
- Coil the Power Cord loosely and place it at the base of the fan. Do not kink or pull the cable tight.
- Store in a cool dry well-ventilated area.

6 Guarantee

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

IMPORTANT!

For all technical queries or difficulties in operating the product and for spare parts, contact H.E. Group customer service 1300 105 888 (Australia) and 09 8870 447 (New Zealand).