

Disney FROZEN

KID'S DOUBLE MIC KARAOKE SPEAKER



INSTRUCTION MANUAL

Please read these instructions carefully and retain for future reference



DY-0202-FRA

HIGHLIGHTS

- Bluetooth, USB & Aux Inputs
- 2 x Microphones
- Recording Function
- Voice Changer Effects
- LED Lights
- Built-in Sound Effects

PACKAGE CONTENTS



- Frozen 0202 Karaoke Speaker Unit
- USB Charging Cable
- Carry Strap
- Aux Cable
- 2 x Wired Microphones
- Instruction Manual

SPECIFICATIONS

- Bluetooth®:
 - Version : 5.0
 - Chipset : AC 6926A
 - Profiles : SSP
 - Range : 10 m / 33 ft
- Microphone:
 - Type : Condenser
 - Size : 3.5 mm
- Speaker:
 - Impedance : 2 Ω
 - Sensitivity : 86 dB
 - Driver Size : 101.5 mm
 - Signal to Noise Ratio : 65 dB

- Battery Capacity : 3.7 V, 2 400 mAh
- Charge Time : 6 Hours
- Charge Input : 5 V DC, 1 A
- Max Size for USB Input : 32 GB
- Frequency Response : 90 Hz – 20 kHz
- Playtime : 2 – 4 Hours
- Total RMS Power Output : 6 W RMS
- Weight : 1.3 kg
- Size : 330 (W) x 180 (H) x 340 (L) mm

IDENTIFYING PARTS

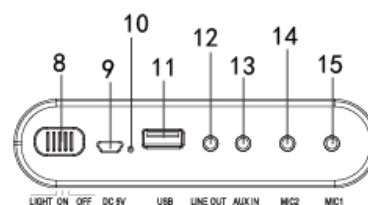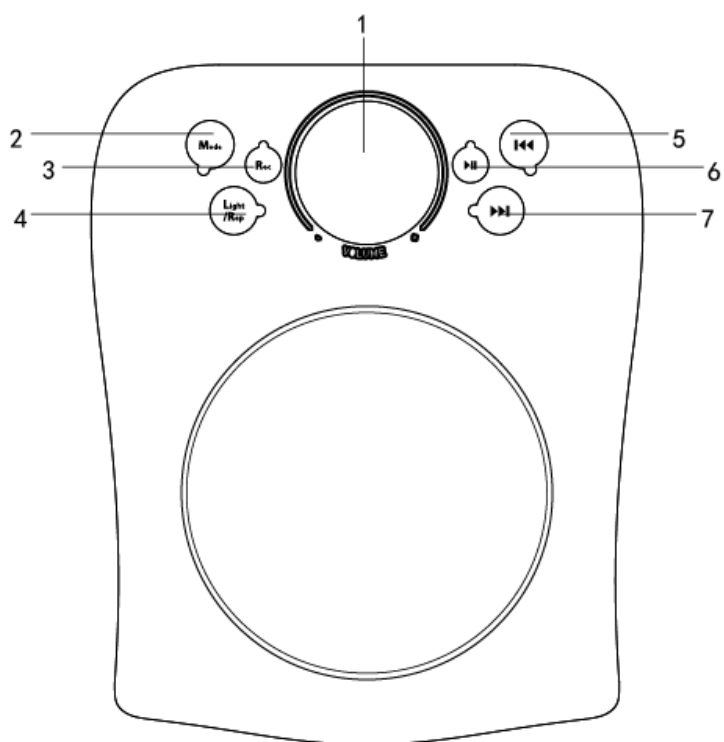

1. Master Volume
2. Mode / ECHO
3. Record
4. Repeat
5. Previous Track
6. Play / Pause
7. Next Track
8. Power ON / OFF
9. Micro-USB Charging Port
10. LED Charge Indicator
11. USB Input
12. Aux-Out Port
13. Aux-In Port
14. 3.5 mm Mic-In 2 Port
15. 3.5 mm Mic-In 1 Port

INSTRUCTIONS FOR USE

CHARGING THE SPEAKER UNIT

- Please ensure that the battery is fully charged before using the Frozen 0202 Karaoke Speaker for the first time.
- Recommended charge time before first use only is at least 12 hours; thereafter the unit requires 8 hours to be charged.
- When the battery level is low, the LED Light Indicator will start to flash and the unit will go into a self-protection mode, thus dropping the volume to 50%.
- Connect the provided USB charge cable to the charging slot on the Frozen 0202 Karaoke Speaker Unit. Connect the other end of the USB charger to a 5 V USB wall charger or available USB port on your computer.

Note:

- Please do not charge the Frozen 0202 Karaoke Speaker Unit for more than 8 hours.

SWITCHING THE SPEAKER ON & OFF

Switching on / off the Karaoke speaker: To switch on / off the speaker, slide the Power / Light Switch to the ON / OFF position.

PAIRING WITH OTHER BLUETOOTH® DEVICES

Your Frozen Bluetooth Speaker Unit must be paired to a Bluetooth® device before they can be used in Bluetooth® Mode.

1. Switch the power on, the Frozen Bluetooth Speaker Unit enter a Bluetooth mode automatically.
2. Activate the Bluetooth® on your playback device and search for “Frozen”. Select “Frozen” from the device’s list to connect. You will hear a connection tone after the Frozen Bluetooth Speaker Unit has been paired successfully.
3. Should you be asked for a password, please enter the Bluetooth Default Password of 0000.
4. The ring light will continue to flash after the Frozen Bluetooth Speaker Unit has paired successfully.
5. You can now playback audio through the Bluetooth Speaker.
6. Music tracks can be selected either on the Bluetooth Speaker or on your playback device (smartphone, computer, tablet, etc).

Note:

- It is only necessary to pair your Frozen Bluetooth Speaker Unit once with each device.

GENERAL CONTROLS

FUNCTION	OPERATION
Switch ON / OFF	Slide the Power / Light Switch to ON / OFF
Switch between Bluetooth, USB and Aux Modes	Press the Mode Button
Increase / Decrease Volume	Turn the Volume Control Knob right or left
Turn Off Light Effects	Slide the Power / Light Switch to "LIGHT"
Play / Pause Music	Press the Play / Pause Button
Repeat Track	Press the "Rep" Button
Switch Between Recorded Sounds	Push Next Track or Previous Track
Play Previous / Next Track	Press the Previous / Next Track Button
Record / Stop Recording Sound	Press "Rec" Button to start recording. To stop recording Press "Rec" Button.
Control ECHO Function	Press and hold the Mode Button
Connect an Additional Speaker	Insert an Aux Cable into the Aux-Out Port. Connect the other end of the Aux Cable into the Speaker.

Note:

Aux Mode: To use the Aux mode, simply switch the Karaoke speaker on and insert the Aux Cable into the Aux Input on the speaker, and the other end of the audio cable to the playback device's output / line-out.


In Aux mode, Increase / Decrease Volume, Play / Pause Music, Repeat Track, and Play Previous / Next Track can also be controlled from your playback device.

Voice Recording: This Frozen Double Mic Karaoke Speaker Unit can **ONLY** record voice, not voice and music simultaneously. Voice recording functionality operates on USB mode and the recording is saved to the USB drive. Once you have created your recording, it will repeat automatically.

Repeat Track: The repeat song functionality is operational in USB mode. To activate, short-press the "Rep" button, and the karaoke machine will emit a tone to indicate the Rep function has been activated. To deactivate, press the "rep" button again.

WIRED MIC FUNCTION



1.  ON / OFF Button: To turn the Mic On or Off, slide the ON / OFF Switch to ON or OFF.
- 2 / 3. This function allows you to play different sound effects.
4. Voice Changer Button: This function allows you to change the sound of your voice.

SAFETY PRECAUTIONS



- This product is not intended for commercial use and has been tested for household use only.

- To reduce the risk of fire or electric shock, never use your Frozen Double Mic Karaoke Speaker Unit near water or in areas where it can come into contact with water. Never handle the Frozen Double Mic Karaoke Speaker Unit if it has been dropped into water or any other liquid. If the product comes into contact with water while switched on, this poses a safety hazard.
- Always make sure your hands are dry before touching the plug or power connections.
- **CAUTION:** Do not remove the panel covers by unscrewing them. To reduce the risk of electric shock, do not remove the cover. No user-serviceable parts inside. Refer servicing to a qualified service personnel.
- **DO NOT** use any accessories, plugs or power cables not recommended by this document, or of a lesser Amperage or Voltage.
- **DO NOT** operate the product with a damaged cord or plug, or after it has malfunctioned, it has been dropped or damaged in any way.
- **WARNING:** Always keep optional accessories, small parts and packaging out of the reach of babies and small children, as these items may pose a choking hazard.
- **DO NOT** overcharge your Frozen Double Mic Karaoke Speaker Unit; doing so may shorten the lifespan of the built-in batteries and could also cause your device to overheat.
- **CAUTION:** Do not disassemble the battery or dispose of it in a fire.
- **CAUTION:** Should your battery show signs of overheating, smoke or fumes being emitted during charging, remove the charging cable immediately.

CLEANING AND CARE INSTRUCTIONS – GENERAL

- **Before Cleaning:** Ensure that your Frozen Double Mic Karaoke Speaker Unit is turned off before cleaning or maintaining your device.

Cleaning: Wipe down the surface of your Frozen Double Mic Karaoke Speaker Unit using a soft, slightly damp cloth.

- Do not use any harsh or abrasive cleaning chemicals or materials on your Frozen Double Mic Karaoke Speaker Unit; doing so may damage or scratch the surface finish.
- Do not expose your Frozen Double Mic Karaoke Speaker Unit to direct sunlight or high temperatures for extended periods of time.
- Do not store in temperatures over 60°C.
- Do not expose the battery to excessive heat such as sunshine, fire or the like. Store in a cool, dry place.


ENVIRONMENTALLY FRIENDLY DISPOSAL

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH THE EUROPEAN UNION DIRECTIVE ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT.



At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority designated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

- Never dispose of used electronics with ordinary solid waste since they contain toxic substances.
- Always dispose of used electronics in accordance with the prevailing community regulations that apply to the disposal of electronics. If there are no regulations concerning electronics disposal, please dispose of the device in a waste bin for electronic devices.

 WARNING	Lithium-ion Batteries and/or products that contain Lithium-ion Batteries can expose you to chemicals including cobalt lithium nickel oxide and nickel, which are known to the State of California to cause cancer and birth defects or other reproductive harm.. For more information, go to www.P65Warnings.ca.gov .
---	---



DISCLAIMER

All product and company names are trademarks™ or registered® trademarks of their respective holders. Use of them does not imply any affiliation with or endorsement by them.