

Size: 169x200mm

DESKTOP DUDE INSTRUCTION MANUAL



This is a 40cm miniature desktop dude with fan in base to make him dance, wiggle, and shake.

PLEASE NOTE:

This product can be powered by a 9-volt battery or by a specific AC adapter (Battery or AC adapter not included).

1. A rechargeable Ni-MH 9V battery is recommended for best performance and more cost-effective.
2. If using an Alkaline battery, it must be NEW and preferably a PREMIUM brand.
3. **DO NOT** use a Carbon-Zinc battery (often labeled "Heavy-Duty"), this type of battery can not produce enough power to operate the motor.
4. To get the most life out of the battery, use in intervals no greater than 5 to 10 minutes, operating in this manner will yield approximately 45 minutes of use.
5. If using an AC adapter, it must follow the specifications:
Input: AC100-240V (50-60Hz)
Output: DC 9V (1A or 2A)
Adaptor must be connected indoors away from weather.



PLEASE NOTE:

1. If your desktop dude begins to get stuck in a downward position, it is time to replace the battery or recharge if using a rechargeable battery.
2. Regularly examined for damage to the supply enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.
3. The desktop dude should not to be connected to more than the recommended number of adapter or power.
4. Gently spot clean with a damp cloth and avoid excessive exposure to water.