 


WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES SHOULD BE CHARGED UNDER ADULT SUPERVISION. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.



△WARNING: CHOKING HAZARD

SMALL PARTS. NOT SUITABLE FOR CHILDREN UNDER 3 YEARS.

WARNING: ADULT ASSISTANCE IS REQURIED. PLEASE FOLLOW THE INSTRUCTION MANUAL TO SECURE THE DOME AND PLUG THE TOP HOLE. CHILDREN CAN SUFFOCATE IF THE BEADS ARE SWALLOWED OR INHALED. PLEASE KEEP THE BEADS AWAY FROM CHILDREN BEFORE SECURING THE TOY.

ADULT SUPERVISION IS RECOMMENDED. PRODUCT MAY VARY FROM THE IMAGES SHOWN. PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE.















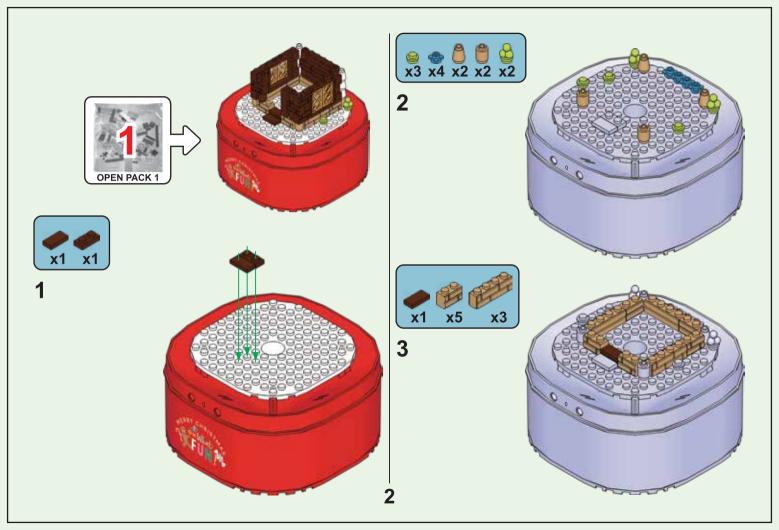


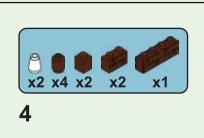




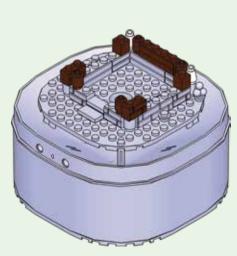


 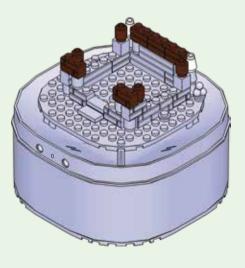


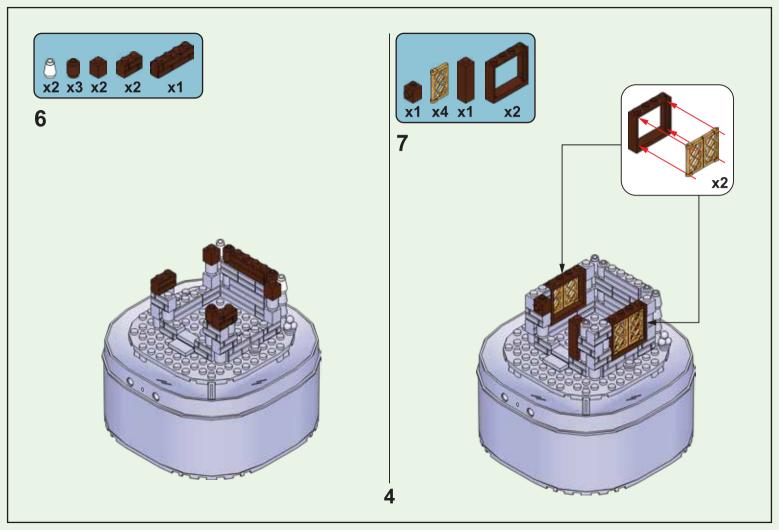


 


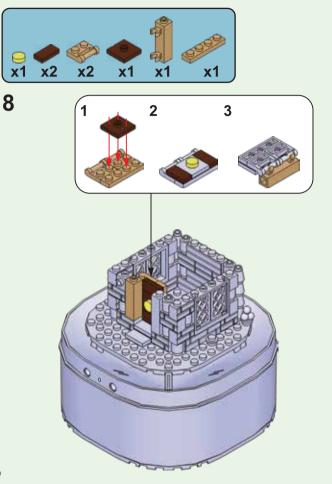


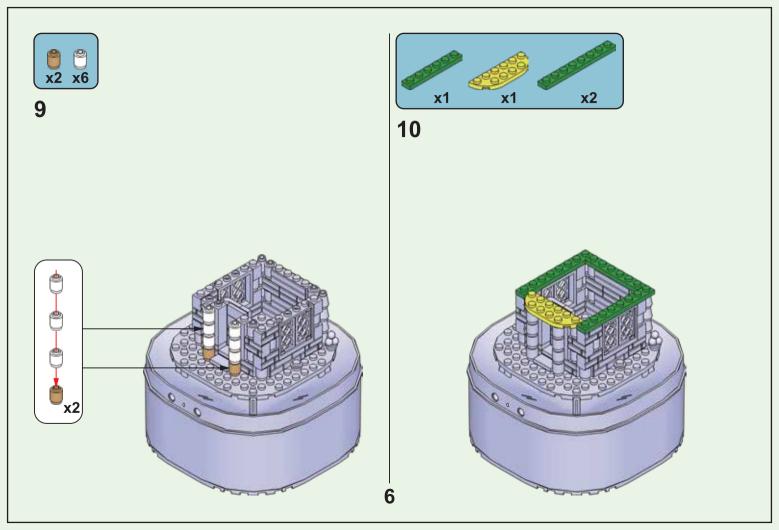





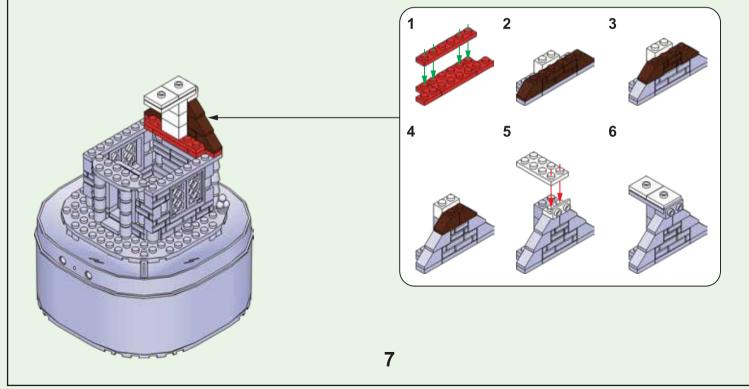





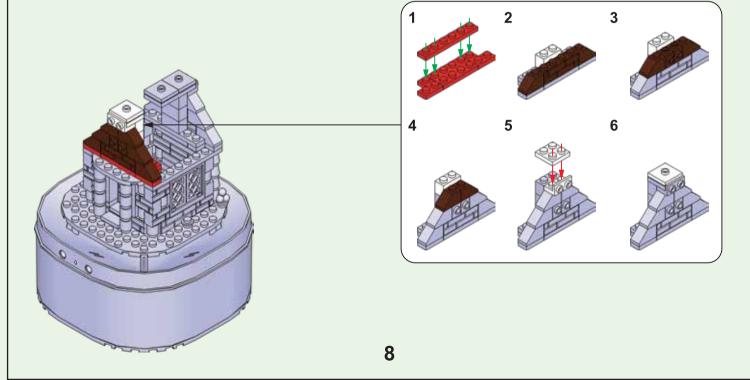


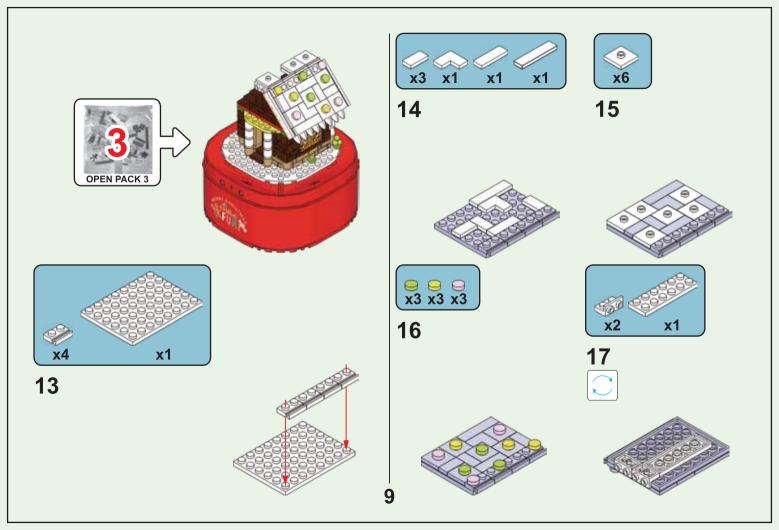


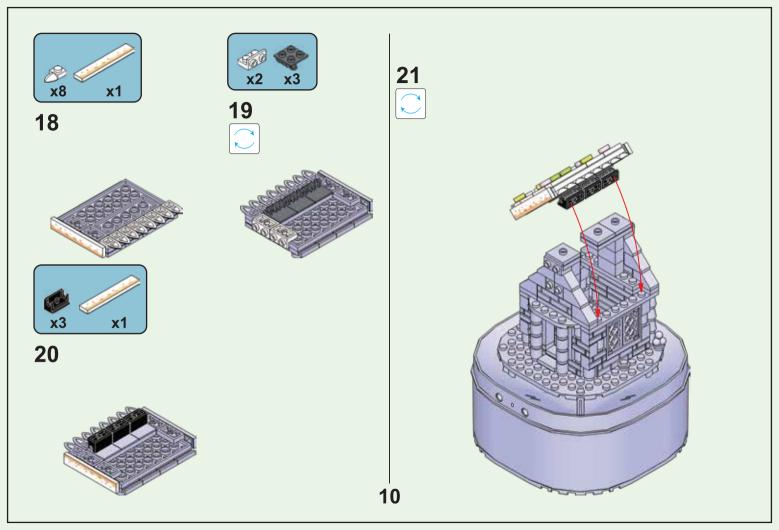

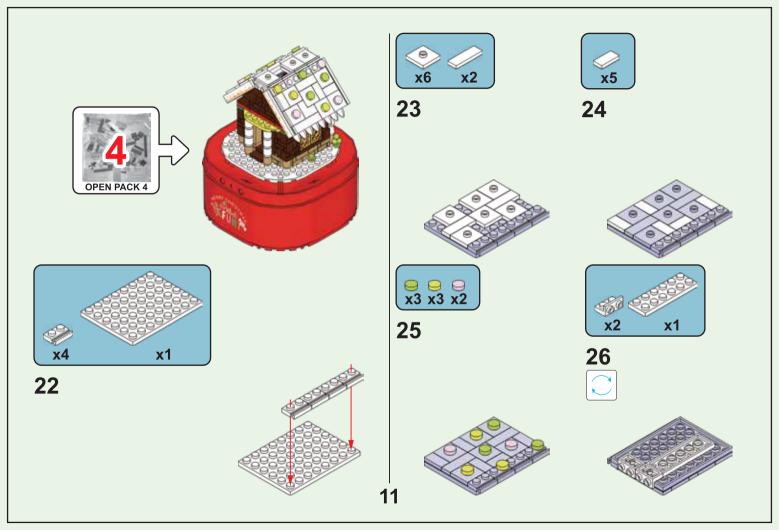


 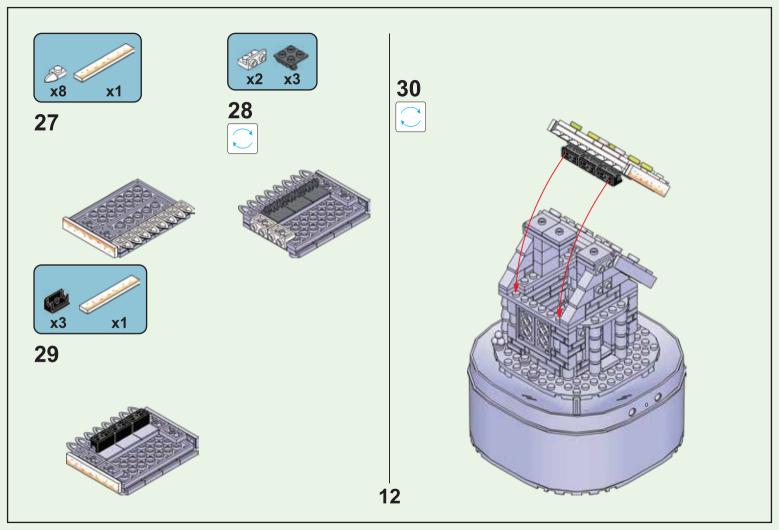


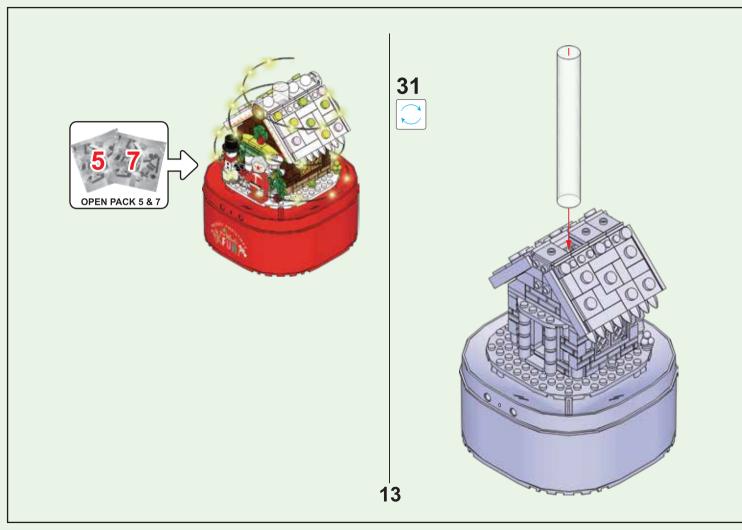


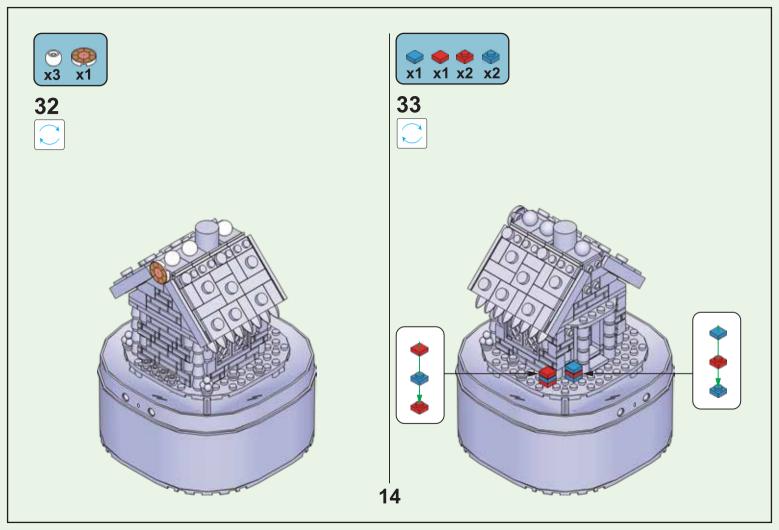





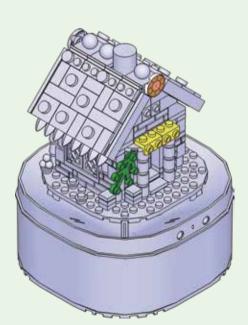





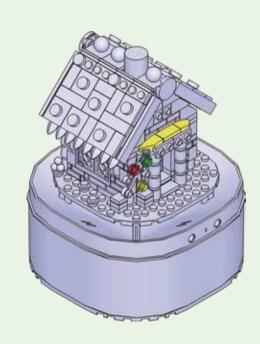


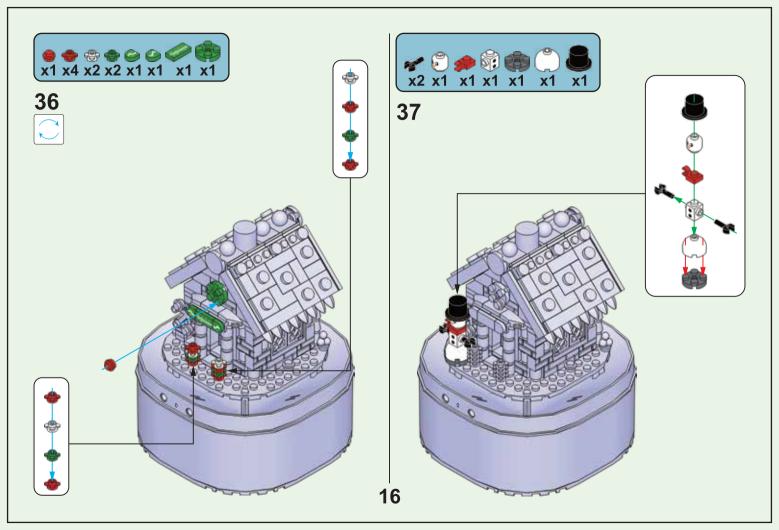

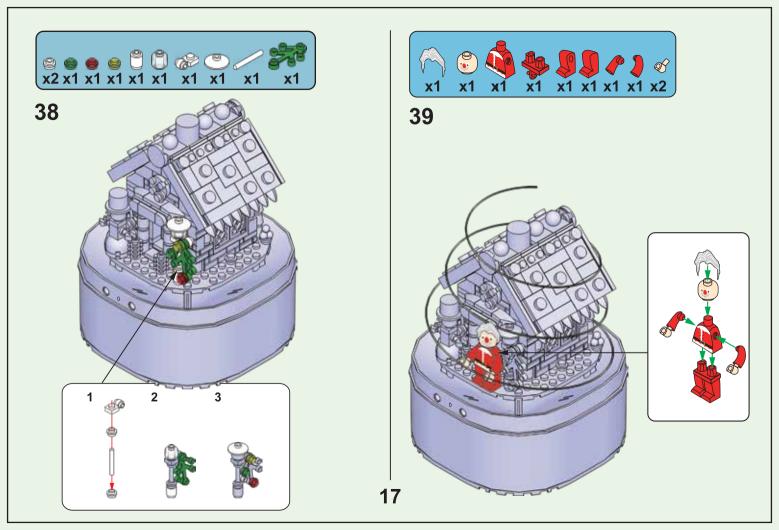

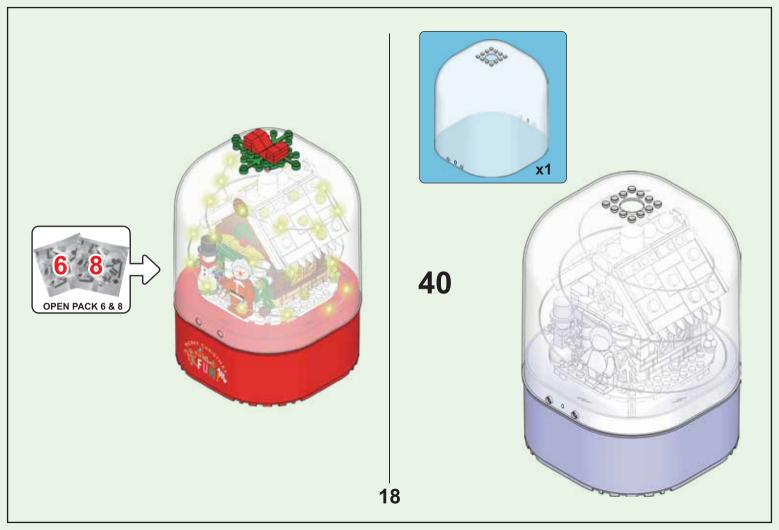

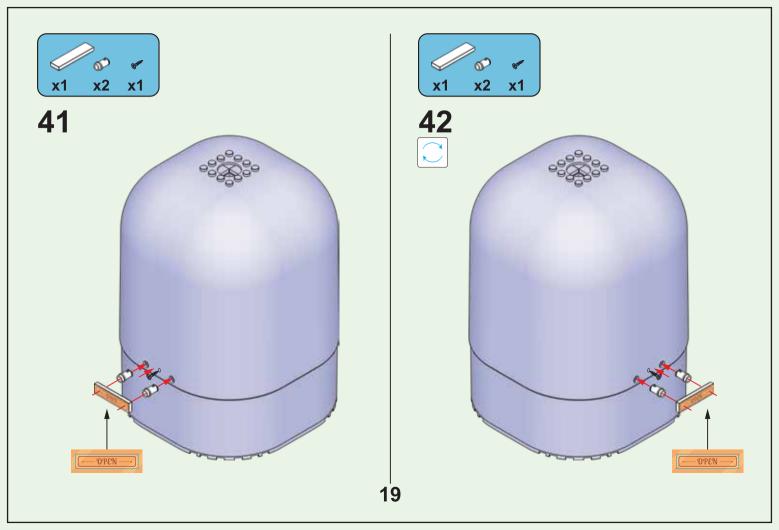

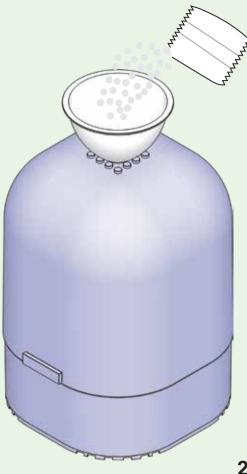

WARNING: ADULT ASSISTANCE IS REQUIRED. POUR THE BEADS CAREFULLY AND SECURE THE PLUG WITH THE SCREWS IMMEDIATELY.

