

anko

Instruction manual

LED Alarm Clock

Keycode: 43203925



Safety instructions:

Please read all safety instruction warnings carefully before using this product. Improper use of this product may result in damage to this product. To ensure the production works well, please never use this in the following conditions:

1. Moist or underwater conditions.
2. Near heater or high temperature service.
3. Direct and strong sunshine.
4. Do not use chemical solvent on cleaning this product.

Packing contents:

LED Alarm clock x 1

DC cable x 1

User manual x 1

Using the clock.

Battery mode


A. Insert 4 x AAA batteries into the battery compartment at the back of the clock, ensure the polarity of the batteries match the polarity inside the battery compartment.

USB Power mode

B. Plug in DC cable (included) with a DC 5V 1A above USB adapter (not included).

NOTE: Once power off, all setting will back to default setting

Product Overview:

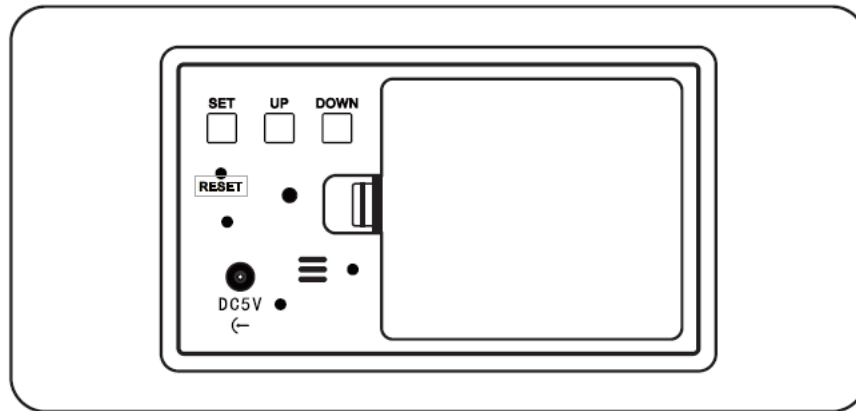

Function description

| | |
|---------------------|--|
| DP-1 | Display mode 1: time, date and temperature alternately display |
| DP-2 | Display mode 2: Fixed time display |
| oN:Sd | Sound activate mode is ON |
| --:Sd | Sound activate mode is OFF |
| L0/L1/L2/ L3 | LED Brightness level |

TIME SETTING:

1. Long press **SET** button to enter setting menu. The setting article will flash, press **UP** Button or **DOWN** Button to select the year, once confirmed, press **SET**. Repeat the step to set the month, day and time.
2. The overall setting sequence: Year->Month->Day->12/24H -> Hour -> Minute ->Alarm 1 ->Alarm 2 ->Alarm 3 -> Sound control Mode -> Quit
3. The setting will be confirmed and exited without any operation in 15 seconds.

ALARM SETTING

1. Long press **SET** button to enter setting menu. Short press **SET** button repeatedly to skip Year to Minute setting. When LED display "--:A1"/"--:A2"/"--:A3" to enter Alarm setting. The alarm clock setting will keep flashing, press **UP** Button or **DOWN** Button to set. Once confirmed, press **SET**. The setting sequence: Alarm 1 ->Hour -> Minute ->Alarm 2 -> Hour -> Minute->Alarm 3 -> Hour -> Minute.
2. Press **UP** or **DOWN** button to enable or disable your desired alarms.
"oN:A1" / "oN:A2" / "oN:A3" = Alarm 1/2/3 is ON
"--:A1"/"--:A2"/"--:A3" = Alarm 1/2/3 is OFF
3. The setting will be confirmed and exited without any operation in 10 seconds.
4. Press any button to stop the alarm.

DISPLAY MODE SETTING

Short press **SET** button to switch display mode between "DP-1" and "DP-2".

"DP-1" = time, date and temperature alternately display

"DP-2" = time fix display

TEMPERATURE DISPLAY SETTING

Short press **UP** button to switch temperature display between °C and °F.

LED Brightness Level Setting:

Long press **UP** button to enter LED brightness level setting.

Short press **DOWN** button or **UP** button to decrease or increase brightness level L0, L1, L2, L3

Note: L3 level is default brightness.

Sound activate Mode (Power Saving)

Short press **DOWN** button to enable/disable sound control function.

1. “**oN:Sd**” = Sound activate mode is ON. The clock LED display will stay on and then turn off automatically. You can turn it ON by clap or make noise.
2. “**--:Sd**” = Sound control mode is OFF. Display will permanently stay On.

Note: When use AAA batteries only, sound activate mode is suggested to turn on for energy saving.

RESET Setting

Press **RESET** button by using needle (not included) to resetting the clock setting.

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.