

WOODEN CLIMBING SET INSTRUCTIONS

Keycode: 43204335

WARNING! Requires adult assembly only. Use only under adult supervision. Not suitable for children under 3 years. Only for one child use on the set at the same time.

WARNING! Watch your children during use and always be vigilant. Leave a space around the product to prevent any injury. Make sure all products are connected firmly before your children using.

WARNING! Not for commercial use. Do not repeatedly assemble and disassemble the product. Do not jump on the product.

WARNING! Contains functional sharp point. Make sure all screws, nuts and bolts are firmly tightened before using the product. Only use on flat ground. Do not expose to the sun. For indoor use only. For domestic use only.

WARNING! It is strictly forbidden to step on the edge or sit the edge, as it poses a risk of overturning. It is forbidden to climb on the product horizontally, as there is a risk of slippage on a rung. The product is a toy and cannot be used as a tool. Adults are strictly prohibited from stepping on the product. If the product shows visible damage during use, please stop using it.

WARNING! Not for children with a body mass of more than 30kg.

Remove the related pieces from the box according to below instructions. Set the particular parts out and read the assembly instructions prior to use. Keep the packaging until assembly is complete. Please keep for future reference.

CONTENTS:

The set consists of 3 items: 1 wooden climbing frame, 1 wooden hiding cube and 1 wooden ladder bridge. Please assemble each items one by one. Components as below:

1# inner box: 2pcs panel for wooden climbing frame.

2# inner box: 12pcs support pole for wooden climbing frame.

3# inner box: 8pcs support pole for wooden hiding cube.

4# inner box: 9pcs support pole for wooden ladder bridge.

5# inner box: empty box for fixed position.

6# inner box: 3 bags of accessories for each item.

7# inner box: empty box for fixed position.

Outer box: 3pcs panel for wooden hiding cube, 2pcs panel for wooden ladder bridge.
Refer to below images for detailed assembly instructions.

Accessories

Remove the related components from the #6 box. Each bag of accessories correspond to each item. Please refer to below images, using the related accessories when assembling the specific item. Do not mess up the accessories to avoid wrong assembly.



Accessories of Wooden Climbing Frame:

24pcs screws

2pcs fixing bolts

4pcs rubber label

1pc hex wrench




Accessories of Wooden Hiding Cube:

22pcs fixing screw

2pcs screws with nuts

2pcs steel angle

1pc hex wrench

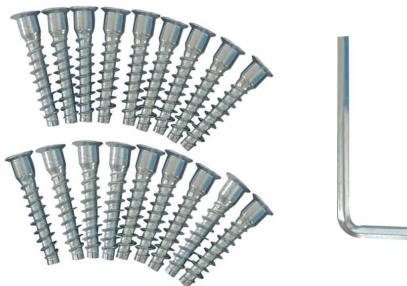

Accessories of Wooden Ladder Bridge:

18pcs fixing screw

1pc hex wrench

Wooden Climbing Frame

Remove the related components from the #1, #2 and #6 box. The frame consists of below components, please assemble each part step by step.



A. 2pcs wooden panel

B. 12pcs wooden support pole

C. 24pcs screws

D. 2pcs fixing bolts

E. 4pcs rubber label



Put one end of the wooden pole to the hole on panel then take the screws and pass them through the hole, using the tool to tighten.

Note: Please do not tighten firmly before all wooden poles are assembled.

Fix one end of all 12pcs wooden poles to one panel, tighten half firstly, then fix another end of poles to other panel.

Make sure each wooden pole is put correctly into the hole on panel and then tighten all wooden poles firmly.

Locking Hole

After assembling all wooden poles, use the bolt through the different locking hole on top of panel to fix the climbing frame.



Open



Folded


Anti Slip

In order to ensure the climbing frame is stable and non-slip, please stick the rubber stickers to the bottom of the panels.




Wooden Hiding Cube

Remove the related components from the outer box, #3 and #6 box. The cube consists of below components, please assemble each part step by step.

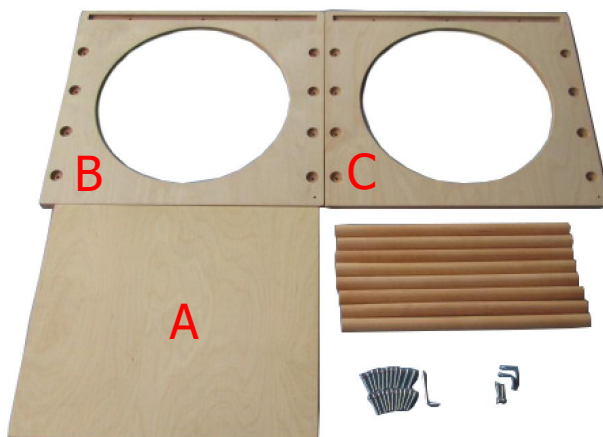


- A. 3pcs wooden panel
- B. 8pcs wooden rung
- C. 22pcs fixing screw
- D. 2pcs screws with nuts
- E. 2pcs steel angle
- F. 1pc hex wrench

Assembly Instructions

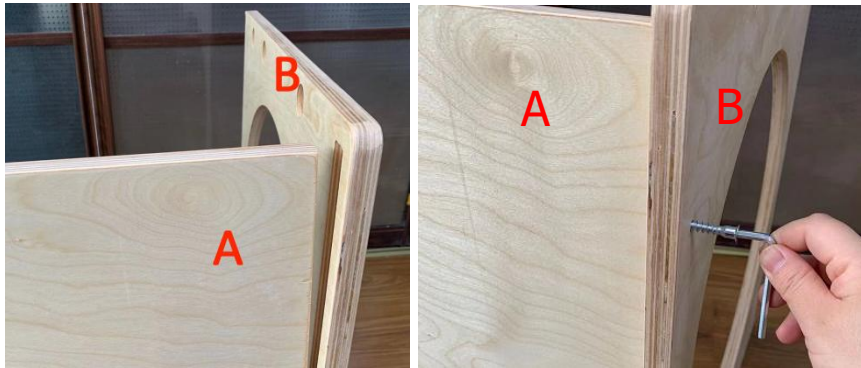

Insert the wood panel A into the groove of the wood panel B.
Use the provided screw through the hole on the wood panel B and then use hex wrench to tighten it to wood panel A.

Note: Please do not tighten firmly before all wooden parts are assembled.

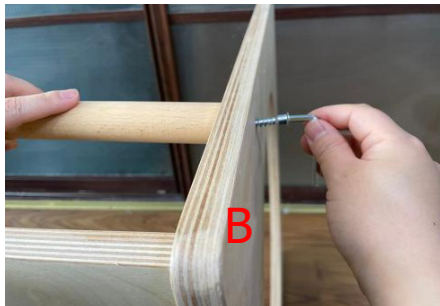


Align the rung to the hole on the wood panel B, put the screw through the hole to connect the rung, then use the hex to tighten.

Note: Please do not tighten firmly before all wooden parts are assembled.

After one rung fixed, lay the product onto the floor. Align other rungs to the wood panel B and use the screw and hex wrench to fix.


Note: Please do not tighten firmly before all wooden parts are assembled.

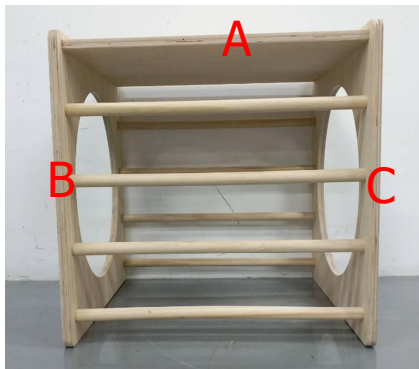

Insert the wood panel A into the groove of the wood panel C. Align all the rungs to the hole of the wood panel C, put the screw through the hole to connect the rung, then use the hex wrench to tighten.

Note: Please do not tighten firmly before all wooden parts are assembled.

Make sure each wooden pole is put correctly into the hole on panel and then tighten all wooden poles firmly.

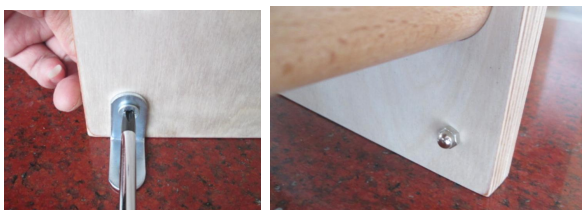

Use the provided screw through steel angle and the hole in the lower left corner of the wooden panel C, put on the screw cover, then use the hex wrench to tighten.

Use the same way to fix the steel angle to wooden panel B.

Select the appropriate fixing screw(not included) and fix the steel angle to the ground if you need.

Product pictures after assembled:



Wooden Ladder Bridge

Remove the related components from the outer box and #4 box. The bridge consists of below components, please assemble each part step by step.

- A. 2pcs wooden panel
- B. 9pcs wooden support pole
- C. 18pcs fixing screw
- D. 1pc hex wrench



Assembly Instructions



Put one end of the wooden pole to the hole on panel then take the screws and pass them through the hole, using the tool (hex wrench provided) to tighten.

Note: Please do not tighten firmly before all wooden poles are assembled.

Fix one end of all 9pcs wooden poles to one panel, tighten half firstly, then fix another end of poles to other panel.

Make sure each wooden pole is put correctly into the hole on panel and then tighten all wooden poles firmly.

After all screw are tightened, the product is ready for use.

Product pictures after assembled:



Usage scenarios of the set:



Storage & Care Instructions

Wipe the products clean with a dry cloth. Do not use abrasive materials or solvents. Ensure item is clean and 100% dry before storing to prevent mould and mildew. Keep away from water and direct sunlight.

It is not recommended to use power tools for assembly, which will cause the screws to slip. It is strictly prohibited to use if there is obvious deformation or damage.

It is of particular importance that they be followed at the beginning of each season as well as at regular intervals during the usage season.

Always check all screws,nuts and bolts for tightness and tighten when required. Always check all screws for sharp edges and replace when required. Always check any means of attachment for evidence of deterioration; Replace when required in accordance with manufacturer's instructions. If these checks are not carried out, the toy could overturn or otherwise become a hazard. Do not use this product if you detect any damage or loosening of the screws on the products.

MADE IN CHINA

FOR AU / NZ: IMPORTED FOR KMART
STORES IN AUSTRALIA AND NEW ZEALAND.