

Warning: This item is not a floating device. Adult supervision is required when using. **USER GUIDE**

READ THE FOLLOWING LEAFLET CAREFULLY BEFORE FIRST USE. IMPORTANT, RETAIN FOR FUTURE REFERENCE. Please check all parts are included before assembly commences.

IMPORT: To ensure that the Bluetooth® Floating Speaker is waterproof, please remove all cable connections and tightly close the cap; exposing the Bluetooth® Floating Speaker to liquids without doing so may result in permanent damage to the speaker. And do not expose Bluetooth® Floating Speaker to water while charging, as doing so may result in permanent damage to the speaker or power source. If the speaker will not be used for a long period of time, please recharge the battery at least once every 3 month. Battery life will vary due to usage patterns and environmental conditions.

CAUTIONS:

- 1: Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
- 2: Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
- 3: Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- 4: Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- 5: A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- 6: The marking label is location at the bottom enclosure.

SPECIFICATION:

 
Keycode	43206056	Product Size	W160×D160×H54mm
Bluetooth®	5.0	Working Range	~10M
Play Time	3-5 hours	Speaker Spec	5W/4Ω
IP Rating	X7	Input Current	740mA

1

INSTRUCTION TO USE:

Pair name: 43206056

Open the Bluetooth® list of the input device,select"43206056" in the list to pair and connect, When the connection is successful, the music can be played.

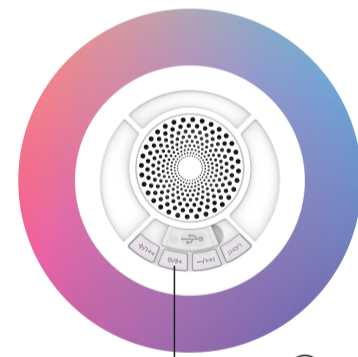

① Long press the power button Turn on bluetooth



② Turn on your phone, Bluetooth search for a 43206056 audio match


Precautions:

1. Avoid heavy objects saueeze the product;
2. When cleaning the surface of the product, it needs to be wiped with a soft cotton cloth, and it cannot be cleaned with corrosive solutions.
3. Avoid placing the product near heat sources, such as air conditioning outle ts,heating outlets, etc., and avoid placing them in the heaterWait for a location where the humidity changes drastically, avoid placing it in a location exposed to strong light
4. The light source in this lamp should be changed by the manufacturer or its service agent or a similarly qualiped person.
5. Can only be used indoors.
6. The supplied USB cable is only for this product, and should not be used for other products.

3


Schematic Diagram of keys and connection ports

 Button and connection port

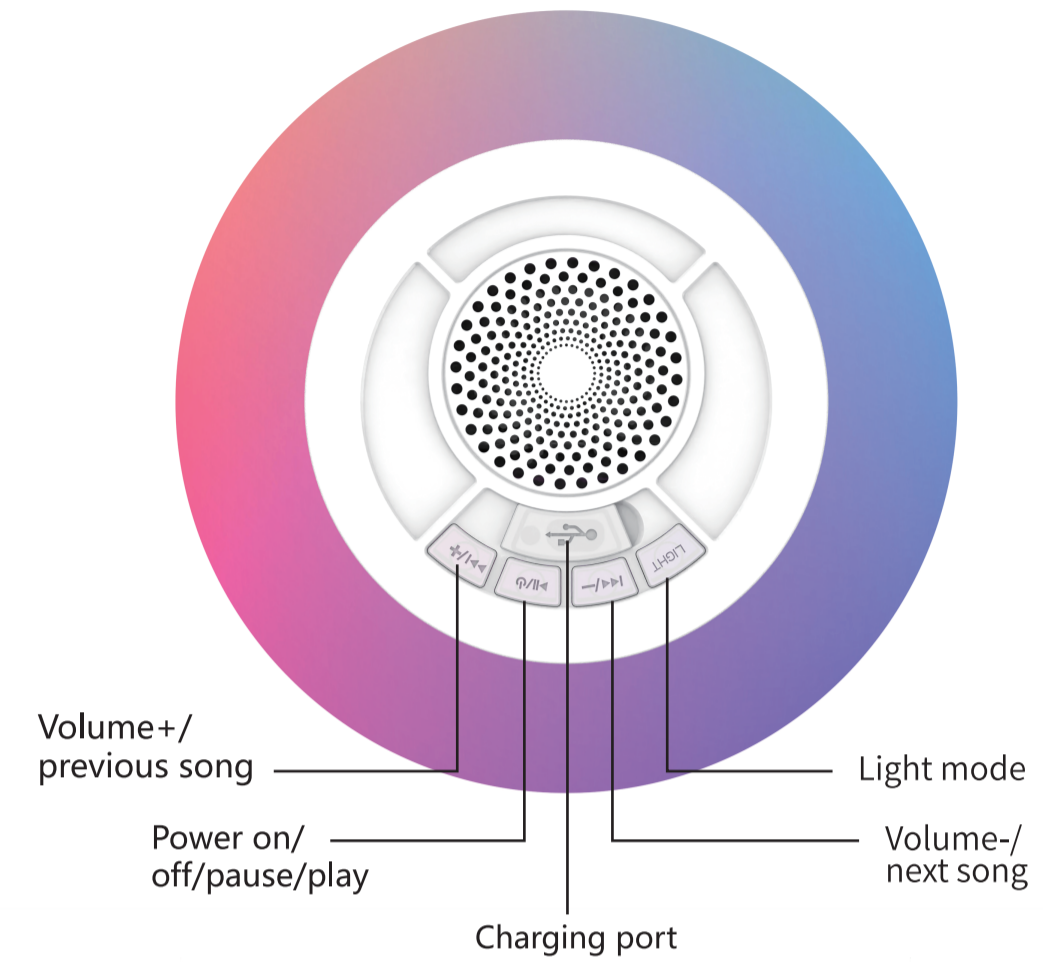

2

 BUTTONS FUNCTION:

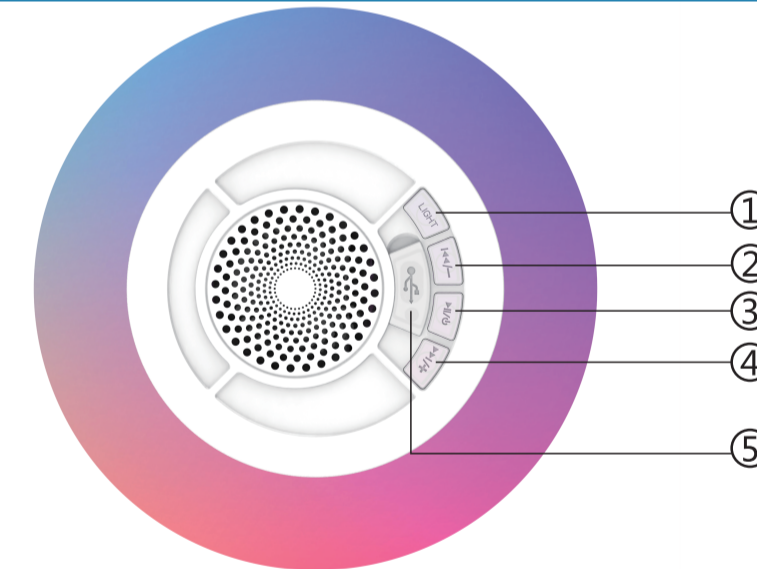

- ① LIGHT: 8 light control modes
- ② PREV/-: Short press to play the previous song, long press to decrease the volume
- ③ PAUSE/POWER: Long press to switch the machine, short press to pause,Incoming call to answer the phone, double-click to hang up
- ④ NEXT/+: Short press to play the next song, long press to increase the volume, double click the TWS connection
- ⑤ 5V charging port

4