


anko

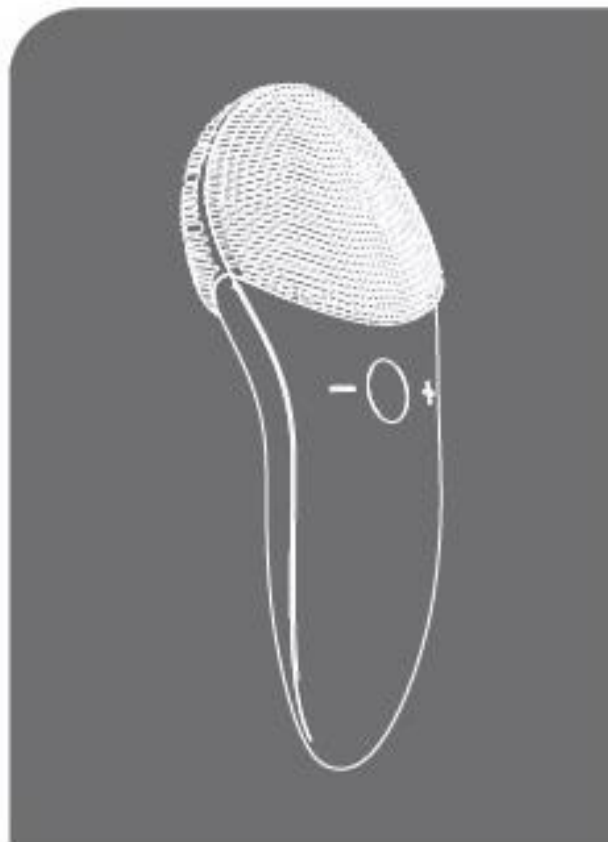

SILICONE FACIAL CLEANSER

TB-1788

INSTRUCTION MANUAL

Safety Instructions:

To ensure proper operation of this appliance, please read this instruction manual carefully before using the appliance and save it for future reference.

⚠ WARNING


- Do not use this appliance under the following conditions:
 - When pregnant
 - Children
 - Persons with skin conditions and allergies
 - Areas such as eyelids or throat
 - Areas where epilation or plastic surgery was performed
 - When the appliance is charging
- The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is for household use only.
- Always switch the appliance off after use.
- When charging the appliance, the power switch must be off.
- Do not replace the batteries with non-rechargeable batteries.
- Immediately stop using the appliance, and consult a medical practitioner if you feel unwell.
- Do not come in contact or use this appliance if you are allergic to silicone.
- Do not place the appliance in a hot or humid environment for a long time.
- Do not attempt to modify, disassemble, or repair the appliance by yourself.

Specifications:

- In put:5Vd.c.1A
- Type of Battery: Li-ion 3.7V500mAh
- Charging time: 2.5hrs
- Working time: 3hrs

Product Description (Picture 1):

- ① Cleansing Silicone Brush Surface
- ② Exfoliation Silicone Brush Surface
- ③ Power Button
- ④ + Button
- ⑤ - Button
- ⑥ Charging Port
- ⑦ USB charging cable

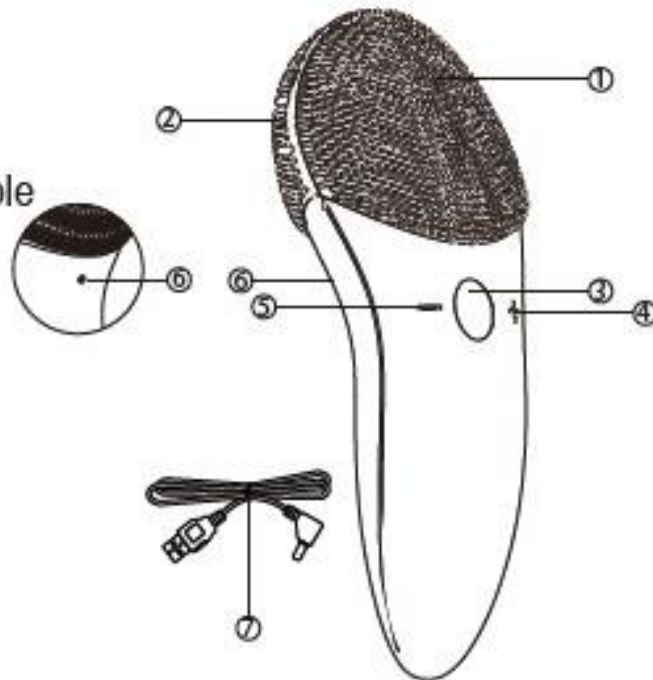

Picture 1

Operation Method:

※ Charging the appliance takes about 2.5 hours, and it can be used continuously for up to 3 hours.

1. Short press the Power Button to turn the appliance on.

According to your skin type and preference, short press the – Button or the + Button to adjust the cleansing intensity.

2. Turning off: The appliance turns off automatically after 90 seconds. You can also short press the Power Button to turn the appliance off.

Using the Appliance:

Pore Cleansing

1. Apply cleansing gel to the face or to the Cleansing Silicone Brush Surface, rub the cleansing gel with your fingers to form a foam.
2. Gently move the facial cleanser in circular motion from the center to the sides of the face. Use the appliance on the forehead, nose, cheeks and chin for 10 seconds each area (picture 2), and for 30 seconds on the neck.

Exfoliation

1. Apply cleansing gel to the face or to the Exfoliation Silicone Brush Surface, rub the cleansing gel with your fingers to form a foam.
2. Gently move the facial cleanser surface in circular motion from the center to the sides of the face. Use the appliance on the forehead, nose, cheeks and chin for 10 seconds each area (picture 2) and for 30 seconds on the neck . It is recommended to use the Exfoliation Silicone Brush Surface once a week if you have sensitive skin. If you have normal, combination or oily skin, use the Exfoliation Silicone Brush Surface according to your skin needs.
3. After use, turn the appliance off, rinse your face with water and apply moisturising cream.



Picture 2

Cleaning and Maintenance :

1. Turn the appliance off before you start cleaning it. Clean the appliance body and the brush surfaces after each use.
2. This appliance can be washed with water, but must not be submerged.
3. Do not use alcohol, steel wool, abrasive cleansers or corrosive liquids to clean the appliance. Doing so may result in malfunction or discoloration of the appliance.

Battery Disposal

If the appliance is to be disposed of, the batteries should be removed. The battery is to be disposed safely. Used batteries should be taken to a recycling station and not disposed of with household waste.

IMPORTANT: Always fully discharge the batteries before removal and ensure the charging device is disconnected.

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.