

anko

MINI ELECTRIC SHAVER

TB-1653

INSTRUCTION MANUAL

Safety Instructions:

To ensure proper operation of this appliance, please read this instruction manual carefully before using the appliance and keep it for further reference.

⚠ WARNING

- Do not use this appliance under the following conditions: persons with physical, sensory, and mental disabilities; persons with allergies; areas with existing open wounds, inflammation, severe dryness, lumps, and other severe skin diseases or conditions.
- Please ensure this product is not damaged before use. Do not use if there is any fault or damage if found.
- If you feel any discomfort on your skin during or after using the appliance, stop using it and seek medical assistance if necessary.
- Do not attempt to modify, disassemble (except removable parts), or repair the appliance by yourself to avoid accidents.

 
⚠ CAUTION

- Do not share the same appliance with others.
- Regularly clean the appliance to extend its lifetime.
- Keep the appliance out of reach of children.
- This appliance is battery-operated. If you do not use the appliance for a long time, remove the battery.

Product Specifications:

- Name: Mini Electric Shaver
- Model No.: TB-1653
- Type of Battery: 1× AA battery required(Not included)


Product Description:

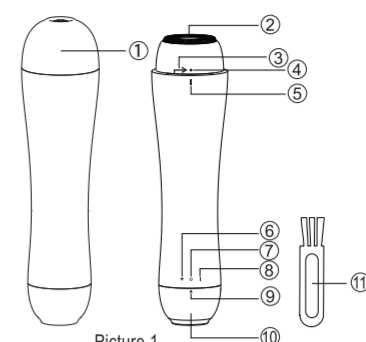

① Protective Cap
② Outer Foil
Head removal indicators
③ "▼"Disassembly indicator
④ "○"Install indicator
⑤ "I" Alignment indicator
Battery removal indicators
⑥ "▼"Disassembly indicator
⑦ "○"Turn off indicator
⑧ "I" Turn on indicator
⑨ "▲" Alignment Indicator
⑩ Battery Cover
⑪ Cleaning Brush


Operating Instructions:

 ※ **Battery Replacement:** Rotate the Battery Cover to align with "▼" Disassembly indicator. Remove the Battery Cover and insert one AA battery (battery is not included) according to the battery compartment instructions and put the Battery Cover back on. Rotate the Battery Cover to "○" to lock into position and turn off the appliance (picture 2).

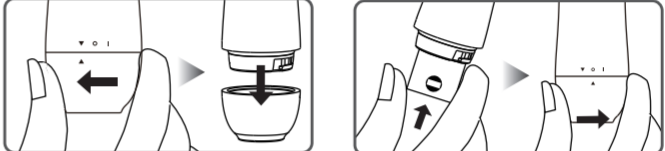


Using the Appliance

1) Remove the Protective Cap and rotate the Battery Cover to align the "▲" Alignment Indicator with "I" to turn the appliance ON (picture 3).



Picture 3

2) Place the blade on the skin at a 90° angle, move it slowly and gently against hair growth (picture 4).



Picture 4

3) This appliance can be used in different body areas, such as underarms, arms, legs, and bikini line.

4) Rotate the Battery Cover to align with "▲" Indicator with "○" to turn OFF appliance after using it.

Cleaning & Maintenance:

- Make sure the appliance is turned off before you start cleaning it.
- Do not immerse the appliance in water. The parts that can be disassembled can be cleaned separately.

- The surface of the appliance can be washed under tap water (do not immerse it in water) and use a dry cloth to dry it.
- Do not use any lubricant, detergent, polishing agents or air freshener on this appliance.
- Clean the removable blade head with the cleaning brush and rinse it with water.
- Do not use towels, paper towels, and wire ball sponge to clean the blade head.

Service:

1. Eco-Friendly Tips
Batteries contain substances harmful to our environment. Please do not dispose of the appliance with the battery inside, remove the battery and recycle it for environmental protection.

2. Troubleshooting

Problem	Possible Cause	Solution
The appliance does not work	Battery installed incorrectly	Reinstall battery correctly
	Low battery	Install new battery
Poor trimming effect	The Battery Cover was not installed correctly	Rotate the Battery Cover to align "▲" Indicator with "I" indicator to turn it ON.
	Worn blade	Change new blade

12 Month Warranty
Thank you for your purchase from Kmart.


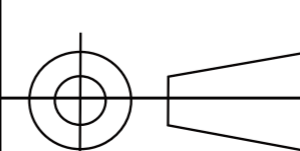 
Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

名称	TB-1653 说明书				
尺寸	318*155	订单包材		审核	GRC
材质	80G书写纸				
工艺		订单编号	GRC220360202	日期	2022/09/26
颜色	单黑印刷		单位	设计	杨婷
其他	风琴2折再左右对折53*155MM		毫米	料号	