

9" Dual Screen Portable DVD Player User Manual

Package Contents

- › 1 x Main DVD Player with 9-inch 16:9 LCD Display
- › 1 x LCD Monitor with 9-inch 16:9 Display
- › 2 x Car Headrest Mount
- › 2 x Headphones with 1.2m cables
- › 1 x 12V DC Power Supply
- › 1 x 1.5m Power Link Cable
- › 1 x 1.5m Audio/Video Link Cable
- › 1 x Remote Control with 2xAAA Battery
- › 1 x User Manual



Table Of Contents

Important Safety Instructions And Precautions.....	2
Care Of Discs.....	2
DVD Player (Main Unit).....	3
Monitor.....	3
Installation (Incar Use).....	4
Fitting The Headrest Mounts And Dvd Player.....	4
Mounting The Monitor.....	2
Playback.....	5
The Remote Control.....	5
Loading And Playing A Disc.....	6
Display.....	6
Angle.....	6
Subtitle.....	7
Audio.....	7
Zoom.....	7
A-B Repeat.....	7
1/All Repeat.....	7
Playback MP3/MPEG-4 Disc.....	8
Playback Of DIVX Content.....	8
Play USB And SD/MMC Card.....	8
System Setup.....	9
General Setup Page.....	9
TV Display.....	9
Angle Mark.....	9
OSD Language.....	9
Captions.....	9
Screen Saver.....	9
Last Memory.....	9
Audio.....	9
Speaker Setup.....	9
Dolby.....	9
Dual Mono.....	9
Dynamic.....	10
Video.....	10
Preferences.....	10
TV Type.....	10
Audio.....	10
Subtitle.....	10
Disc Menu.....	10
Parental.....	10
Password.....	10
Default.....	10
Trouble Shooting.....	11
Specification.....	12

 
 
Important Safety Instructions And Precautions

- › Read all instructions carefully before use.
- › Retain manuals for future reference.
- › Use this product only in the manner described.
- › Only use a water-dampened soft-cloth to clean the surface of this product.
- › Use electronic devices in well ventilated areas & not exposed to excess vibration.
- › The following will damage this product: any liquid such as water or moisture, extreme heat, cold, humidity, dusty or sandy environments.
- › Only place this device on stable surfaces and ensure that any attached cables are secure and will not cause the device to fall.
- › There are no user serviceable parts in this product.
- › Un-authorized attempts to dismantle or repair this product will void product warranty and may result in dangerous electric shock.
- › Do not use this product if you are in control of dangerous machinery such as a motor vehicle.
- › Remove any power or data cords by pulling them from the plug and not the cord. Using this device near other electronic devices may cause interference.
- › Do not open the drive door while disc is spinning.
- › Ensure that the Portable Dual DVD player is installed in accordance with the instructions and illustrations provided in this manual.
- › It is the responsibility of the driver of the vehicle to ensure that this product is installed in compliance with all Federal and State laws governing products of this type.
- › Mounts this product with thought for other motorists too reduce the amount of distraction that they may provide to other road users.

Care Of Discs

- › Do not place discs near any heat source such as direct sunlight or areas of high humidity.
- › Do not touch the readable area or the disc (underside). Always hold discs by the edges.
- › Do not use adhesive tape on the disc.
- › Do not leave discs in a vehicle that may be subject to strong direct sunlight as the heat build up in the vehicle may damage the discs even if stored in shaded areas.
- › To clean the disc, always use a very soft damp cloth and wipe from the inside to the outside of the disc.
- › Always return the disc to its enclosure when finished with.


DVD Player (Main Unit)

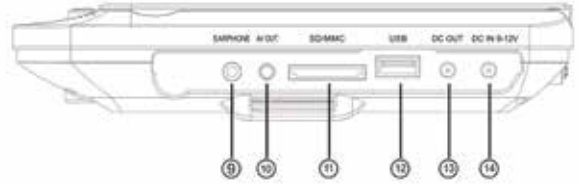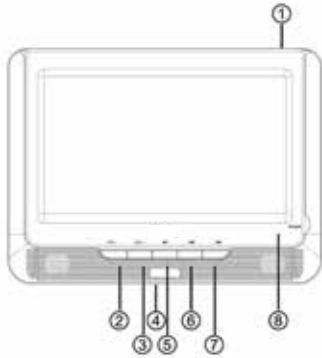

- 1 — Main Power ON/OFF Switch
- 2 — Volume decrease button
- 3 — Volume increase button
- 4 — IR sensor
- 5 — Play/Pause Button
- 6 — Previous button
- 7 — Next Button

- 8 — LCD Display/Drive Access panel
- 9 — 3.5mm Stereo headphone output
- 10 — 3.5mm AV link output
- 11 — SD/MMC Card slot (SDHC compatible)
- 12 — USB host port
- 13 — 12VDC Link output
- 14 — 12VDC input

 Monitor

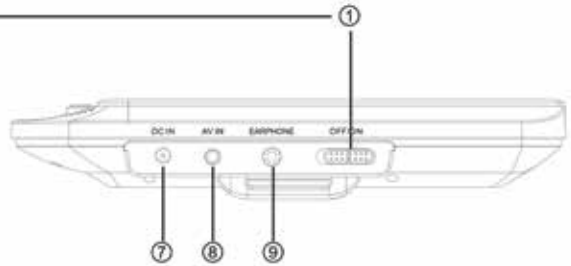


- 1 — Main Power ON/OFF Switch
- 2 — Volume decrease button
- 3 — Volume increase button
- 4 — Left Button
- 5 — Menu Button

- 6 — Right Button
- 7 — 12VDC link Cable input
- 8 — 3.5mm AV link input
- 9 — 3.5mm Stereo headphone output jack

Installation (Incar Use)

Fitting the Headrest mounts and DVD player

 1. Identify the top of the Headrest mounts by the Tab ①.
2. Place the Headrest mount to the back of the headrest it is to be fitted too.
3. Wrap the main strap ② around the headrest and connect the buckle. Pull the strap tight.
4. Repeat with the lower strap ③.
5. Release the Tab ① at the top of themount to open the flap.
6. Place the DVD player the mount and secure the tab at the top.
7. Adjust the tension on the straps if required.
8. With the vehicle ignition off, connect the supplied DC adaptor to the vehicle power outlet.
9. Connect the other end to the DC power input on the side of the DVD player.
10. Turn the vehicle ignition to ON or ACC to power the outlet and slide the DVD player power switch to the ON position.

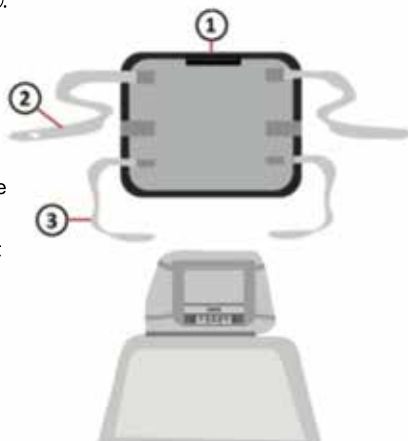

Mounting the Monitor

Repeat the step described above for mounting the DVD player from steps 1 through to 8.

Then:

- › Connect the 12VDC Link cable to the output on DVD player and plug the other end to the input on the Monitor.
- › Connect the Audio/Video link cable to the output on DVD player and plug the other end to the input on the Monitor.
- › Slide the power switch on the side of the Monitor to the ON position.

Note:

Care should be take with all cable and connections with the DVD player and the Monitor. Please ensure that there is no tension on any connection as this may damage the units. Tidy any excess cabling to trip hazards that may damage the player or Monitor.



1. Power: Switches the player ON or OFF
2. Display: Shows information about the current content
3. TFT: Switches the screen ON or OFF
4. Mute: Mutes the audio output of the player
5. Repeat: Toggle repeat title, chapter, or track
6. Search: Select a title, chapter, track, title time, or tracking time
7. Zoom: Enlarge the image
8. Prog: This button is used to program favourite tracks or chapters when using discs
9. Setup: Enter or exit the setup menu
10. Mode1: Toggle between AV IN and DVD modes
11. Play/Pause: Press to start or pause playback
12. Stop: Press to stop playback
13. Up: Navigate left during menus
14. Left: Navigate left during menus
15. Right: Navigate left during menus
16. Down: Navigate left during menus
17. OK: Press to select an option or validate a setting
18. Audio: Select available audio language for the DVD
19. Mode2: Toggle between DVD, USB and SD Card
20. A-B: Used to select a portion of the audio/video to repeat
21. Number Pad: Use to enter an item in a menu or to enter a password
22. Sub/Copy: During playback, press to change subtitle language or to turn subtitles on/off
23. Rewind: Use to rewind at speeds of 2x, 4x, 8x, 16x, and 32x normal playback speeds
24. Fast Forward: Use to fast forward at speeds of 2x, 4x, 8x, 16x, and 32x normal playback speeds
25. Previous: Press to skip to the previous chapter or track
26. Next: Press to skip to the next chapter or track
27. Angle: Display the available angles for discs containing multiple camera angles
28. DVD Title: Return to disc main menu
29. Volume Down: Decrease the volume
30. Volume Up: Increase the volume


Loading and Playing a Disc

1. After connecting power to the DVD Player, push the Power On/Off switch to the "on" position.
2. Place a disc gently into the tray:
 - You should hear and feel the disc snap firmly into place.
 - Place a disc into the tray with the disc's label facing up.
3. Close the DVD cover until it clicks shut. The unit will now load disc and commence playback.
4. Stopping Play. Press the STOP (■) Button during play.
5. Play/Pause:
 - Press the Play/Pause (▶||) button on the remote during play to pause playback.
 - To resume, Press the Play/Pause (▶||) button once again.
6. Fast Forward/ Rewind:
 - Press Fast Forward or Rewind buttons to toggle between 2x, 4x, 8x, 16x, and 32x speeds.
7. Menu:
 - A DVD is divided into sections called titles and chapters. When you play a DVD, a root menu of the disc will appear on the screen of your DVD player or Monitor. The contents of the menu vary from disc to disc. Press MENU during playback to display the menu.

Display

Playing Time and Remaining Time

 - ▶ During playback, press the "DISPLAY" button to display the current Title Number, the total Number of Title, The current Chapter Number, The total Number of Chapters, and the Playing elapsed Time for the title. The heading will disappear automatically after 3 seconds if DISPLAY button is not pressed.
- ▶ Press "DISPLAY" constantly to choose the options below in sequence.
 - Title Elapsed: The elapsed time of the title.
 - Title Remain: The remaining time of the title.
 - Chapter Elapsed: The elapsed time of the chapter.
 - Chapter Remain: The remaining time of the chapter.
 - Display off: The DVD's time information will not be displayed.



Angle

During playback of a disc, press the "ANGLE" button to display the available angles for discs containing multi-angles, with the current angle number and the total number of angles displaying. Press "ANGLE" to select another angle, then press again to exit and return to the normal viewing angle. The angle display will disappear automatically if the "ANGLE" button is not pressed again within 3 seconds.



Note: Not all discs contain this feature.

Subtitle

During disc playback press "SUB/COPY" to select the subtitle language you desire, with the current Subtitle Language Number and the total Number of Subtitle Languages displayed. If there are multiple languages press "SUB/COPY" again to select another subtitle language. To turn subtitles OFF, press the "SUB/COPY" button until "Subtitle Off" is displayed. The Subtitle display will disappear automatically if the "SUB/COPY" button is not press again within 3 seconds.

Subtitle 01/02

Note: Some DVDs only allow access to this function through DVD Menu.

Audio

During playback press "AUDIO" to select the audio language you desire, with the current Audio Channel Number and the total number of Audio Channels displayed. Press "AUDIO" again to select another audio language. The audio display will disappear automatically if the "AUDIO" button is not pressed within 3 seconds.

Audio 1/2:AC35.1CH

 
 
Zoom

During playback press "ZOOM" to enlarge the picture. The zoomed in value will be displayed onscreen.

 2X



A-B Repeat

- During playback press a first time "A-B" to set the Starting Point A.
- Press "A-B" a second time to set the Ending Point Band player will repeatedly play the part between Point A and Point B.
- Press "A-B" a third time to cancel "A-B" repeat and resume normal playback.

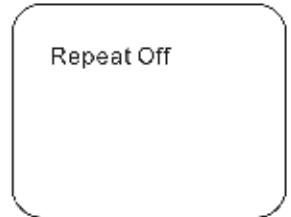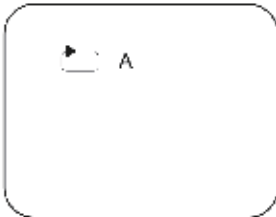

Repeat

  During playback press "REPEAT" constantly to see the repeat mode as below.

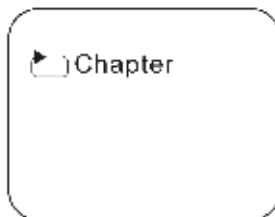

- Chapter: Repeat the current chapter.
- Title: Repeat the current title.
- All: Repeat all chapters and titles.
- Off: Resume normal playback.

Playback MP3/MPEG-4 Disc

When a MP3/MPEG-4 disc is inserted into the unit, the menu screen appears automatically. You can use the menu screen to select your desired folders and songs or the system plays the songs in the order they were burned onto the disc.

1. Press the ▲ or ▼ button to choose a folder from the folder list.
2. Press "OK" to select the highlighted folder. The songs available under the folder will be listed.
3. Use ▲ or ▼ button to choose a song from the list. Press "OK" to select and begin playback of the highlighted song.
4. Use the ►► button to move to the next song. Press the ◀◀ button to move to the beginning of the previous song.
5. Press the ▲ button to select the current folder and press "OK" to confirm. Then you can back to the folder list.

Playback of DIVX content

The DIVX format is capable of holding high quality video and sound in a highly compressed file format. File types such as AVI are typically able to hold more data in a smaller file.

1.5 hours file	MPEG-12 Format	DIVX Format
DVD(MPEG-2)	About 1.5-2GB	About 600-800 MB
VCD(MPEG-1)	About 1.5-2GB	About 300-300 MB

Comparing MPEG-1, MPEG-2 and MPEG-4

	MPEG-1	MPEG-2	MPEG-4
Speed(kb/s)	1380kb/s (352x288)	6500kb/s (720x576)	880kb/s (720x576)
Video quality	Good	Excellent	Perfect
Hardware requirement	Low	Middle	High

However depending on how the file was encoded, compatibility may still be an issue with certain types of DIVX or MP4 type files.

We highly recommend that files be tested and "Trial & Error" be used to find the best compromise between quality and file size for encoded files.

Play USB and SD/MMC Card

1. Plug in the USB device noting correct orientation. Press **[Mode1]**, then choose USB to select the content.
2. Insert a memory card to the SD/MMC slot. Press **[Mode1]** and select SD to play memory card.

System Setup

1. Press "SETUP" on the remote to bring up the SYSTEM SETUP MENU.
2. Press the ▲ or ▼ buttons to go to or return to the required settings page.
3. When the required page is shown press the "OK" button to enter the page.
4. Use the ▲ or ▼ buttons to navigate to the feature to be changed and then press the ► button to enter the submenu.
5. Use the ▲ or ▼ buttons to select the submenu item and then press the "OK" button to confirm.
6. Press the ◀ button to return to the previous menu or press the "SETUP" button to close the Setup Screen.

Note: Not all discs contain these features. Some features are disc dependent.

General Setup Page

TV Display

- › 4:3: When the player outputs signal to a normal monitor. Wide-screen images are shown on the screen. But with some parts cropped automatically.
- › Normal/ LB: Normal/LB: When the player outputs signal to a normal monitor, a normal picture is shown on the screen with a black strip at both the top and bottom of the screen.
- › 16:9: Wide: When the player outputs signal to a wide screen monitor, a wide picture is shown on the full screen.

Angle Mark

- › ON: The screen will show the angle mark icon. (If an angle option is available).
- › OFF: The screen will not display the Angle Mark.

OSD Language

You can choose one out of several different languages as the OSD setup language.

Captions

- › ON: Captions are displayed. (If an captions available).
- › OFF: The screen will not display captions.

Screen Saver

- › ON: Enables screen saver.
- › OFF: Disables screen saver (off).

Note: The DVD player will enter the Screen Saver mode after approximately five minutes if the some image remains on the screen.

Last Memory

- › ON: The unit will return to the last position on the disc.
- › OFF: The unit will not return to the last position on the disc.

Audio

Speaker Setup

Downmix

- › LT/RT: RIGHT/LEFT Channel: Mixes a 5.1 Ch audio signal to 2 audio channels and then outputs to the left and right speakers.
- › Stereo: Outputs a stereo signal to the left and right speakers.

Dolby

Dual Mono

- › Stereo: Left/Right channel audio will be played back by the Left/Right speakers.
- › L-Mono: Playback of Left channel audio only.
- › R-Mono: Playback of Right channel audio only.
- › Mix Mono: Both Left/Right channels are mixed to one mono channel.

Dynamic

Use this mode to level all sound channels to ensure even sound levels.

- › Press The OK Button to enter.
- › Use the ▲ or ▼ buttons to adjust the dynamic range as required.
- › Press the OK Button again to confirm the adjustment.

Video

Adjust the image quality.

Use the ▲ or ▼ buttons to select the option to change and the press the "OK" button.

Press the ◀ or ▶ buttons to adjust the setting and then press the "OK" button to confirm the changes.

Options are

- › Sharpness
- › Brightness
- › Contrast

Preferences

The Preferences page cannot be accessed if a disc is in the player. Please remove any disc before accessing this page.

TV Type

Used for settings the Video format output if the player is connected to a display other than the monitor supplied. This requires the use of a cable that is not supplied with this product.

- › PAL: Video output is PAL only.
- › Multi: Video output is as per source material.
- › NTSC: Video output is NTSC only.

Audio

Sets the default Audio language of DVDs played on this player.

Subtitle

Sets the default language of the Subtitles of DVDs played on this playplayer.

Disc Menu

Sets the default Language of the DVD Menu of DVDs played on this player.

NOTE: Audio1 Subtitle and Disc Menu settings are subject the availability of your selection on the DVD.

Parental

Select the parental level you desire for disc with lock-out function or multiple rating levels.

They are listed from level (1 Kid Safe) to the highest level (8 Adult). The setting allows

PLAYBACK to be restricted via password.

Note: This function will only work if the disc contains a parental control lockout.

Password

This function allows you to re-set a new password.

Note: You have to input the correct password to change the password setting. The default password is 136900

Default

Used to reset the player to Original Factory Defaults.

Trouble Shooting

No sound or distorted sound?

- › Make sure your DVD is connected properly. Make sure all cables are securely inserted into the appropriate jacks.
- › Make sure the Audio is not muted.

No Power

Ensure that power connection is firmly seated in plug and there is power to the power supply.

Can't advance through a movie?

You can't advance through the opening credits and warning information that appears at the beginning of movies because the disc is programmed to prohibit that action.

The icon (0) appears on the screen?

The feature or action cannot be completed at this time because:

- › The disc's software restricts it.
- › The disc's software doesn't support the feature (e.g., angles)
- › The feature is not available at the moment.
- › You've requested a title or chapter number that is out of range.

Picture is distorted?

- › The disc might be damaged. Try another disc.
- › It is normal for some distortion to appear during forward or reverse scan.

No forward or Reverse scan?

- › Some discs have sections that prohibit rapid scanning or title and chapter skip.
- › If you try to skip through the warning information and credits at the beginning of a movie, you won't be able to. This part of the movies is often programmed to prohibit skipping through it.

IR sensor inoperative?

- › Ensure that the batteries in the remote are fresh.
- › Ensure that the remote sensor eye is not obstructed.
- › Ensure that the infrared transmitter is affixed over the sensor eye of the component to be controlled.

Disc won't play?

- › Insert a disc with the label side facing up.
- › Check the type of disc you put into disc tray. This DVD only plays digital video discs, audio CDs and MP3s.

Play starts, but then stops immediately?

- › The disc is dirty. Clean it.
- › Condensation has formed. Allow player to dry out.

Specifications

DVD Player

- › Compatible Disc: DVD/VCD/CD/MP3/JPG/MPEG-4
- › Signal System: PAL/NTSC
- › Screen Size: 9 inch (228mm)
- › Frequency Response: 20 Hz to 20 KHz
- › Video Output: 1 Vp-p/75 Ohm, Unbalanced
- › Audio S/N: Better than 60 dB
- › Dynamic range: Better than 85 dB
- › Laser: Semiconductor Laser, Wave Length: 650 nm/795 nm
- › Power source: DC 9-12V 1.5 amps
- › Power Consumption: 12W
- › Working temperature: 5-40°C
- › Weight: 750 grams. (Without mount, disc or cables)
- › Dimensions (LxWxH): 255mm x 190mm x 40mm

Monitor

- › Colour System: PAL/NTSC
- › Screen Size: 9 inch (228mm)
- › Power source: DC9-12V
- › Power Consumption: 6W
- › Working temperature: 5-40°C
- › Weight: 460 grams. (Without mount, disc or cables)
- › Dimensions (LxWxH): 255mm x 190mm x 35mm

12 month warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation

WARNING › Do not dispose of unit in fire or water. › Never attempt to disassemble and reassemble
Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. Check with your local authority for recycle advice. › Keep your device and all accessories out of reach of children and animals. Small parts may cause choking or serious injury if swallowed. › Avoid exposing your device to very cold or very hot temperatures (below -10 C° or above 45°C). › Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. › Do not allow your device to get wet, liquids can cause serious damage. Do not handle your device with wet hands.