 


Digital Set Top Box Full-HD Media Player User Manual

Package Contents

- › 1 x HD Set Top Box
- › 1 x Remote control
- › 1 x AV Cable (Composite RCA)
- › 1 x User Manual
- › 2 x AAA Batteries

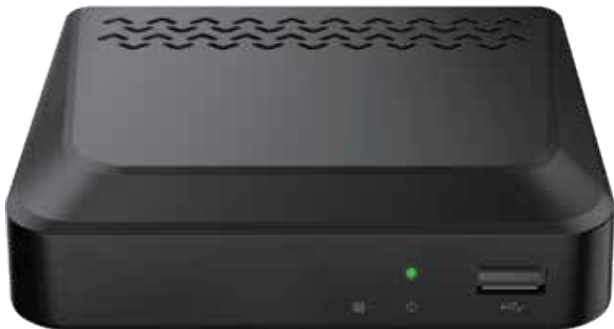

Important Safety Instructions And Precautions.....	3
Installing The Batteries.....	3
Set Top Box.....	4
Front Panel.....	4
Rear Panel.....	4
Remote Control.....	5
Connecting To A Television.....	6
Power.....	6
Video And Audio Connection.....	7
Connection Method 1: Composite.....	7
Connection Method 2: HDMI.....	7
Audio Connection.....	7
First Time Installation.....	7
OSD Language.....	7
Country.....	7
Channel Search.....	7
Basic Operation.....	8
Channel Selection.....	8
Volume Control.....	8
Channel Information.....	8
Main Menu.....	8
Program.....	8
Program Edit.....	9
EPG & Scheduling.....	11
Sort.....	11
LCN.....	11
Picture.....	11
Channel Search.....	11
Auto Search.....	11
Manual Search.....	12
Country.....	12
Antenna Power.....	12
Search Mode.....	12
Time.....	12
Time Offset.....	12
Time Zone.....	12
Sleep.....	12

Option.....	12
OSD Language.....	12
Subtitle Language.....	13
Audio Language.....	13
Digital Audio.....	13
Audio Description.....	13
System.....	13
Parental Guidance.....	13
Set Password.....	13
Restore Factory Defaults.....	13
Information.....	14
Recall List.....	14
USB.....	14
Multimedia.....	14
Photo Configure.....	14
Movie Configuration.....	14
PVR Configuration.....	14
Record Device.....	15
Format.....	15
Multimedia Playback.....	15
Music.....	15
Photo.....	15
PVR.....	15
General Information.....	16
Time Shifting Live TV.....	16
General Information.....	16
Connecting A Usb Device.....	16
Connecting A 2.5" (Notebook) Hard Drive.....	16
Trouble Shooting.....	17
Specifications.....	18

Important Safety Instructions And Precautions

- › Read all instructions carefully before use.
- › Retain manuals for future reference.
- › Use this product only in the manner described.
- › Only use a water-dampened soft-cloth to clean the surface of this product.
- › Use electronic devices in well ventilated areas & not exposed to excess vibration.
- › The following will damage this product: any liquid such as water or moisture, extreme heat, cold, humidity, dusty or sandy environments.
- › Disconnect this product from mains power and antenna during lightning storms.
- › Only place this device on stable surfaces and ensure that any attached cables are secure and will not cause the device to fall.
- › There are no user serviceable parts in this product.
- › Un-authorized attempts to dismantle or repair this product will void product warranty and may result in dangerous electric shock.
- › Remove any power or data cords by pulling them from the plug and not the cord.
- › Using this device near other electronic devices may cause interference.
- › When recording images or video using this product please be respectful ooff the copyright requirements and restrictions as they apply to each program in your area.
- › Images shown in this document are for references only and there may be differences between images and actual products.
- › Do not mix old and new batteries in the remote.
- › We reserve the right to change the products and/or documentation without notice.

 
Installing The Batteries

- › Remove the battery compartment cover on the rear of the remote control.
- › Insert the 2 X AAA batteries (supplied) in to the compartment being sure to match the polarities with the markings in the compartment.
- › Fit the cover back on the remote control and make sure that it locks in place.

1. Open the cover



2. Install batteries

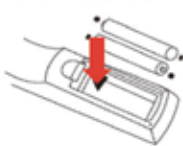


3. Close the cover




Note: Please do not mix old and new batteries in this remote. Remove batteries if remote is not going to be used for long periods.

 Front Panel

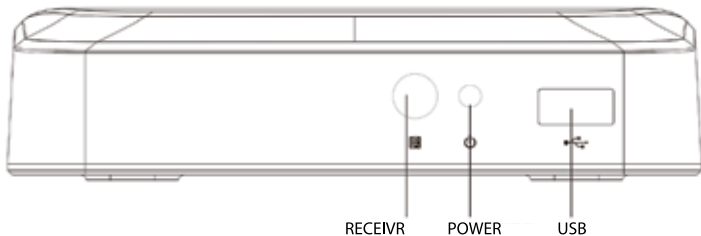

Rear Panel

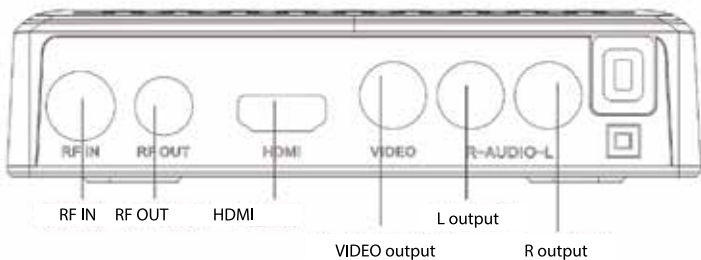 

- 1 — Antenna In
- 2 — Antenna Loop Through
- 3 — HDMI Output
- 4 — Video Output
- 5 — Audio Left/Right output
- 6 — Audio Left/Right output



 
1. Mute: Mute or restore Audio
2. Favourites: Displays Favourite Channel list
3. Subtitles: Displays Subtitle language information
4. Numeric Keys: Enter music track or chapters in vavmovies (where supported)
5. Menu: Displays all the main menus
6. Ok (Button): Displays Channel listing DVB-T mode or confirm selection
7. EPG: Displays EPG (Electronic Program Guide)
8. Page Up/Down: Navigate up and down through menu items
9. Volume Up/Down: Increase/Decrease volume
10. Rewind/Fast Forward: Rewind/Fast Forward through Media playback
11. Previous/Next: Skips to the Previous/next track/file during media playback
12. Play: Start playback
13. Pause: Pause playback
14. Record: Start recording current program
15. Timeshift: Pause live TV (records as a file for playback)
16. Zoom: Picture Viewing mode Press to Zoom in on Image
17. Aspect: In DTV mode, press to change to different Aspect Ratio
18. Power On/Off: Places the STB into Standby mode or wakes it up
19. Teletext (Where Available): Streaming information on your TV (where service is provided)
20. Information: Displays additional channel and program information
21. Recall: Previous/Last screen or channel
22. Liste: Display the PVR list of recordings
23. Exit: Exits current screen or returns to the previous channel
24. Direction (For Menus): Navigate through menus
25. Goto
26. Channel Up/Down: Select a Channel up or down
27. Language: Selects an Audio language or mode (if broadcast)
28. Stop: Stop the current playback
29. Repeat

30. TV/Radio (Switch Mode): Switches between DVB-T (TV) and DVB-R (Radio)

31. Timer: Display recording scheduler

32. V-Format (Resolution): In DVT mode press to cycle through different resolution options

NOTE: Some features on this remote rely on the feature being available during the broadcast. Button may not respond if function is not available.

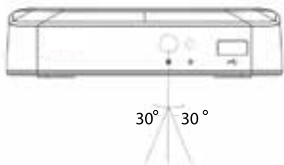


NOTE:

To use the Remote Control, point it towards the front of the Digital Set Top Box. The Remote Control has a range of up to 7 metres from the Set Top Box at an angle of up to 30 degrees.

Connecting To A Television

 - › Power
- Turn the TV off at the main power outlet.
- Connect the Antenna cable to the ANT in socket.
- Choose the best connection method for your Equipment. There are 2 possible connection methods, and the type that you choose may depend on the type of TV that you have.

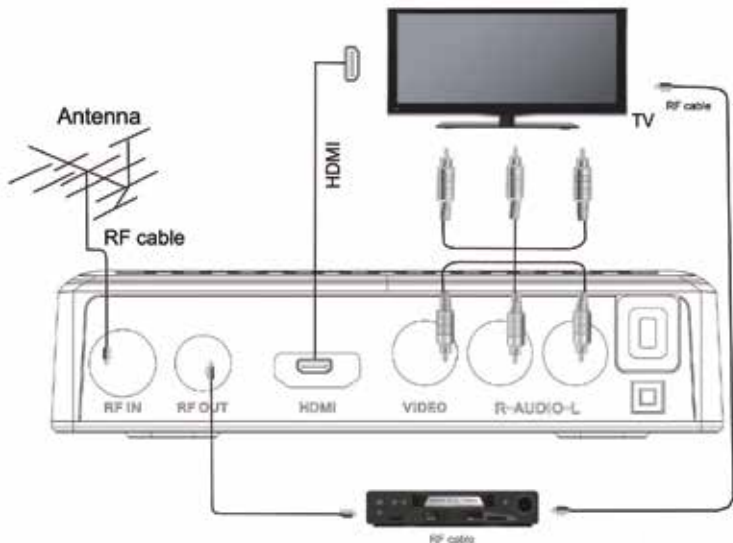

Video and Audio Connection

› Connection Method 1: Composite

The composite cable (supplied) comprises of 1 x Video Cable (yellow), 1 x Left Channel Audio (White) cable and 1 x Right Channel Audio (Red) cable.

Best Used for: Older CRT type televisions or other displays with only a standard AV input.

› Connection Method 2: HDMI

HDMI (High-Definition Multimedia Interface) is the preferred connection method as the HDMI cable (not supplied) allows full HD Digital signal transmission to the TV.

Best Used For: Any TV that has an HDMI input.

› Audio Connection

Audio can be connected to an external amplifier/receiver. Connect the Stereo Left and Right channels (White & Red) to the back of the Set Top Box and the corresponding inputs on the back the audio device.

First Time Installation

- Once the Media Player has been connected to the power and to the TV and after all audio connections have been made properly, switch on TV.
- Press Power button to switch the Set Top Box (STB) unit on.
- If you are using the unit for the first time or have restored the unit to Factory Default, the Installation Guide Menu will appear on your TV screen.



› OSD Language

To set the OSD (On Screen Display) Language press the LEFT/RIGHT buttons on the remote

until the desired Language is displayed and then press the DOWN button.

› Country

To change the Country, press the LEFT/RIGHT buttons on the remote until the desired Country is displayed and then press the DOWN button.

› Channel Search

- Set the Channel Search type to "FTA + Scrambled"

- Press OK to start the Channel Auto Search.

- The System will now scan for the available channel in your area.

- Found DVB-T Channels are shown in the left window and radio stations are displayed in the right. Total progress is displayed in the bar below.

- Press the EXIT or Menu Button to stop the scan at any time.

- Once the Scan is complete the first Station is shown.

Basic Operation

- › Channel Selection
- Use the UP or Down Buttons to go up or down through the channels individually or Press the OK button to display the Channel list.
- Press the LEFT/RIGHT button to Change to the radio channel List.
Press the EXIT button to close the channel list and return to TV viewing.
- If you know the channel number it can be entered in directly using the Numeric Key Pad.



- › Volume Control
- Press the LEFT (VOL-) button to decrease the volume
- Press the Right (VOL+) button to increase the volume
- Press the MUTE button to mute the audio output. Press again to restore audio.

Channel Information

Press the INFO button on the remote control to display the current channel and program information including:

- Current channel name, number and current time.
- Current and Next program name, start and finish time

Press the INFO Button again to see more detailed information about the channel and program as well as signal strength.

Main Menu

- Press the MENU button to access the main system menu.
- Use the LEFT and RIGHT buttons to scroll across to select the Menu Section that you require and then press the OK or DOWN button to access the required Menu Section.
- Press the OK button to confirm any selection or changes made in the Menu or press the EXIT button to return to the previous screen.

Press the MENU button to close the menu button and return the TV screen.

Program



› Program Edit

To edit your program preferences (lock, skip, favourite, move or delete), you will need to enter the Program Edit Menu. This Menu requires a password for access and it is "000000" (6 zeros)

Action	Button	Description
MOVE	RED	Select the channel to move and press the RED button. Use the UP and Down Button to move the channel and then press the OK button to confirm.
SKIP	GREEN	Press the GREEN button to select the channel to be skipped. Press GREEN again to stop the SKIP
LOCK	YELLOW	Use the UP and DOWN buttons to select the channel to LOCK and then press the YELLOW button. Press again to unlock LOCKED channels will require the password to be viewed.
DELETE	BLUE	Use the UP and DOWN buttons to select the channel to DELETE and then press the BLUE button. Press OK to confirm or EXIT to cancel.
FAVOURITE	FAV	Use the UP and DOWN buttons to select the channel to add as a FAVOURITE and then press the FAV button. Use the UP and Down button to select the category to save the channel as and press the OK button to confirm. Multiple categories are possible.
RENAME	MENU	Use the UP and DOWN buttons to select the channel to rename and then press the MENU button. Use the UP/DOWN/LEFT/RIGHT button to select each letter and press the OK button to confirm the letter. Select and confirm the OK button on the screen to save the changes.

Note: Please see "System Setting" section later in this manual for more information on password protection.

› EPG & Scheduling

The EPG is an on-screen TV guide that shows scheduled programs up to seven days in advance for every tuned channel.

- Press the EPG button on the Remote Control to access the guide.
- Use the LEFT and RIGHT buttons to change the channel.
- Use the UP and DOWN button to scroll through the EPG and highlight the program you are interested in. The program information is displayed on the right side of the window. If more than one page of information is available use the YELLOW or BLUE buttons to display the different pages.

Once you have found a program that you are interested in you can set a reminder to view the program or record it if you are not going to be available to watch it.

Press the OK button to Book or Schedule and program.

Use the UP and DOWN buttons to select the option to change and the use then the LEFT or RIGHT button to change it. All fields will default to the details of the program that you have selected.

SELECTION	OPTION	DESCRIPTION
CHANNEL TYPE	TV / RADIO	Choose between TV and Radio
CHANNEL NO	Available Channels	Change the channel to book
CHANNEL NAME	Default	As per Broadcast or edited.
START DATE	Set the date of the booking to commence (MM/DD/YY)	Use the LEFT/RIGHT Button to select the field to change and use the numeric pad to enter the new number.
START TIME	Set the Start Time	Use the LEFT/RIGHT Button to select the field to change and use the numeric pad to enter the new number.
END TIME	Set the End Time	Use the LEFT/RIGHT Button to select the field to change and use the numeric pad to enter the new number
REPEAT	ONCE / DAILY / WEEKLY	Select whether you wish to have the booking repeat every day, every week on the same day or just once.
MODE	VIEW / RECORD	Select to View the program or record it. Recording requires a USB device with enough available space for the recording.

To accept all details as displayed please use the OK button on the remote. Or change the options as described below.

Once a Booking has been made the Schedule screen will be shown with all bookings displayed.

The Status icons:

Green = Booked for viewing

- › * Orange/Red = Booked for recording
- › * Programs are also marked as booked in the EPG.

•

Action	Button	Description
ADD	RED	Press the RED button to Add a booking manually.
EDIT	GREEN	Press the GREEN button to edit the selected booking.
DELETE	BLUE	Delete the selected booking.
EXIT	EXIT	Press the EXIT button to return to the EPG screen

› Sort

Sort your channels from the following options:

Sort type	Description
LCN (LOGICAL CHANNEL NAME)	Sort the channels in ascending order.
ONID	Sort the channels according to ONID
SERVICE ID	Sort the channels according to the station.

› LCN Set LCN to ON or OFF

Picture



The Picture menu allows you to alter the way the display is shown on you TV from the Aspect Ratio to the resolution.

SELECTION	OPTIONS	DESCRIPTION
ASPECT RATIO	16:9 Wide Screen Auto 4:3 Full 4:3 Pan & Scan	Set the best aspect ratio that suits you TV and or picture being displayed.
RESOLUTION	576i; 576p; 720p; 1080i; 1080p@50Hz	Change the output resolution to suit your TV. Not for Composite output.
TV FORMAT	PAL NTSC	Set the colour system used by your TV. If in doubt use the Auto option.

Channel Search

This Menu provides options to adjust the search channel settings.

› Auto Search

Use the RIGHT button or the OK button to start the full Auto search of all TV and Radio channels. This option will delete all previously scanned channels. A full scan can take several minutes.



› Manual Search

This option allows you to scan for new channels without deleting previously saved channels and settings.

Use the LEFT or RIGHT button to select the frequency channel to scan and then press the OK button to start the search.

The quality status bar will indicate the quality of the signal.

› Country

Select your country of residence.

› Antenna Power

Select ON only if an external active antenna is connected

› Search Mode

- FTA
- FTA + Scrambled

Time

Set the time zone for your area of residence.

Time Offset

- AUTO: Sets GMT Offset based on Country Region.
- MANUAL: Requires the GMT offset to be set manually and disables the Country Region option.

› Time Zone

Set the GMT offset when Time Offset option is set to manual. Use the LEFT and Right buttons to select the Offset for your region.

› Sleep

The Sleep option allows you to set a time that the STB will automatically turn off from the last input from the remote control. Options are 1 to 12 hours set in 1 hour increments. OFF disables the Sleep feature.

Option

› OSD Language

Sets the language used by the display. Use the LEFT/RIGHT buttons on the remote, until the desired Language is displayed and then press the DOWN button.



› Subtitle Language

Sets the language used by the subtitles. Use the LEFT/RIGHT buttons on the remote, until the desired Language is displayed and then press the DOWN button.

Note: Only available if chosen subtitle language is being transmitted.

Audio Language Set the preferred audio language for watching TV channels. If the language is not available, the default program language will be used.

Note: Only available if chosen Audio language is being transmitted.

› Digital Audio

Set the Digital audio output of the media player.

Options are: PCM, RAW or OFF. Please refer to your Audio equipment documentation for the best setting for your equipment. Most TVs will use the RAW setting.

› Audio Description

It is a form of narration used to provide information surrounding key visual elements in a media work (such as a film or television program, or theatrical performance) for the benefit of blind and visually impaired consumers.



System

The menu provides options to adjust the system settings.

› Parental Guidance

Select the parental level you desire for disc with lock-out function or multiple rating levels.

Note: This feature requires a password to access and allows viewing to be restricted via password for programs that are outside the restrictions.

› Set Password

Set or change the password for locked programs.

Input Old Password: Use the Numeric keypad to enter the old password.

Input New Password: Use the Numeric keypad to enter the New password.

Confirm Password: Use the Numeric keypad to enter the New password to confirm.

Note: The Default password is "000000"

› Restore Factory Defaults

WARNING Restoring Factory Defaults will remove all saved channel information and settings. All Scheduled recordings will be deleted. Please use with care.

- Press the OK button to begin and then enter the password.

- Press the OK button to confirm or press the EXIT button to return to the previous screen without Restoring Defaults.



› Information

Displays the current information about Model, Hardware and Software version numbers.

› Recall List

Turn On/Off the recall list

USB

The USB settings menu allows you to change the way the STB displays multimedia from USB devices as well as managing the device itself.

› Multimedia

When a USB device is attached you can select from the Music, Photo or Movie options in this menu using the RIGHT/LEFT keys and OK to select. If a USB device is not connected, the warning message "Not Find Any USB Device" will appear.



› Photo Configure

Use the Right button to enter the Photo configuration menu and set the available options as required.

SELECTION	OPTIONS	DESCRIPTION
SLIDE TIME	1 to 8 seconds	Set the number of seconds to display each picture.
SLIDE SHOW	1 to 59 Random	Set the Slide Show Effect to a fixed type or set to Random effects.
ASPECT RATIO	KEEP DISCARD	Use KEEP to show picture in original format or DISCARD to have images Fit the Screen.

› Movie Configuration

Use the Right button to enter the Movie configuration menu and set the available options as required.

SUBTITLE SPECIFIC	<ul style="list-style-type: none">• Small• Normal• Big	Sets the size of the Subtitles for Movie playback
SUBTITLE BG	<ul style="list-style-type: none">• Transparent• Gray• Yellow/Green• White	Sets the background colour used for subtitles during movie playback
SUBTITLE FONT COLOUR	<ul style="list-style-type: none">• White• Black• Red• Blue• Green	Sets the font colour used to display subtitles during movie playback.

Note: This option requires the presence of subtitle files to be included in the same directory as the movie files.

› Record Device

This screen Display information about the connected USB device including

- Device File System
- Total space on device
- Free Space on Device

This feature is useful for deciding if a device has enough room to record a program.

› Format

The Format feature allows you to format the attached USB device. Use the LEFT or RIGHT button to select the File System used to format the device.

- FAT32 NTFS

With the selection made press the OK button to start and then again to confirm the format. Time taken to complete this action will vary on size and type of attached device.

Note: Great care should be used when formatting attached devices. Once the format process is started it cannot be stopped and all data on the device will be lost and cannot be recovered.

Multimedia Playback

To play back record programs or view media from USB drives MENU, go across to the USB MENU and select MEDIA PLAYER. Use the LEFT or RIGHT button to select the type of media to access then press the OK button to select.

› Music

In the MUSIC Menu, navigate to the folder on the USB device that contains the music files to play. Select the file and press the OK button to begin playback. Track and playback information are displayed on the right.

› Photo

In the Photo Menu, navigate to the folder on the USB device that contains the picture files to view. Select the file and press the OK button to view an individual image or press the PLAY button to begin a Slide Show of all images in the current folder.

› Movie

In the Movie Menu, navigate to the folder on the USB device that contains the Video files to view. Select the file and press the OK button. Playback of the selected video file will start on the right. Press the RED button to change the video to full screen.

› PVR

In the PVR Menu, navigate to the folder on the USB device that contains the Recorded files to view. By default, the system will create a folder called PVRRECORD on a USB device when the first recording starts. All subsequent recordings will be saved to this folder automatically.



Simple Program Recording

Press the REC Button on the remote control to record the current program. Recording will start from the moment the REC button pressed. Press the STOP button to end the recording. Recorded files can be viewed through the PVR menu.

NOTE: this function requires a USB drive to be connected with enough room to record the program.

Time Shifting Live TV

While watching a TV broadcast it is possible to pause the image and then start the playback a few minutes later. Press the PLAY/PAUSE button on the remote to pause the image. When you are ready press the PLAY/PAUSE button again to resume viewing.

GENERAL INFORMATION

The Status bar on the bottom of the screen will indicate how far behind your viewing time is in relation to the actual broadcast.

Up to 1 Hour can be reviewed in this feature.

- › Use the REV and FWD buttons to fast forward or Rewind the image.
- › Press the YELLOW button to enter a specific time to jump to.
- › Press the STOP to end the time shifting and then press the OK button to confirm.
- › NOTE: this function requires a USB drive to be connected with enough room to allow the Time Shift Function to work.

Connecting a USB Device

In most cases connecting a USB FLASH drive will be a matter of simply plugging it in to the USB port on the unit.

- › Please remember that HD TV requires a large amount of space to record.
- › Please allow approximately 4GB per hour if recording HD programs. Less space will be required for lower resolution programs.

Connecting a 2.5" (Notebook) Hard Drive

It is recommended that 2.5" drives are connected to the unit using a powered USB hub. Only single partition drive should be used.

- › Due to the power requirements of some USB drives, the USB port on this device may not be able to power the drive.

Please ensure that the drive is formatted in FAT32 or NTFS before recording.

›

Problem	Possible Cause	Solution
No Picture	Power is not connected	Connect the power and make sure unit is turned on.
Screen Shows "No Signal"	Antenna cable is not connected	Check the antenna connection to the rear of the STB
No sound	No or incorrect audio cable connections	Check connections of audio cables
	Sound is muted	Un-Mute audio
No picture but sound OK	No or incorrect Video cable connections	Make sure cables are connected correctly.
Remote Control is not responding	Batteries are flat	Replace.
Picture is breaking up	Signal is too weak	Check antenna connection.
USB device is not detected	Not powered correctly	Check power source (if fitted) or reconnect.
Movie Playback out of sync	Faulty file	Check file to ensure not encoding issue
	File is too large for STB	Re-encode file at lower resolution and/or data rate

Specifications

TUNER

- › INPUT FREQUENCY: 170~230MHz 471~860MHz
- › RF INPUT LEVEL: -25~-82dBm
- › IF BANDWITCH: 7MHz & 8MHz
- › MODULATION: QPSK, 16QAM, 64QAM

VIDEO

- › DECODER FORMAT: MPEG4 AVC/H.264 HP@L4
MPEG2 MP@ML.HL
- › OUTPUT FORMAT: 576p, 720p, 1080i, 4:3 & 16:9
- › OUTPUT PORT: HDMI (V1.4), cvbs

AUDIO

- › SUPPORTTED CAPACITY: 750GB
- › SUPPORTED MEDIA: AVI, DIVX

POWER

- › SUPPLY VOLTAGE: 220~240VAC 50/60Hz
- › MAXIMUM POWER CONSUMPTION: 6W
- › STANDBY POWER CONSUMPTION: <1W

12 month warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

WARNING › Do not dispose of unit in fire or water. › Never attempt to disassemble and reassemble
Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. Check with your local authority for recycle advice. › Keep your device and all accessories out of reach of children and animals. Small parts may cause choking or serious injury if swallowed. › Avoid exposing your device to very cold or very hot temperatures (below^o-10 C or above 45°C). › Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. › Do not allow your device to get wet, liquids can cause serious damage. Do not handle your device with wet hands.