

# Assembly Instructions

## 43229079 OWEN WARDROBE WIDE HANGING RAIL WITH STORAGE SHELF
















**WARNING:** DO NOT STAND, SIT OR LEAN ON THIS UNIT. DO NOT USE THIS UNIT AS A STEP LADDER OR AS A CHOPPING SURFACE. KEEP AWAY FROM CHILDREN AND BABIES. ADULT ASSEMBLY REQUIRED. USE ONLY ON A FLAT SURFACE. ADULT ASSEMBLY REQUIRED. DO NOT USE THIS UNIT UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED.

**CARE INSTRUCTIONS:** TO BE ASSEMBLED ON A CLEAN, DRY AND SMOOTH SURFACE. WIPE CLEAN WITH A SOFT DAMP CLOTH. NEVER USE SCOURERS, ABRASIVES OR CHEMICAL SOLVENTS. CHECK AND TIGHTEN ALL PARTS REGULARLY. KEEP AWAY FROM MOISTURE AND DIRECT SUNLIGHT. STORE IN A DRY PLACE. FOR INDOOR AND DOMESTIC USE ONLY.

 
**MAXIMUM SAFE LOAD: 15KGS FOR CLOTH RAIL, 7.5KGS FOR BIG SHELF, 5KGS FOR SMALL SHELF.**

①

### Hardware List

 
 
 
 
 

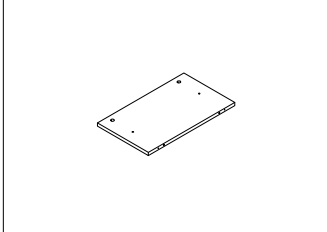 
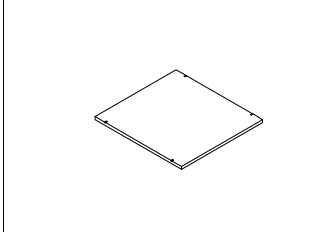 
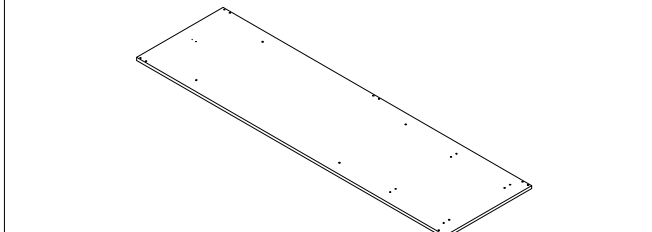 
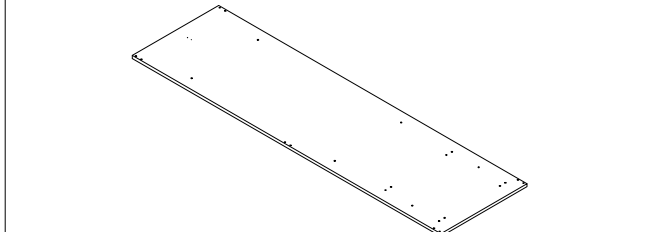 
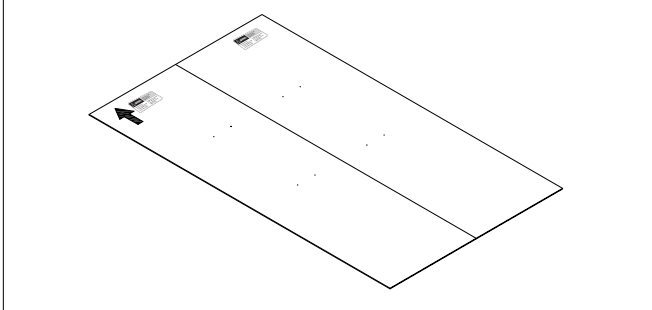 
	A	M6x35mm	22pcs
	B	Ø15x9.5mm	22pcs
	C	Ø6x30mm	32pcs
	D	M6x50mm	4pcs
	E	M5x60mm	8pcs
	F		2pcs
	G	M4x12mm	4pcs
	H	M2x16mm	30pcs
	I	M4x12mm	8pcs
	J		1pc
	K	M4x35mm	2pcs
	L		4pcs
	M	M4x12mm	2pcs
	N	M4x35mm	2pcs
	O	M4x14mm	4pcs

②

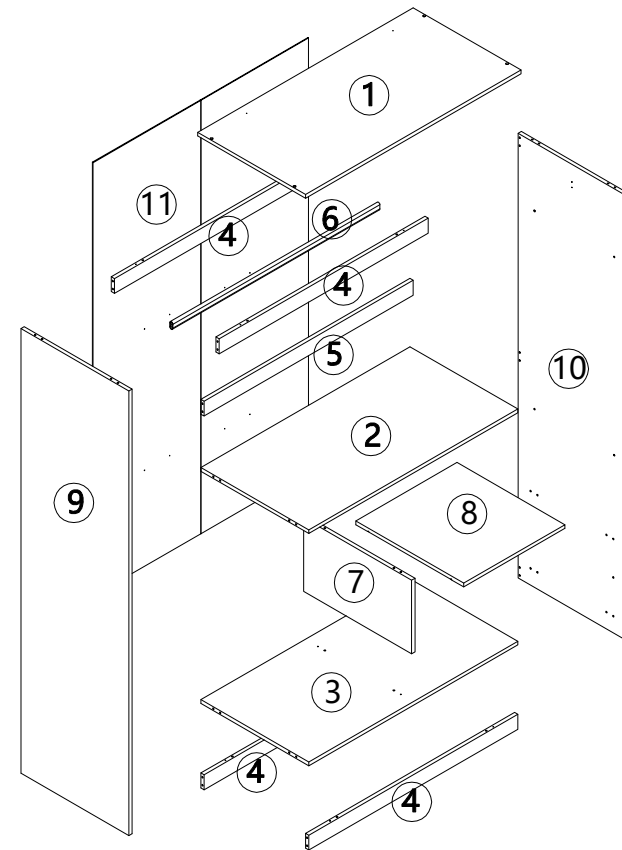




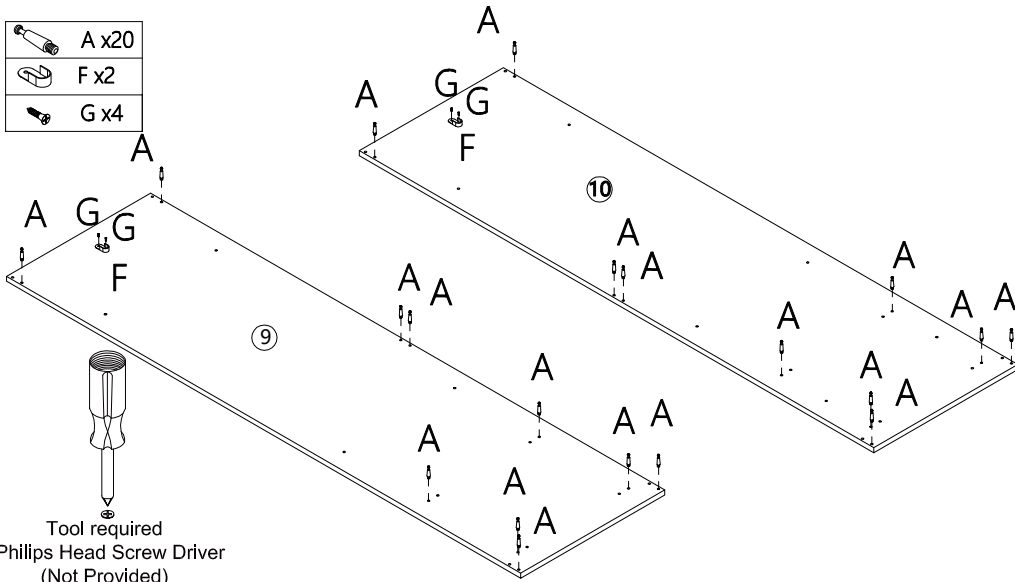 
Do not tighten the screws fully during assembly.  
Fully tighten screws after the final assembly steps

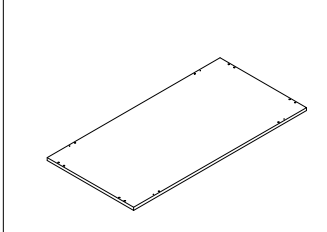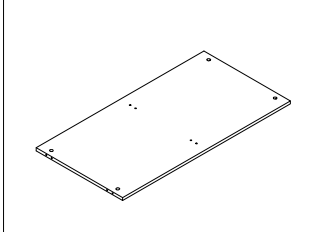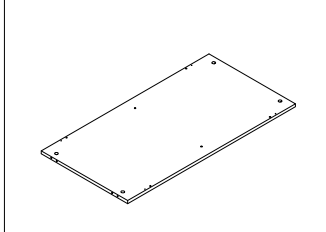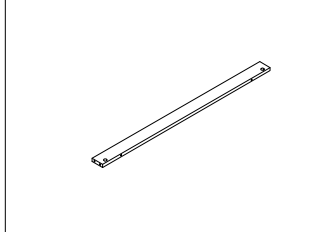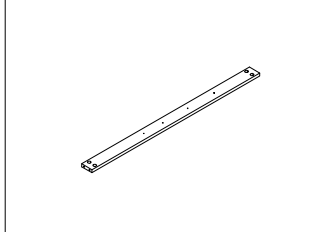3




											
①	1PC	②	1PC	③	1PC	④	4PCS	⑤	1PC	⑥	1PC
											
⑦	1PC	⑧	1PC	⑨	1PC	⑩	1PC				
											
⑪	1PC										


### STEP 1:

 -  A x20
-  F x2
-  G x4






### STEP 2:

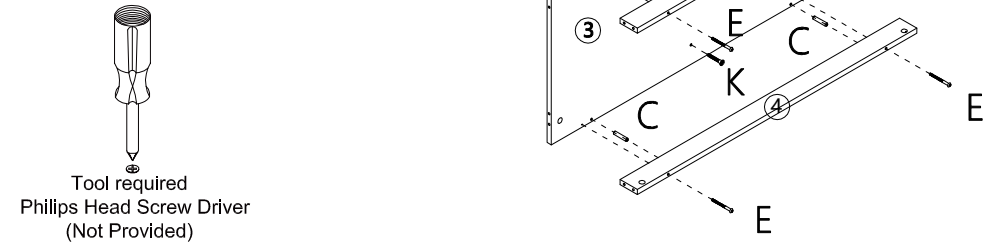-  A x2
-  B x2
-  C x8
-  E x4
-  K x2



 
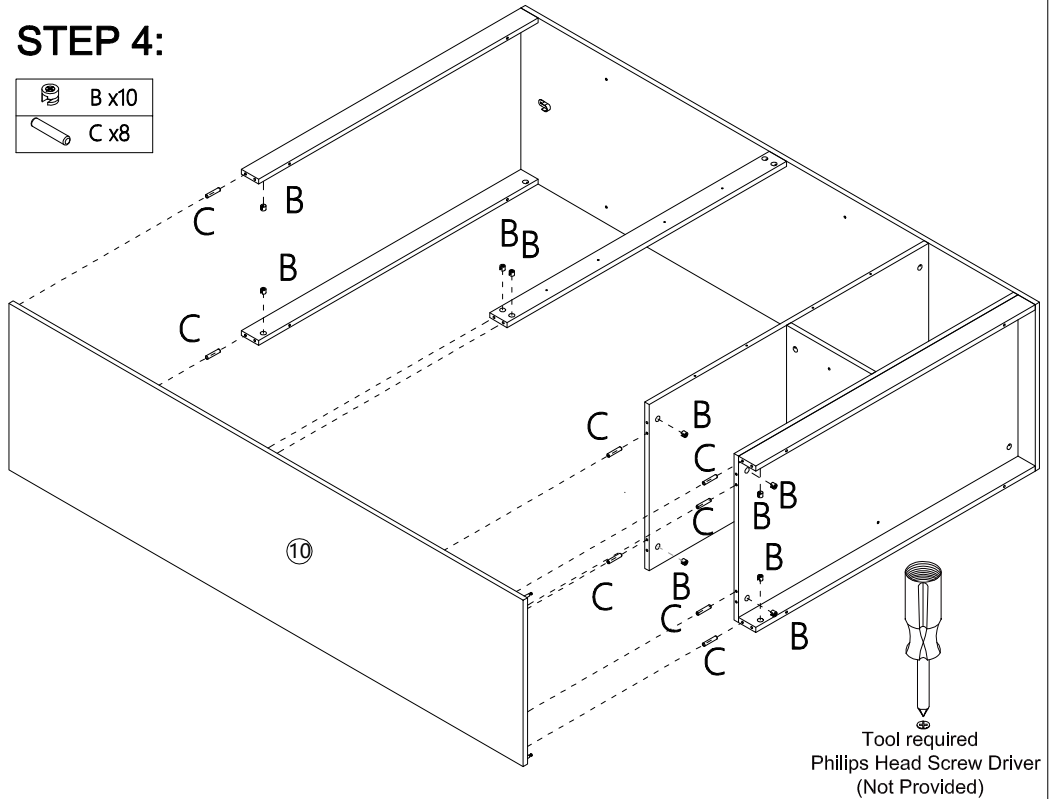 
### STEP 3:

-  B x10
-  C x8

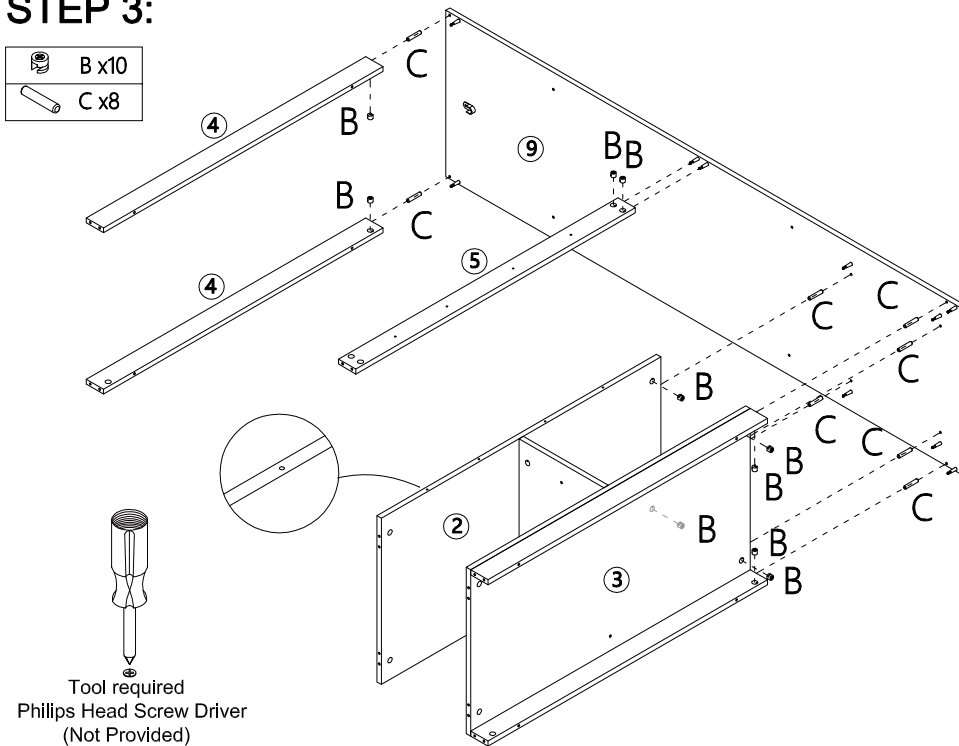


### STEP 4:

 -  B x10
-  C x8




### STEP 5:

- C x8
- D x4
- E x4

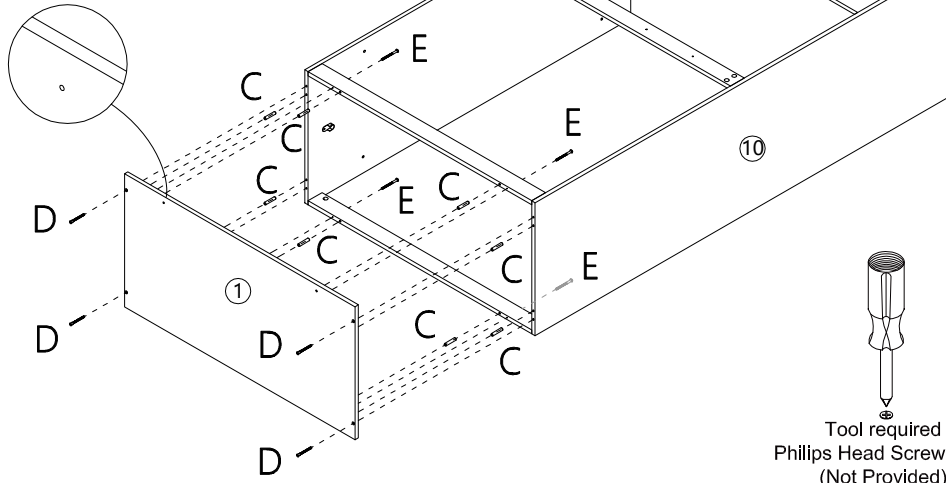


### STEP 6:

 - H x30

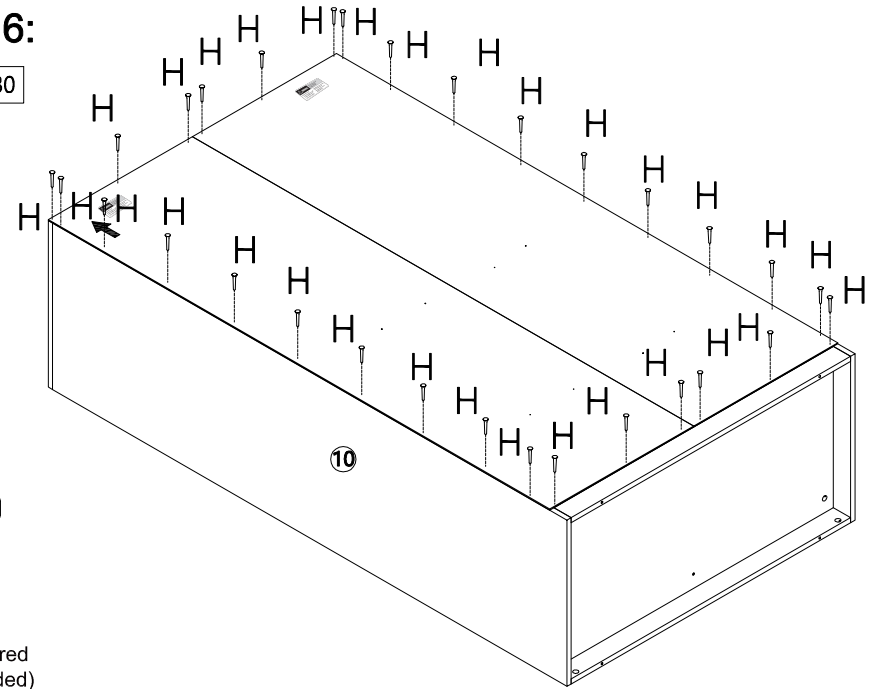


### STEP 7:

 - I x8

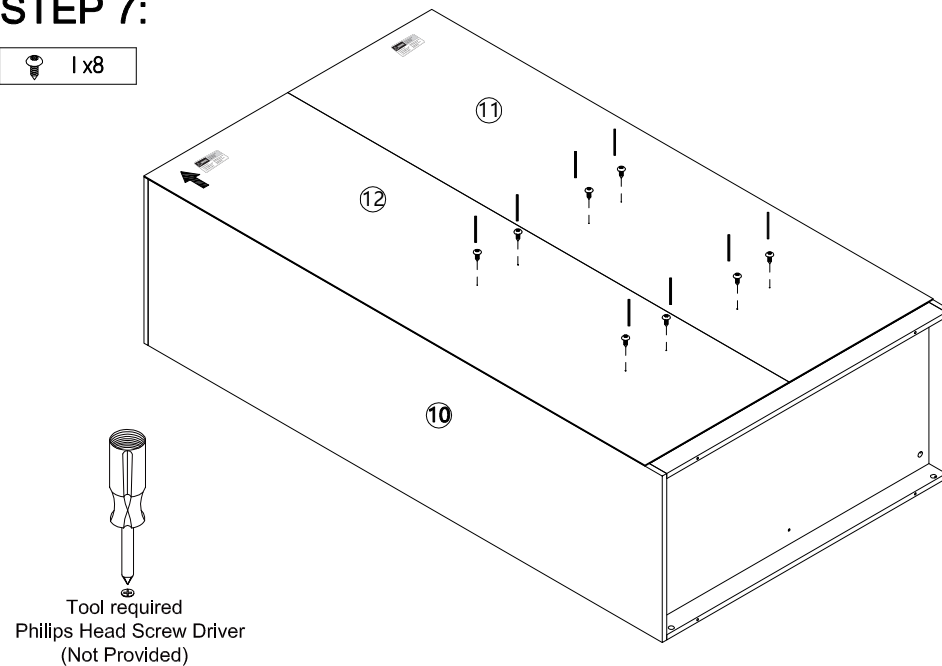



### STEP 8:

 - L x4
- M x2

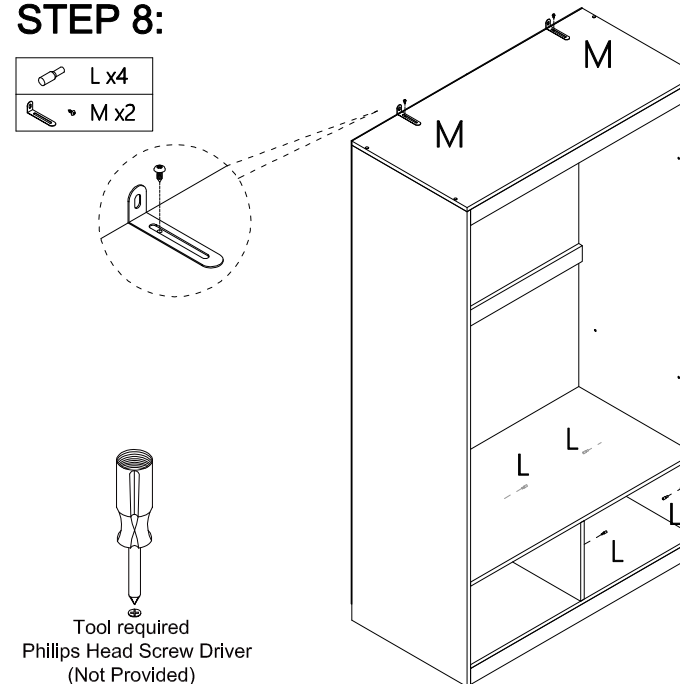

## STEP 9:

  ↖ ↗ N x2

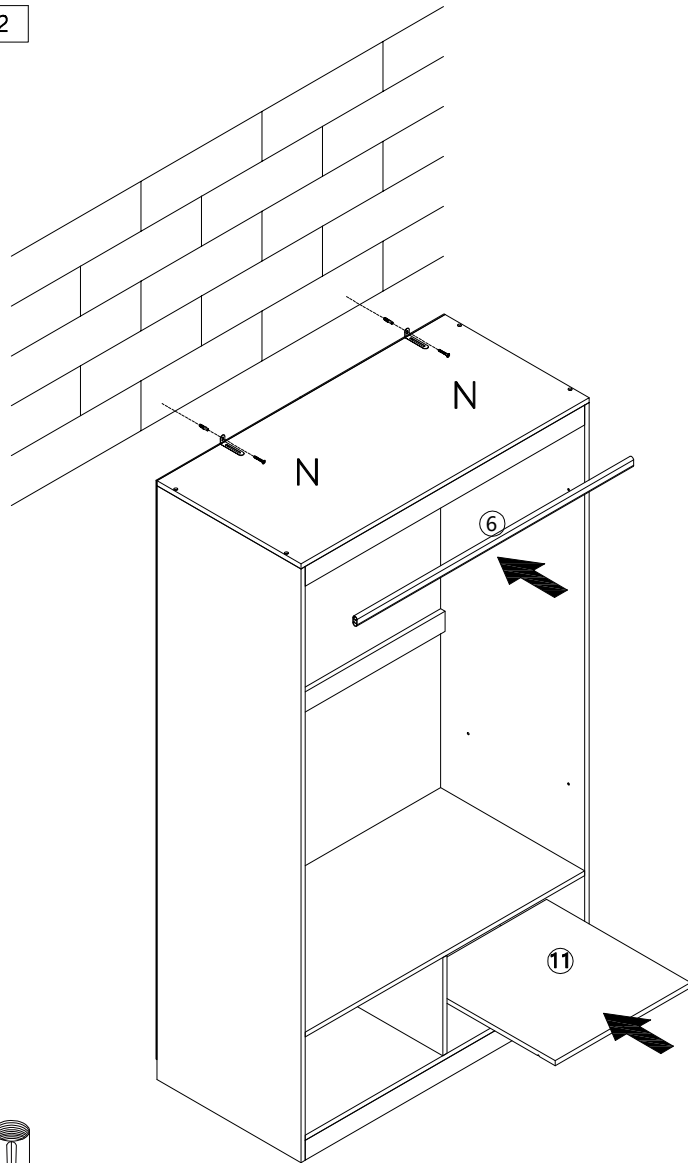


Tool required  
Philips Head Screw Driver  
(Not Provided)

User instructions should include the wording:

- It is strongly recommended that this product is permanently fixed to the wall.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture .

**CAUTION:** for your safety when attaching the anchor fixings, please note the following:

 - Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).

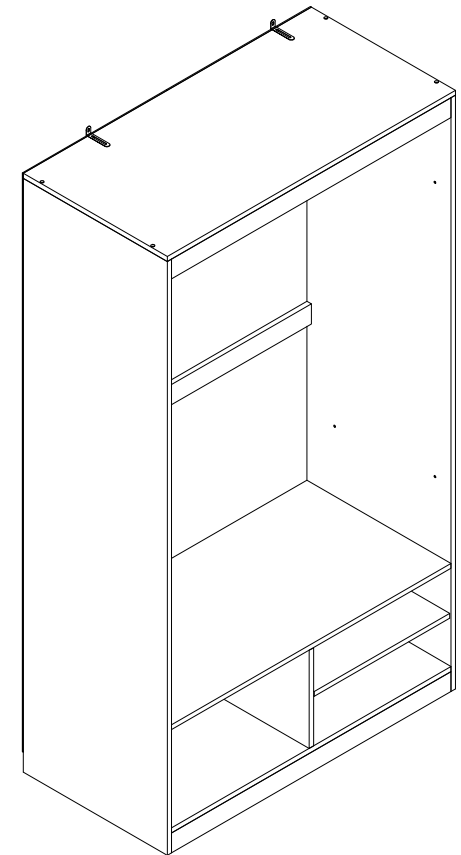


WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.



  O X4

 If you want to connect wardrobes 43229079 & 43229062 & 43229017 together, you can use a 5mm drill bit to drill through the hole and then use the screw "O" to connect the wardrobes together

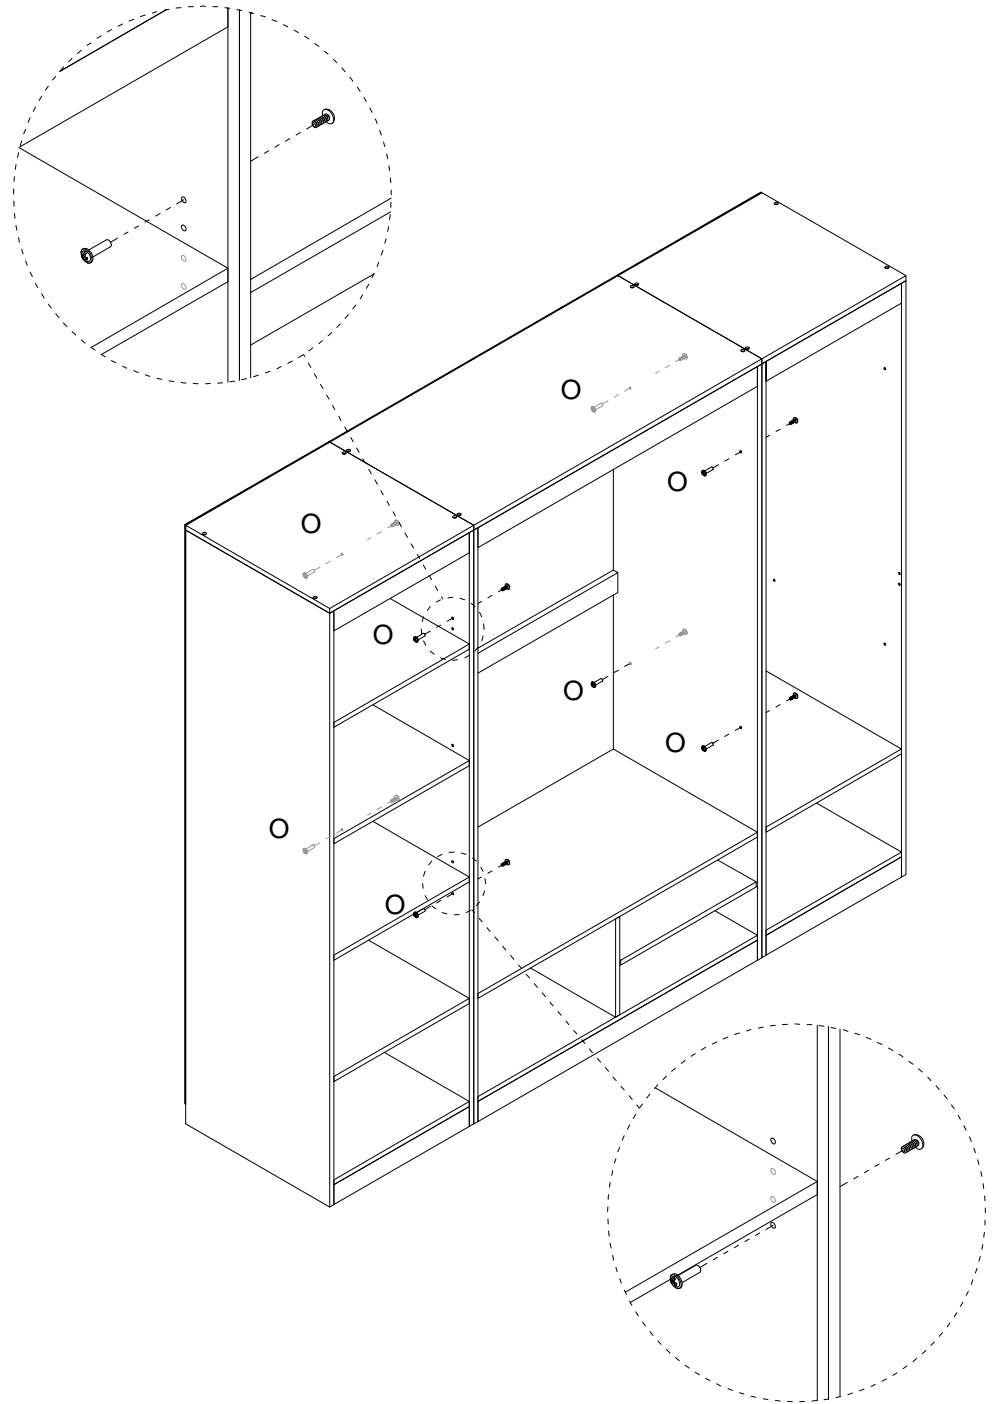

Tool required  
(Not Provided)