

READ ME FIRST

Oil Column Heater

Please read these instructions & user manual carefully.

1. Keep all objects at least 1 metre from the front, sides and rear of the heater. Do not place appliance close to radiant heat source.
2. Never cover this heater. Covering the heater will cause activation of the non resettable safety fuse.
3. It is recommended that this appliance is plugged directly into the wall socket. Power boards are not rated to supply power to high wattage appliances.
4. A correctly specified, undamaged extension cord may be used with this appliance provided it is used in a safe manner.
5. Do not dispose of packaging until completely satisfied with your purchase.

PLEASE NOTE: If this product is fitted with a timer, the timer has been set to the "ON" position. Please refer to the timer section for setting instructions.

Please refer to your user manual for operating instructions, further information or trouble shooting before you call the Customer Service number listed within the user manual.

anko

11 Fin Digital Oil Column Heater Instruction Manual



AOHD11

Rev 04

To ensure proper operation of this device, please read this instruction manual carefully before using the device and keep it for further reference.

General Care and Safety Guide

YOUR SAFETY IS IMPORTANT TO US. PLEASE ENSURE YOU TAKE NOTE OF THE INSTRUCTIONS AND WARNINGS OUTLINED IN THIS MANUAL.

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they are supervised or have been given instruction concerning the use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

WARNING: You must not cover this appliance. Covering this appliance presents fire risk and will activate the safety fuse; permanently disabling the unit.

WARNING: Do not use this appliance in small rooms when they are occupied by persons not capable of leaving the room on their own unless constant supervision is provided.

WARNING: To reduce the risk of fire, keep textiles, curtains, or any flammable material a minimum distance of 1 metre from the air outlet.


- Use only the voltage specified on the rating label of the appliance.
- Keep all objects at least 1 metre from the front, sides and rear of the appliance.
- This appliance is intended for household use only and not for commercial or industrial use.
- Indoor use only.
- Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.
- Do not use the appliance if it has been dropped or damaged.
- The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills.
- Never use the appliance to dry clothes.
- Always unplug appliance when not in use.
- When the appliance has been unpacked, check it for transport damage and ensure all parts have been delivered. If parts are missing or the appliance has been damaged, contact Kmart Customer Services Team.
- Do not use if there are visible signs of damage to the appliance.
- Do not connect the appliance to mains supply until completely assembled and adjusted.

- Ensure hands are dry before handling the plug or main unit.
- Ensure appliance is on a flat, stable, heat-resistant surface.
- Do not operate with cord set coiled up as a heat build up is likely, which could be sufficient to become a hazard.
- Carry out regular checks of the supply cord to ensure no damage is evident
- Do not operate this appliance with a damaged cord, plug or after the appliance malfunctions or has been dropped or damaged in any manner. Take to a qualified electrical person for examination, electrical service or repair.
- Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that all cord has been removed from any cord storage area and is unrolled before use.
- It is recommended that this appliance is plugged directly into the wall socket. Power boards are not rated to supply power to high wattage appliances.
- A correctly specified, undamaged extension cord may be used with this appliance provided it is used in a safe manner.
- Do not remove plug from power socket until the appliance has been switched off.
- Do not remove plug from power socket by pulling cord; always grip plug.
- Do not place cord under carpet or cover with rugs or furniture. Arrange the cord so it cannot be tripped over.
- Don't place appliance on bedding or on thick & long carpet where the openings may get blocked.
- Switch off and use handle provided when moving
- Do not place appliance close to radiant heat source.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
- Do not sit on the appliance.
- Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.
- Do not operate in areas where petrol, paint or other flammable liquids are used or stored.
- Do not use this appliance in the immediate surrounds of a bath, a shower, or a swimming pool or other liquids.
- The appliance must not be immersed in any liquids.
- There are no user serviceable parts installed in the unit.
- Do not place the unit in wardrobes or other enclosed spaces as this may cause fire hazards.
- This unit is not supposed to be used in or around locations where foodstuffs, works of art or delicate articles of science, etc. are stored.
- This appliance shall not be located immediately below socket-outlet.
- If your appliance does not work or is not working properly, return the product to Kmart.

COMPONENTS



Main Body x1

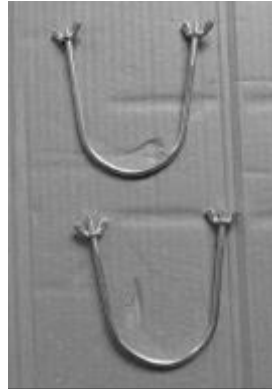

U-shape Bolt x2

Wing Nut x 4



11 Fin Castor Plates x2



Castor Wheels x4




Remote Control

DIAGRAM



1. Carry handle	4. Cord Storage
2. Display	5. Radiant fins
3. Control panel	6. Castor Wheels
7. Main Power Switch	

ASSEMBLY

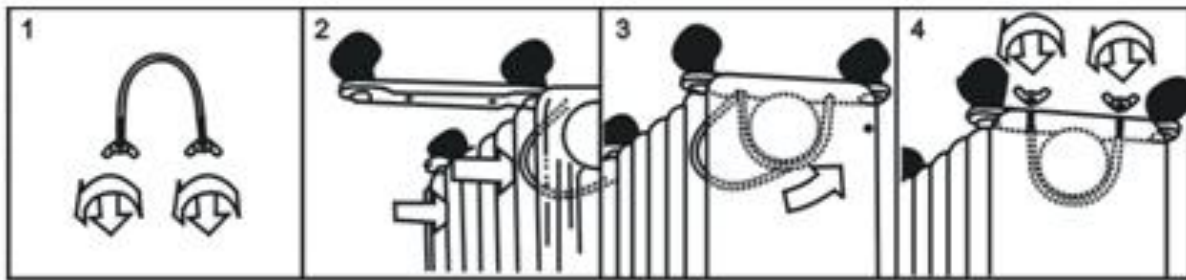

1. Remove the dome nut from the castors, fit castor thread through the castor mounting plate. Replace dome nut and tighten.
2. Place the heater body upside-down on a scratch-free location, make sure it is stable and will not fall. Be careful to prevent damage to the cosmetic finish or your floor surfacing.
3. Unscrew the wing nuts from the U-shaped bolt provided, fit the U-shaped bolt over the connector between control panel and second fin.
4. Insert the threaded ends of the U bolt in the holes on the straight castor plate.
5. Screw the wing nuts back to the U bolt and tighten the wing nut securely.

Note: do not over-tighten, which may cause damage to the heater.

6. Repeat steps 3, 4 and 5 on the rear of the heater for mounting of the rear castors.

Note: the rear castors must be mounted between the end two fins.

IMPORTANT: Please fit the wheel assemblies as per the diagram. Any other position may affect the stability of the heater.

WARNING: Only operate the heater in normal upright position with wheel assemblies attached to the bottom, any other position could create a hazardous situation.



Operating your Heater

Always choose a safe location for the heater, keeping in mind the safety precautions outlined. Ensure all packaging has been removed from the unit before use. Please follow the below instructions.

WARNING: In order to avoid overheating or fire, do not cover the heater.

WARNING: Keep all objects at least 1 metre from the front, sides and rear of the appliance.

WARNING: Do not use this heater with a programmer, separate timer, remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.

WARNING: Never leave this heater unattended when in use.

Ensure heater is on a flat, stable, heat-resistant surface.







Once the heater is in a safe operating position and all switches are in the off position, insert the power plug into the mains outlet and switch on the main power switch (located on the



side panel of the heater).

CAUTION: Ensure the power cord is not tight because if pulled it may partially pull the plug from the socket. A partially inserted plug will overheat the plug and socket and could result in fire.


CONTROL PANEL

-  Low Power Level (1000W)
-  Medium Power Level (1400W)
-  High Power Level (2400W)
-  Heating Mode
-  Timer Mode
-  On/Off Switch



Check that the main power switch is set to Off position before plugging the heater into the mains supply.

Once plugged in, turn on the main power switch to enter standby mode.

 : Press the On/Off Switch button to start operation. The heater will enter the default setting, which is High Heat setting and 25°C. Press it again to stop operation and set the heater into standby mode.

Mode: Use this button to set the power level. For greater economy, use the High Heat setting initially and then switch to the Low Heat setting.

Timer: Use this button to set the timer.

[+] and [-]: use these buttons when setting the desired temperature.

REMOTE CONTROL

POWER: Press the Power button on the remote control after plugging into power and turning on the main power switch to start operation, or press it again to stop operation and set the heater into standby mode.

MODE: use this button to set the power level.

TIMER: use this button to set the timer. Each press will adjust the length of time that the timer is set for.

[^] and [v]: use these buttons when setting the desired temperature.



SETTING THE TEMPERATURE

The heater has a thermostat which enables you to set the temperature from 15°C to 35°C. Once a temperature has been set, the heater will remain on until the room temperature has reached the temperature on the digital display. The thermostat will then cycle on and off to maintain the set room temperature.

1. Power on the heater by the main power switch on the side of the unit. The heater will enter standby mode and the display will illuminate with the default setting. Press On/Off button to start operation. Press the mode button to set the desired power level. The desired temperature and power level will be shown on the screen.
2. Use the [+ or ^] and [- or v] buttons to set the desired temperature, from 15°C to 35°C. While the heater is warming up the room, the heat level symbol will show on the display until the set temperature has been reached. The heater comes on again when the room temperature drops below the desired temperature.
3. Use the [+ or ^] and [- or v] buttons to change the desired room temperature at any time.

SETTING THE TIMER

When the heater is turned on, you can set the timer to switch off the appliance automatically after a certain period of time (1 to 12 hours from the time the function is set).

1. Power on the heater by the main power switch on the side of the unit. The heater will enter standby mode and the display will illuminate with the default setting. Press On/Off button to start operation. Press the Timer button to set the desired heater operation time (between 1 and 12 hours). The display will show the number of hours set on the screen.
2. The heater will cycle on and off as per the set temperature setting and discontinue operation when the set time has run out.

Example: It is now 4pm. The heater is on and you want it to shut off at 11pm automatically. Set the timer-off function to 7 hours: the heater will cycle on and off to maintain the set temperature. It will stop operating at 11pm and go into standby mode. It is recommended to unplug the heater from the wall outlet when the heater is not in use.

SAFETY DEVICES

This appliance has three protection devices:

- Tilt Switch - this will automatically turn the appliance off if the appliance is not in the correct operating position.
- Resettable Thermal Protection - this will automatically disconnect the power to the appliance at a pre-set overheat temperature. After cooling down it will reset and power back on again. If this occurs, investigate what is causing the appliance to overheat.
- Thermal Fuse - this disconnects the appliance permanently in case of overheating. (It is non resettable).

CAUTION: The appliance generates heat during use. Precautions must be taken to prevent the risk of burns, scalds, fires or other damage to persons.

CARE AND CLEANING

The heater requires regular cleaning to ensure trouble free operation:

- Unplug the heater from the mains supply before cleaning.
- Ensure that the heater has been allowed to cool down completely before cleaning.
- The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills.
- Use a damp cloth (not wet) to wipe the exterior of the heater to remove dust and dirt.
- Never use solutions such as petrol, thinners or polishing agents.
- Ensure the heater is dry before plugging back into the mains supply.
- Do not attempt to dismantle the heater.
- There are no user serviceable parts. For service or repair, contact an authorised electrical service technician.

This heater is filled with a precise quantity of special oil. If there is an oil leak, do not use. When scrapping the heater, follow local council regulations concerning disposal of oil.

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.