

anko

2000W Panel Heater Instruction Manual



APH200

Rev 03

To ensure proper operation of this device, please read this instruction manual carefully before using the device and keep it for further reference.

General Care and Safety Guide

YOUR SAFETY IS IMPORTANT TO US. PLEASE ENSURE YOU TAKE NOTE OF THE INSTRUCTIONS AND WARNINGS OUTLINED IN THIS MANUAL.

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they are supervised or have been given instruction concerning the use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

WARNING: You must not cover this appliance. Covering this appliance presents fire risk and will activate the safety fuse; permanently disabling the unit.

WARNING: Do not use this appliance in small rooms when they are occupied by persons not capable of leaving the room on their own unless constant supervision is provided.

WARNING: To reduce the risk of fire, keep textiles, curtains, or any flammable material a minimum distance of 1 metre from the air outlet.

WARNING: Do not use this heater with a programmer, separate timer, remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.

WARNING: Never leave this heater unattended when in use.

- Use only the voltage specified on the rating label of the appliance.
- Keep all objects at least 1 metre from the front, sides and rear of the appliance.
- This appliance is intended for household use only and not for commercial or industrial use.
- Indoor use only.
- Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.
- Do not use the appliance if it has been dropped or damaged.
- The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills.
- Never use the appliance to dry clothes.

 
- Always unplug appliance when not in use.
- When the appliance has been unpacked, check it for transport damage and ensure all parts have been delivered. If parts are missing or the appliance has been damaged, contact the Customer Services Team.
- Do not use if there are visible signs of damage to the appliance.
- Do not connect the appliance to mains supply until completely assembled and adjusted.
- Ensure hands are dry before handling the plug or main unit.
- Ensure appliance is on a flat, stable, heat-resistant surface.
- Do not operate with cord set coiled up as a heat build up is likely, which could be sufficient to become a hazard.
- Carry out regular checks of the supply cord to ensure no damage is evident
- Do not operate this appliance with a damaged cord, plug or after the appliance malfunctions or has been dropped or damaged in any manner. Take to a qualified electrical person for examination, electrical service or repair.
- Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that all cord has been removed from any cord storage area and is unrolled before use.
- It is recommended that this appliance is plugged directly into the wall socket. Power boards are not rated to supply power to high wattage appliances.
- A correctly specified, undamaged extension cord may be used with this appliance provided it is used in a safe manner.
- Do not remove plug from power socket until the appliance has been switched off.
- Do not remove plug from power socket by pulling cord; always grip plug.
- Do not place cord under carpet or cover with rugs or furniture. Arrange the cord so it cannot be tripped over.
- Don't place appliance on bedding or on thick & long carpet where the openings may get blocked.
- Switch off and allow unit to cool down before moving
- Do not place appliance close to radiant heat source.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
- Do not sit on the appliance.
- Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.
- Do not operate in areas where petrol, paint or other flammable liquids are used or stored.
- Do not use this appliance in the immediate surrounds of a bath, a shower, or a swimming pool or other liquids.
- The appliance must not be immersed in any liquids.
- There are no user serviceable parts installed in the unit.

- Do not place the unit in wardrobes or other enclosed spaces as this may cause fire hazards.
- This unit is not supposed to be used in or around locations where foodstuffs, works of art or delicate articles of science, etc. are stored.
- This appliance shall not be located immediately below socket-outlet.
- If your appliance does not work or is not working properly, return the product to Kmart.

COMPONENTS

Before using this appliance, it must either be wall mounted or have the feet fitted. The screw pack to attach the feet to your appliance will be taped to either one of the feet for your appliance, or taped to the plug.

This appliance has been supplied with '1 way screws' for permanent installation of the feet. This is a safety requirement for the New Zealand and Australian market.

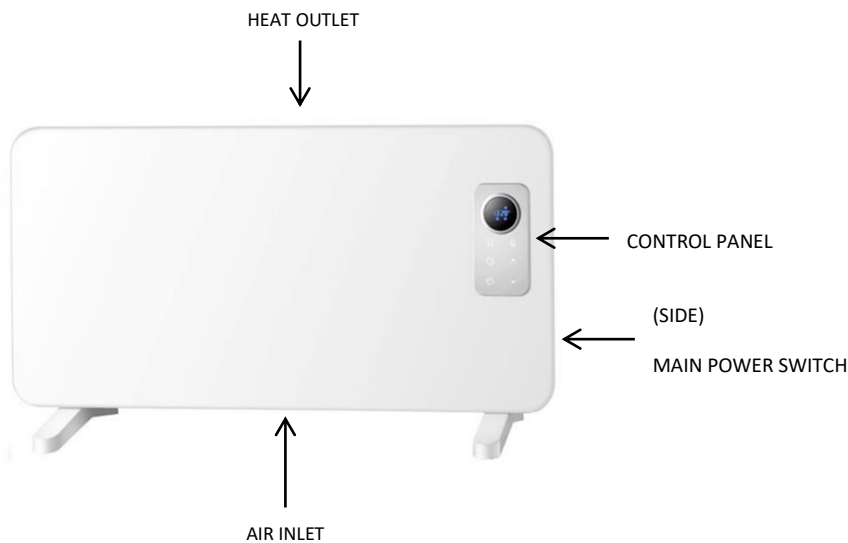

FEET x 2

FREE STANDING SCREW PACK:
8 x SCREWS including ONE WAY SCREWS TO
ATTACH FEET

WALL MOUNTING SCREW PACK
4 x LONG SCREWS and 4 x WALL PLUGS



REMOTE CONTROL

The remote will operate all of the controls the same as the control panel.

This remote requires 2 x AAA batteries which are not included in the box.

 


FREE STANDING

Ensure the appliance is unplugged and power switches are off.

Carefully turn the Main Body upside-down on a scratch-free and stable surface. Be careful to prevent damage to the cosmetic finish or your floor surfacing.

Align the screw hole on the Feet Bracket with the screw hole on the base of the appliance. Attach feet with the screws provided and ensure the bracket sits firmly in place (do not over tighten). 1 x one-way screw should be used on each foot.

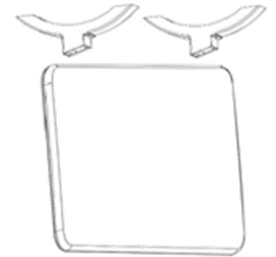


Set appliance upright and plug into a standard 230-240V electrical outlet.

WALL MOUNTED

Make sure the appliance is unplugged and power switches are off.

 Position the panel appliance within one metre of a wall socket. Do not mount in front of or below the wall socket. Ensure there is at least 1m clearance from the top of the appliance, and 100mm clearance on the sides and bottom of the appliance.

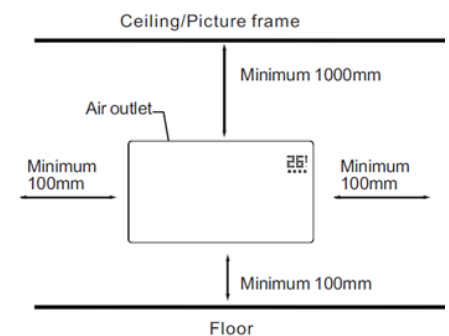

Assemble the bracket with the screws provided – see image 1, step 1.

Position the mounting screws on the wall per below mounting guide and check they are horizontal with a spirit level. Ensure the bottom of the heater is at least 100mm from the floor and drill holes as required. Fix the bracket to the wall – see image 1, step 2.

Slot the back of the appliance onto the mounting screws – see image 1, step 3. The bottom mount is on there to keep the heater at the correct distance from the wall. You do not need to put a screw in the bottom mount. Tighten the screws on top of the bracket after heater is mounted – see image 1, step 4.

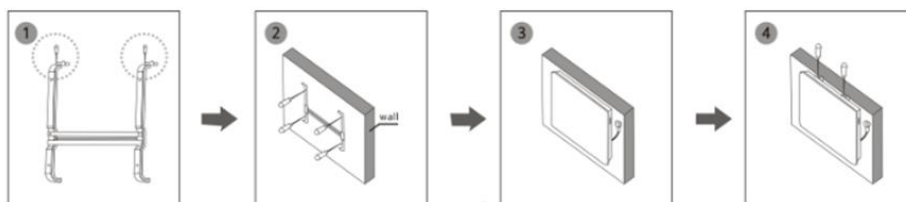 


Image 1

Operating your Heater

Always choose a safe location for the heater, keeping in mind the safety precautions outlined. Ensure all packaging has been removed from the unit before use. Please follow the below instructions.

WARNING: In order to avoid overheating or fire, do not cover the heater.

WARNING: Keep all objects at least 1 metre from the front, sides and rear of the appliance.

WARNING: Do not use this heater with a programmer, separate timer, remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.

 
WARNING: Never leave this heater unattended when in use.

Once the heater is in a safe operating position and all switches are in the off position, insert the power plug into the mains outlet and switch on.

CAUTION: Ensure the power cord is not tight because if pulled it may partially pull the plug from the socket. A partially inserted plug will overheat the plug and socket and could result in fire.

HEATER CONTROL PANEL

- A. On/off button
- B. Timer button
- C. Power setting
- D. Temperature setting up
- E. Temperature setting down
- F. Child lock
- G. Main power icon
- H. Set temperature or timer display
- I. High heat indicator light
- J. Low heat indicator light
- K. Room temperature display
- L. Child lock indicator light

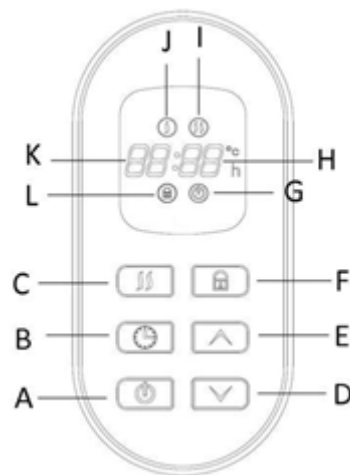


Ensure the power switch is in the OFF position before plugging unit in.




WARNING: Do not use this heater until it is fully assembled according to the free standing or wall mounting instructions within this manual.

OPERATION




Plug the appliance into an appropriate electrical outlet. Turn on the appliance by pressing the main power switch. A beep sound will be heard, and at the meantime the room temperature shows in the display.

Press  button, the heater is turn on.


1. Power setting

Press  button to choose your desired power. When  is showing on the display, the heater is in low heat mode. When  is showing on the display, the heater is in high heat mode.

2. Temperature setting

Press  button or  button on the control panel, or  on the remote control to set the desired temperature from 16°C to 40°C. When it reaches your desired temperature, it will flash a few seconds, and then shows in the display.

3. Time setting


Press  button set the desired working time from 0h to 24h. The set working time will flash a few seconds, and then shows the set temperature again. The appliance will shut itself off automatically when the time is up.

4. Child lock

Long press the child lock button until a beep sound is heard, the child lock function is activated.

Long press the child lock button again until a beep sound is heard, the child lock function is cancel.

5. Turn off

Press  button again to turn off the appliance. Then, turn off the main power switch and unplug the appliance.

Safety Devices

This appliance has two protection devices:

- Resettable Thermal Protection - this will automatically disconnect the power to the appliance at a pre-set overheat temperature. After cooling down it will reset and power back on again. If this occurs, investigate what is causing the appliance to overheat.
- Thermal Fuse - this disconnects the appliance permanently in case of overheating. (It is non resettable).

CAUTION: The appliance generates heat during use. Precautions must be taken to prevent the risk of burns, scalds, fires or other damage to persons.

CARE AND CLEANING

The heater requires regular cleaning to ensure trouble free operation:

- Unplug the heater from the mains supply before cleaning.
- Ensure that the heater has been allowed to cool down completely before cleaning.
- The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills.
- Use a damp cloth (not wet) to wipe the exterior of the heater to remove dust and dirt.
- Never use solutions such as petrol, thinners or polishing agents.
- Ensure the heater is dry before plugging back into the mains supply.
- Do not attempt to dismantle the heater.
- There are no user serviceable parts. For service or repair, contact an authorised electrical service technician.

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.