

# Bluetooth® speaker Round W RGB



To ensure correct operation and avoid damage, please read this user manual carefully before using this product.

## Caution

- Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
  - Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
  - Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
  - Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
  - A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
    - The marking is located on the bottom of the apparatus.
  - The apparatus is only suitable for mounting at height < 2m.</li>

## Specifications

- Bluetooth® version: V5.3
- Bluetooth® connecting range: 10m
- Rechargeable Lithium Battery 600mAh
  Play time: up to 4 hours (60% volume)
- Input: 5V1A

## **Box content**

- 1×Bluetooth® speaker
- 1×Micro USB charging cable
- 1xUser Manual



## Functionali

- Speaker
  Light
- Volume –/Previous
- Power on/off/Play/Pause
- Fower on/oπ/Play/Paus
  Light/Mode
- 6. Volume +/Next
- 7. SD card slot
- 8. Micro USB charging port

#### Power On/Off

Long press the Power button (4) to turn the speaker on and off.

### Play/Pause

Short press the Play/Pause button (4) to play or pause the music.

#### Volume+/-

Short press the Volume + (6) or Volume - (3) button to turn the volume up and down.

## Next/Previous

Long press the next (6) or previous (3) button to play the next or previous song.

## Bluetooth® mode

# Turn on the device, the speaker will enter Bluetooth® mode automatically. Activate Bluetooth® of your mobile phone and search for device name "KM43233823" then connect it.

#### TF card mode

Insert the TF card into the card slot (7).

#### 2. Press the mode button (5) to switch the mode.

Supported file type: MP3, WAV, APE, FLAC

# RGB light

Press the light button (5) to change between 3 different light mode.  $\label{eq:condition}$ 

#### 12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident. misuse. abuse or neelect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd. Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.