 


anko

ALARM CLOCK WITH
WIRELESS CHARGING

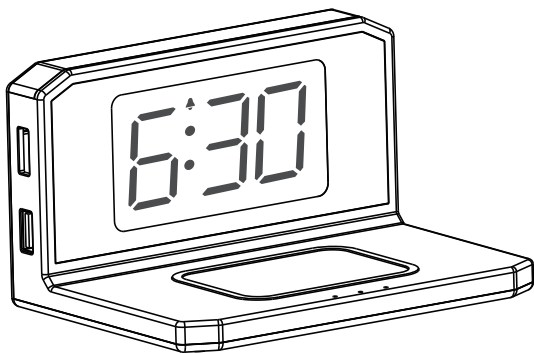

MODEL: 43233830

USER MANUAL

1 Welcome



2 Your Alarm Clock with Wireless Charging

- 2.1 In the Box
- 2.2 Front View
- 2.3 Back View
- 2.4 Side View

3 Quick Setup

- 3.1 Power ON/OFF
- 3.2 Setting the Clock & Alarm
- 3.3 Charging Your Wireless Charging Device
- 3.4 Charging Do's and Dont's

4 Display and Nightlight

- 4.1 Nightlight
- 4.2 Display Backlight

5 Troubleshooting

6 Technical Specifications

7 Warranty



1 Welcome

Thank you for choosing this product. We hope you enjoy your new Alarm Clock with Wireless Charging. Please note

- This product shall not be connected to power supply source exceeding PS2 (9V d.c., 2.3A)

2 Your Alarm Clock with Wireless Charging

2.1 In the Box

Carefully remove your Alarm Clock with Wireless Charging from the packaging.

 
Inside the box you will find:

- 1 x Alarm Clock with Wireless Charging
- 1 x Type-C Cable




2.2 Front View

- A** LED Nightlight
3 modes of adjustable nightlight.
- B** Display
- C** Charging Location
Used to charge your wireless charging enabled device.
- D** Wireless Charging Indicator Light

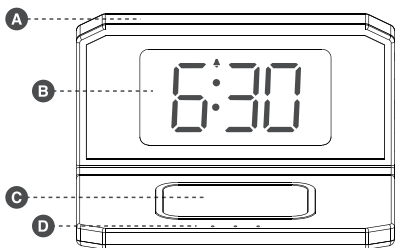

2.3 Back View

 - E** Power Adapter Input Port
Connect the Type C USB cable (included) and Power adapter (not included) to the input port.

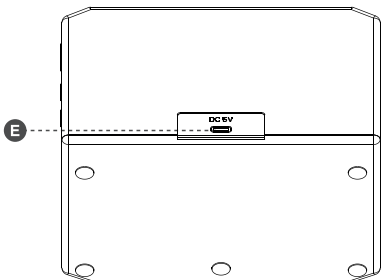



2.4 Side View

F Nightlight Button

Press this button to turn the nightlight on or off. When the nightlight is on, press to adjust the 3 levels of brightness.

G USB Output

The USB port can support charging for devices without wireless charging function.

H "M" button

Press the "M" button to enter the time setting.

 
Press the "M" button twice to set 12 or 24 hour clock.

Press and hold the "M" button to enter the alarm setting.

I "+" & "-" button

Press the "+" & "-" button to adjust the brightness level on the display.

Press the "+" & "-" button to set the time and alarm when you have selected the time or alarm settings.

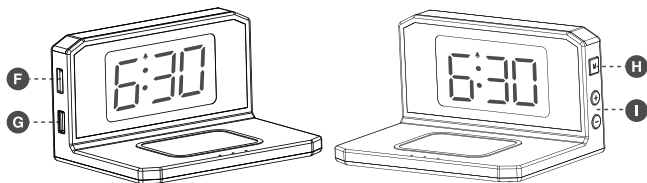

3 Quick Setup



3.1 Power ON/OFF

1. Connect the Type C cable (included) to the Type C input port at the back of the Alarm Clock and the USB into the power adaptor.
2. Connect the power adaptor (not included) to a wall socket and the alarm clock will turn on automatically.

3.2 Setting the Clock & Alarm

1. **Time setting:** Press the 'M' button to select time settings. Use the '+' and '-' buttons to set the hours and press 'M' to confirm. Then use the '+' and '-' buttons again to set the minutes and press 'M' to confirm.
Press the 'M' twice to set 12 or 24 hour clock.
2. **Alarm Setting:** Press and hold the 'M' button to select alarm settings. Use the '+' and '-' buttons to set the hours and press 'M' to confirm. Then use the '+' and '-' buttons again to set the minutes and press 'M' to confirm.
Press and hold '+' and '-' to turn the alarm ON or OFF.
3. **Alarm Clock:** When the alarm sounds, press any button on the right side to turn off the alarm.
4. **Snooze Setting:** When the alarm sounds, please tap the charging location to activate the snooze function.
The snooze time is 9 minutes. The bell icon will keep flashing when snooze function is on.

3.3 Charging Your Wireless Charging Enabled Device

1. Place your wireless charging device on the centre of the charging location.
2. The charging indicator light will turn Blue when charging.
3. When your device is fully charged, the indicator light will turn off.
4. If the Blue indicator light is flashing, your wireless charging device has not been placed on the charging area correctly.

Note: Fast charge won't work when you are using the wireless charging and the USB charging at the same time.



3.4 Charging Do's & Dont's

- If your device supports fast charging we recommend that you use an 3.0 adapter that has Qualcomm Quick Charge technology.
- Do not use in a hot, humid or corrosive environment.
- Do not place the wireless charger too close to magnetic stripes or chip cards.
- Please keep the wireless charger at least 20cm away from any implantable medical devices (pacemakers, implantable cochlear, etc.)
- Keep away from children.
- Do not use a metal case for your smartphone when using the wireless charger.
- For optimum charging times make sure that your device is not in a protective case that is more than 2mm thick, and that it is positioned in the centre of the wireless charger.
- Remove your smartphone from the wireless charger when fully charged.

4 Display and Nightlight

4.1 Nightlight

1. The Nightlight has 3 brightness levels.
2. Press the nightlight button to switch On/Off and select the different brightness levels.

4.2 Display Backlight

1. The display backlight has 3 brightness levels.
2. Press the “+ “ & “ -” button to select the different brightness levels.

5 Troubleshooting



Problem	What to do
My device is not charging.	<p>Make sure your device is placed in the centre of the charging location.</p> <p>If the phone is in a protective case, remove it and try again.</p> <p>Make sure your device is wireless charging enabled.</p>
The alarm did not sound at the correct time.	<p>Make sure the current time is correct.</p> <p>Check the alarm clock time is set correctly, and confirm whether there is an alarm clock indicator on the display screen.</p>

6 Technical Specifications

Model Number	43233830
Power Input	DC 5V \equiv 2.6A (Normal) DC 9V \equiv 2.3A (Fast charge)
Wireless Output	5V \equiv 1.0A (Normal) 9V \equiv 1.11A (Fast charge)
USB Output	5.0V \equiv 0.3A (For 5V DC input) 5.0V \equiv 1A (For 9V DC input)
Dimensions	140 x 100 x 78mm
Weight	164 g

7 12 Months Warranty



Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.