

KMT说明书折页 128g双铜 尺寸: 89*127mm

anko

BT SPEAKER WITH RGB

Operating instructions

Includes:

- Speaker
- Charging cable
- 3.5mm Aux Cable



12 month warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on **1800 124 125 (Australia)** or **0800 945 995 (New Zealand)** or alternatively, via Customer Help at kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.


Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

WARNING:

- Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
- Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- This product shall not be connected to power supply source exceeding PS1 . Rated 5V d.c. 1A .
- Marking information is located at bottom of the unit.
- Please note the speaker working temperature is : 0-40 C .

Function overview:

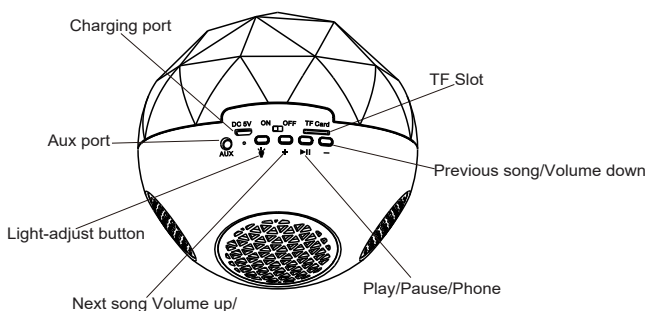

How to use the speaker: Specifications:

Model No : 43233939

Power ON/ OFF :

Switch the on/off button to power on/ off.

Function Operation

Play / Pause :

Press ►|◀ button

Volume up/ down :

Click ⊕/⊖ button

Answer /hang-up : Press ►|◀ button

Previous / Next : Long Press ⊕/⊖ button

RGB Light adjustment : Press ▼ button to change the light effect

TWS Speaker function :

Press and hold ▼ button of one speaker, then two speakers automatically search for connections.

After TWS mold activated , press and hold ▼ button of one of speakers , then TWS mold end and the speaker can use separately .
Note : The TWS function is only available in Bluetooth mode.

Pairing the Speaker with Bluetooth® devices

- Go to Bluetooth Settings on your Bluetooth device (phone, tablet, etc.)
- Turn the Bluetooth ON on your device
- Turn on the speaker , a voice prompt will alert you the speaker is ready to pair .

- On your Bluetooth Device, select the Bluetooth name : **KM 43233939** on the list of available devices . (Trouble shooting tip: if the speaker do not connect to your device, turn the speaker OFF, turn your device's Bluetooth OFF and then back ON, then repeat the pairing process) .

Note : Please enter the word "0000" and click OK if necessary.

Bluetooth Speaker will automatically connect back to the last connected device . so after restarting, it will automatically connect back to the previous device without re-pairing.

Phone calls

When there is an incoming call, the unit will pause the playback and ring to alert you of the call.

To answer the call, press ►|◀ buttons;

To end a call, press ►|◀ buttons again.

To decline an incoming call, press and hold ►|◀ button for 2 seconds.

Playing music

Press ►|◀ button once to pause playing , press ►|◀ button once again to resume playback. Long press the ⊕ button to play previous track ; press the ⊖ button shortly to play down volume ; Long press ⊕ button shortly to play next track ; press ⊕ button shortly to turn up the volume .

TF Card Playing

Insert TF card when the speaker is ON and the voice prompt alerts , you can play the music from your TF card.
Supported audio format: MP3,WAV .

Battery Charging

- Use the standard micro cable for power charging .

- The LED indicator will turn Red while charging and will turn OFF when fully charged. (Note: Before using for the first time, we recommend you fully charge the battery. A full charge takes around 2 hours).

- When fully charged, unplug the charging cable from the power socket.

Note: When the battery is low , it will automatically turn off after voice prompt .

Do not restart at this time, please charge in time .

Charging voltage: 5V d.c

Battery capacity: 800mAh

Working Distance: 10 meters

Music Time : 6 Hours

Talk time : 5 Hours

Standby time: More than 200 Hours

Charge time: 2 hours

Cable length: 30 cm

Frequency: 80HZ-16KHZ

Non-play when connected with device :

The speaker will not switch off automatically , please turn them off by hand to save battery .

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under license.