

MINI TRIANGLE CLIMBING FRAME INSTRUCTIONS

Keycode: 43235995

WARNING! Requires adult assembly only. Use only under adult supervision.

WARNING! Not suitable for children under 3 years. Only for one child use.

WARNING! Not for commercial use. Do not repeatedly assemble and disassemble the product. Do not jump on this product. Do not step on the edge or sit the edge as it poses a risk of overturning. Do not climb from the side of the product. Never allow your child jump on the product when using it.

WARNING! Contains functional sharp point. Make sure all screws, nuts and bolts are firmly tightened before using the product. Please install the product according to the instructions. Only use on flat ground. Do not expose to the sun. For indoor use only. For domestic use only.

WARNING! This product is a toy and cannot be used as a tool. Adults are strictly prohibited from stepping onto the product. If the product shows visible damage during use, please stop using it.

WARNING! Not for children with a body mass of more than 30kg.

WARNING! Always ensure the product is placed on a flat, even surface to ensure that it does not tip over.

Remove the product and related pieces from the box. Set all the parts out and read the assembly instructions prior to use. Keep the packaging until assembly is complete. Please keep for future reference.

CONTENTS:

The product consists of below components, please assemble each part step by step.



- A. 2pcs Wooden Panel
- B. 9pcs Wooden Rung
- C. 18pcs Fixing Screw
- D. 2pcs Screws with Nuts
- E. 1pc Hex Wrench
- F. 2pcs Steel Angle

Assembly Instructions



Put one end of the wooden pole to the hole on panel then take the screws and pass them through the hole, using the allen key to tighten.

Note: Please do not tighten firmly before all wooden poles are assembled.

Fix one end of all 9pcs wooden poles to one panel, tighten half firstly, then fix another end of poles to other panel.

Make sure each wooden pole is put correctly into the hole on panel and then tighten all wooden poles firmly.



Use the provided screw through steel angle and the hole in the lower corner of the wooden panel, put on the screw cover, then use the wrench(not included) to tighten.

Select the appropriate fixing screw(not included) and fix the steel angle to the ground. The steel angles are mandatory installation, please check and ensure the security of steel angles before use.

Product picture after assembled:



Storage & Care Instructions

Wipe the product clean with a dry cloth. Do not use abrasive materials or solvents. Ensure item is clean and 100% dry before storing to prevent mould and mildew. Keep away from water and direct sunlight.

It is not recommended to use power tools for assembly, which will cause the screws to slip. It is strictly prohibited to use if there is obvious deformation or damage.

It is of particular importance that they be followed at the beginning of each season as well as at regular intervals during the usage season.

Always check all screws for tightness and tighten when required. Always check all screws for sharp edges and replace when required. Always check any means of attachment for evidence of deterioration; replace when required in accordance with manufacturer's instructions. If these checks are not carried out, the toy could overturn or otherwise become a hazard. Do not use this product if you detect any damage or loosening of the screws on the products.

MADE IN CHINA

FOR AU / NZ: IMPORTED FOR KMART
STORES IN AUSTRALIA AND NEW ZEALAND.