anko


Webcam With Ring Light

Keycode: 43241736 Instruction Manual



Parts

- 1. HD 1080p lens
- 2. Ring light
- 3. Microphone
- 4. Flexible clip/base
- 5. USB
- 6. light controller

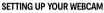

1.Place your webcam

Grasp the webcam as shown and open the flexible clip/base with our other hand. Mount the webcam, making sure the foot on the flexible clip/base is flush with the back of your monitor





2.Connect the webcam

Plug it into one of the USB ports of your computer. If you are using a desktop PC, it will be better to plug it into the USB ports at the back of computer case instead of those in the front



3. Regarding the brightness of the light on the camera, the brightness can be adjusted through the line control knob

Frequently Asked Questions

How do I use my webcam with other video capture devices?

The best way is to disable all other video capture devices and ensure the webcam is the default device.

To do this:

- 1. Click on the start menu button, right click on My computer and select Manage.
- 2.This will open the Computer Managerment window. Select Device Manager, then Imaging devices from the list . When you see the camera logo, right-click and select "Properties" Drop down the menu to find the "Camera" option
- 3. Right Click on the appropriate camera device and select enable or disable as required:

If an additional USB camera has been plugged in, two messages will be displayed there. Unplug the external camera, then right-click the message and select "Disable Device" in the pop-up interface. Then plug the USB external camera into the USB interface of the computer. When the user uses the camera, the system will call the external camera device.

WARNING Do not dispose of unit in fire or water. ➤ Never attempt to disassemble and reassemble, ➤ Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. ➤ Check with your local authority for recycle advice. ➤ Keep your device and all accessories out of the reach of children and animals. ➤ Small parts may cause choking or serious injury if swallowed. ➤ Avoid exposing your device to very cold or very hot temperatures (below 0 °C or above 45 °C). ➤ Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. ➤ Do not allow your device to get wet-liquids can cause serious damage. ➤ Do not handle your device with wet hands.

12 Month Warrantu

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or nealect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expension incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mularave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably oreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation