 


Quick Guide

 
DESCRIPTION OF PARTS

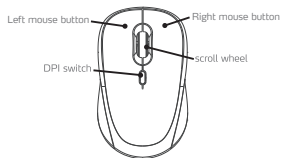

Please read the entire instruction manual before using the product and save it for future reference.

WIRELESS MOUSE CAMO
MODEL: 43241743


PACKAGE

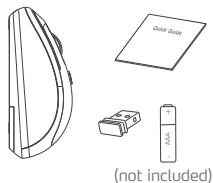

FEATURES

- **MOUSE:**
 - USB receiver is at the back
 - Frequency: 2.4GHz
 - Range operation: 10m
 - Sensor: optical
 - DPI: 1000 / 1200 / 1600
 - Batteries: 1 x AAA (not included)
 - Weight: 56 g
 - Windows 7/8/10/Vista

 CONNECTION DESCRIPTION

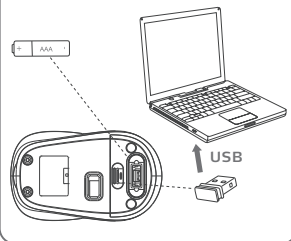

INSTALLATION

1. Check that your computer has a USB port.
2. Connect the USB free port. The operating system will detect and ready for use.

RECYCLING

- Follow local ordinances when disposing of this product. If you are unsure of how to dispose of this product, please contact your local authority.



NOTES ON BATTERIES

Only use top-quality batteries. Cheap batteries could leak and damage the device as a result.

If the batteries leak, remove them with a cloth and dispose of them accordingly.

Ensure that leaking battery acid does not come into contact with skin and eyes. If you do get battery acid in your eyes, flush them thoroughly with lots of water and consult a physician immediately! If battery acid comes in to contact with your skin, wash the affected area with lots of water and soap.

If the device is not to be used for an extended period of time, then the batteries should be removed, as the device could become damaged should they leak. If the device functions weaken, replace all batteries.

Batteries do not belong in household waste! Expired batteries must be disposed, of in an environmentally friendly way and according to the applicable legal regulations.

Batteries are very dangerous if swallowed. Please keep the batteries and the device components away from children at all times. If a battery is swallowed, seek medical attention immediately.

Batteries must not be recharged or activated with other means, dismantled, thrown into fire or short-circuited. Remove the batteries prior to disposing of the device.