

anko

Instruction manual



Keycode: 43244003

RGB backlit mouse

 
Please read all the information carefully before you use the product and keep the manual for future reference.

Safety Instructions:

Please read the instruction manual before using this device and follow all the safety instructions to avoid damage caused by improper use.

- Keep the instruction manual for future reference. Should this device be given to a third party, then this instruction manual must also be handed over.
- Use this device solely for its intended purpose.
- Only use this appliance indoors
- Keep the appliance away from all hot surfaces and naked flames.
- Always put the appliance on a level, stable, clean, dry surface. Protect the appliance from extreme heat and cold, dust, direct sunlight, humidity and drops or jets of water.
- Do not immerse the appliance in water or in other liquids.
- Do not open the housing under any circumstances.
- Do not introduce any objects into the interior of the housing.
- Should the device malfunction due to electrostatic discharge or a short power surge, disconnect it from your computer and then reconnect it again.

Product Overview:

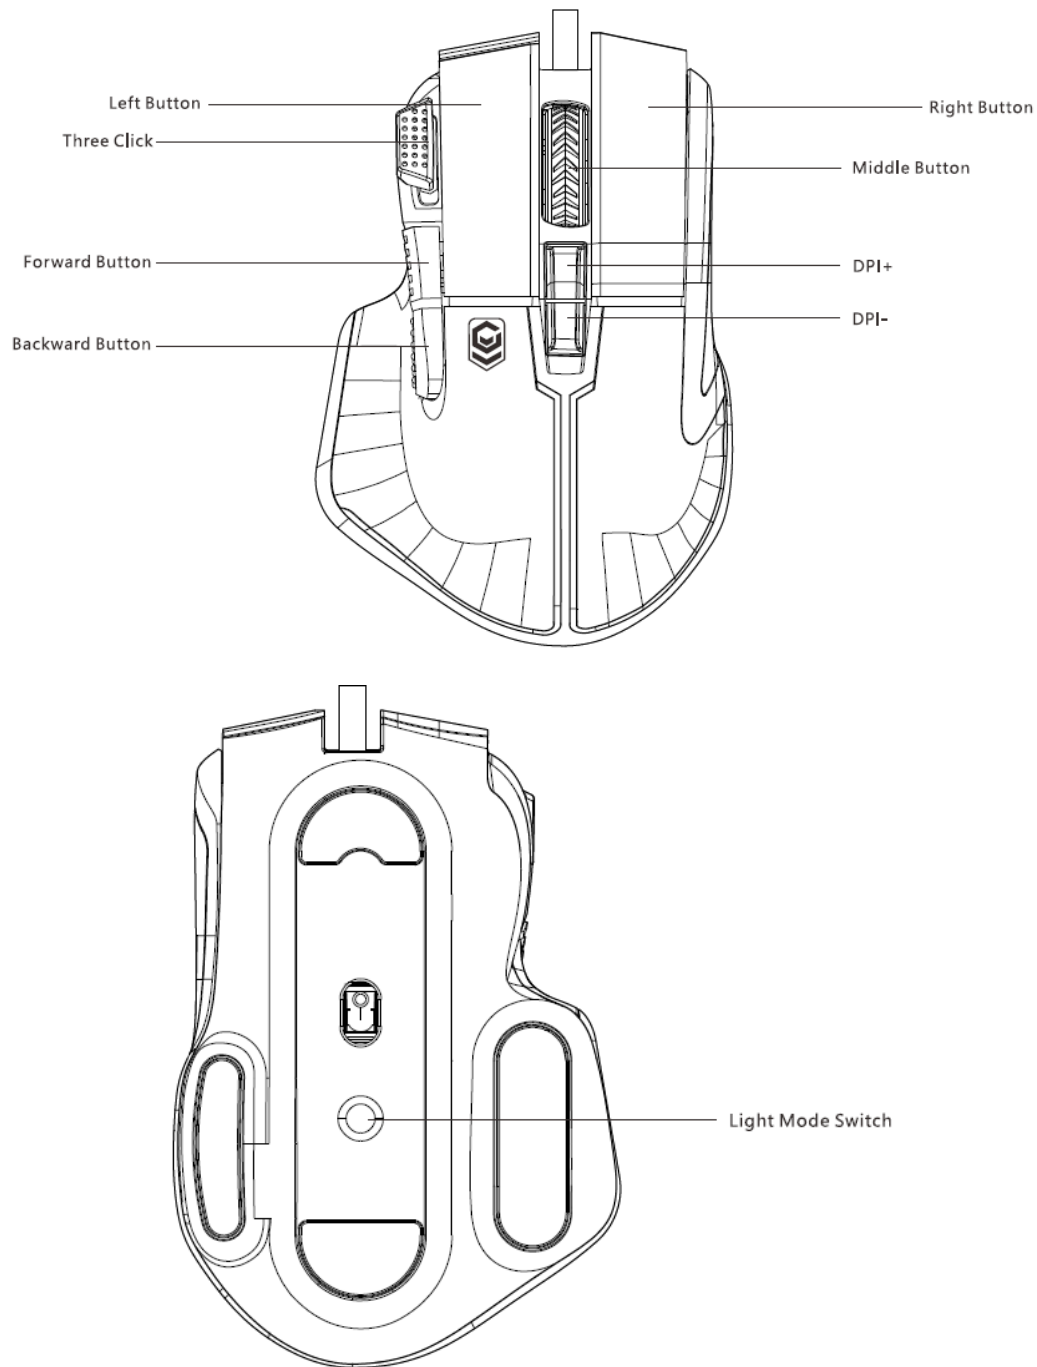

Connecting the Mouse:

1. Plug the USB cable into a free USB port on the computer.
2. The mouse will connect automatically and can be used immediately.

Features:

*Selectable DPI: 1200-2400-4800-6200-8000-12000DPI. Default lamplight DPI take as red-green-blue-cyan-yellow-purple.

***12 kinds of RGB light effect.** The RGB light mode can be adjusted by “Bottom LED toggle

button”.

*supports Windows 7/8/10 or later

*For more functions, please enter “<http://www.intraindustry.com/downloads.htm>” to download the driver.

 


Main interface and functions description:

After install “43244003 RGB backlit mouse Setup”, double click it to enter the program.

The main features include:

- 1) Keys
- 2) Performance
- 3) Light
- 4) Marco

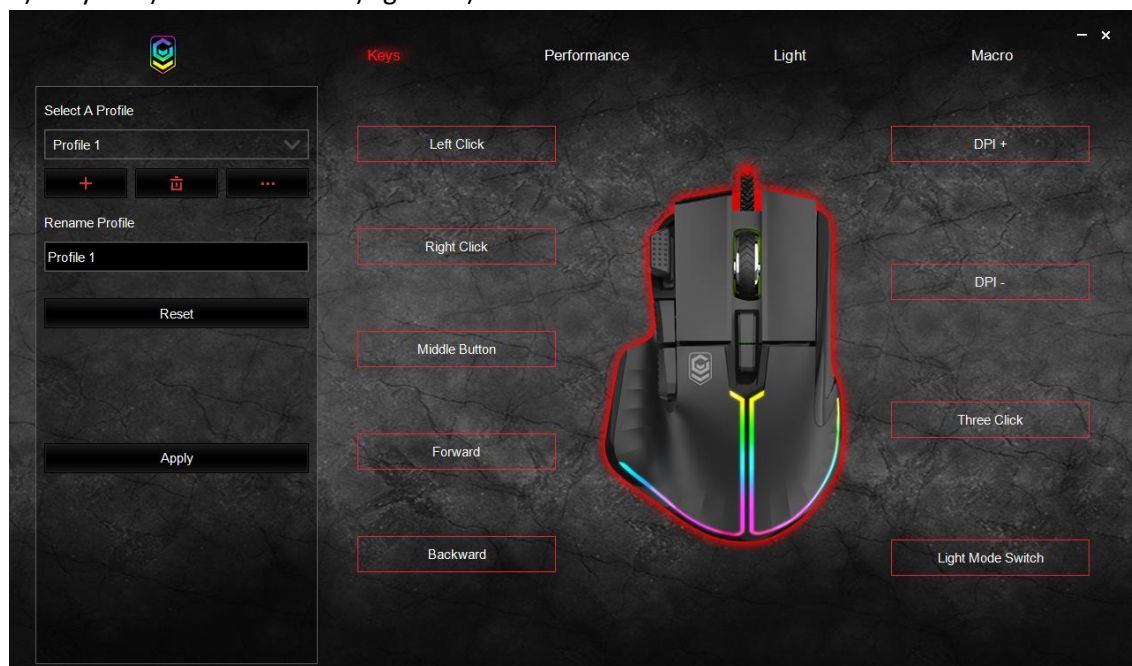

Button Function

You could switch to below 21 key functions by setting one of these base keys: Light Click/Middle Button/Forward/Backward/DPI+/DPI-/Three Click/Light Mode Switch.

 
1. Left Click: Left button function



2. Right Click: Right button function
3. Middle Button: scroll up, scroll down
4. Forward: Enter to next page
5. Backward: Back to previous page
6. DPI+: Switch to higher DPI value, without DPI cycle switch



7. DPI-: Switch to lower DPI value, without loop switch
8. Double Click: Equivalent to click the left key for 2 times

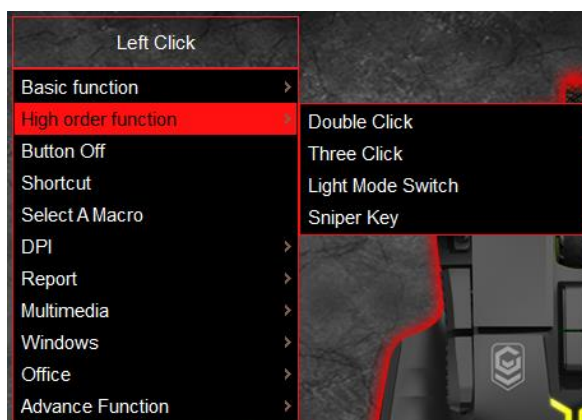


9. Three Click: Equivalent to click the left key for 3 times
10. Light Mode Switch: 12 kinds of RGB light effect switching
11. Sniper Key: Locking DPI

12. DPI: DPI+, DPI- and DPI Cycle

13. Report: Report+, Report- and Report Cycle

 14. Multimedia Function: Include Media Player, Play/Pause, Stop, Previous Track, Next Track, Volume Up, Volume Down, Mute.

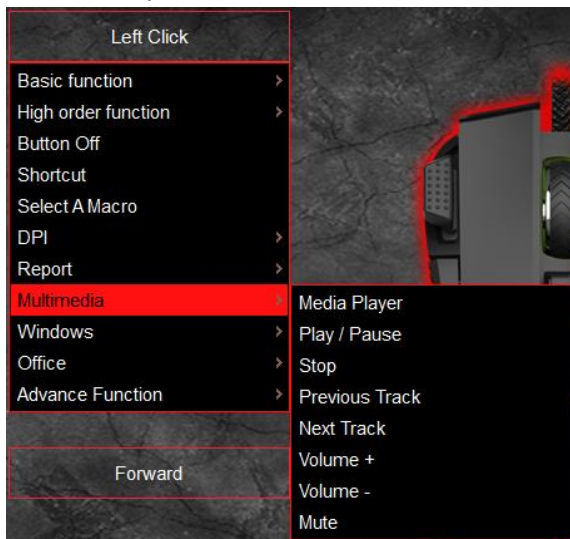

15. Windows Function: Include Browser Home, Browser Favorites, Browser Forward, Browser Stop, Browser Refresh, Browser Search, Email, Calculator, My Computer.

16. Office Function: Include Cut, Copy, Paste, Open, Save, Find, Redo, Select All, New, Print.

17. Advance Function: Swap Windows, Close Windows, Show Desktop, Lock PC, Run Command.

18. Export profile: Store the contents that have been set to your computer.

19. Import profile: Load the existing documents from the computer.

20. Factory Reset: Set the mouse to the factory default.

 
21. Apply: Write the settings to mouse.

Performance



DPI settings

1. Six groups DPI: gear 1 / gear 2 / stalls 3 / stalls 4 / stalls 5 / stalls 6, check the selections
2. DPI setting: set the 6 groups of DPI value, adjust within the limits of 200 ~ 12400DPI

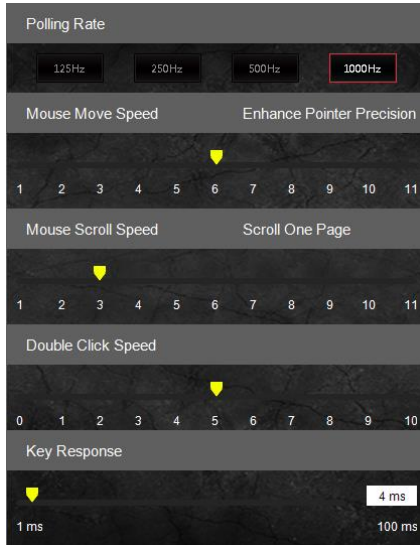


- 1) Polling Rate: with 125Hz/250Hz/500Hz/1000Hz to choose
- 2) Move Speed: To adjust the movement speed of mouse
- 3) Mouse Scroll Speed: To adjust the scroll wheel speed of mouse
- 4) Double Click Speed: To adjust the double-click speed of mouse
- 5) Key Response: To adjust the key response within the limits of 1 ~ 100ms

Light Setting

12 kinds of light effect: OFF--- Standard mode---Breathing mode--- Neon mode---Wave mode---Key reaction mode---Trailing mode---Drag back and forth mode--- Slide mode---YO-YO mode--- Marbles mode--- Flying star mode

 Choose one of 12 light effect you want, then click **Apply button** on the left list, the mouse will switch to the light effect you want.

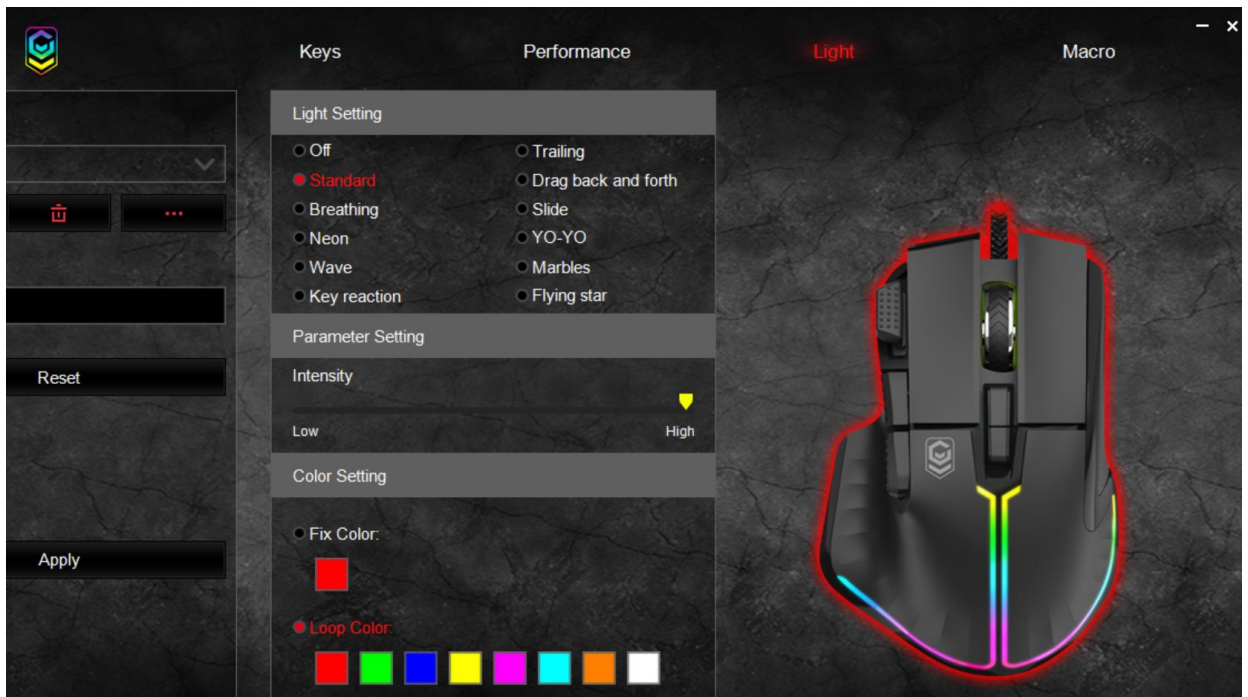

Macro Editor

Macro management can **record** any keys of keyboard, the time of keys reaction and the number of keys cycles.


- Click top **【+】** to create a Macro Directory. Such as a,b,c...
- Click bottom **【+】** to create add a Macro. Such as 1,2,3
- Select whether to increase the Delay and the Loop Times
- Click **【Recording】** and start recording any keys of keyboard. The keys you recorded will display in the macro edit box
- After the recording, click **【Stop】** to stop recording.
- To revise the recording content, please make the following changes in the macro options:
 - Choose to insert the event: insert relevant content in the selected location
 - Delete: Delete the selected content
 - Modify: Modify the delay value and input button again
- After recording is completed, just exit the macro recording interface, no need to click the confirmation keys
- Execute a macro, such as the mouse "Left Button" set to "Select A Macro", after recording is complete, press the mouse "Left Button" to play the recorded content.

The screenshot displays a macro recording interface with a list of recorded events and their actions. The interface includes a 'Macro Name' field, a list of recorded events, and a 'Recording' button.

Key	Action	Delay(MS)
Num 3	Release	151
Num 4	Pushed	61
Num 5	Pushed	95
Num 4	Release	53
Num 5	Release	87
Num 6	Pushed	94
Num 6	Release	159
Num 7	Pushed	104
Num 8	Pushed	44
Num 7	Release	70
Num 8	Release	86
Num 9	Pushed	88
Num 9	Release	188
Num 0	Pushed	78
Num 0	Release	10

Additional interface elements include:

 - Macro Name: 1
- Loop Times(1~255): 1
- Key: Num 0
- Delay(MS): 10
- Recording button: Recording

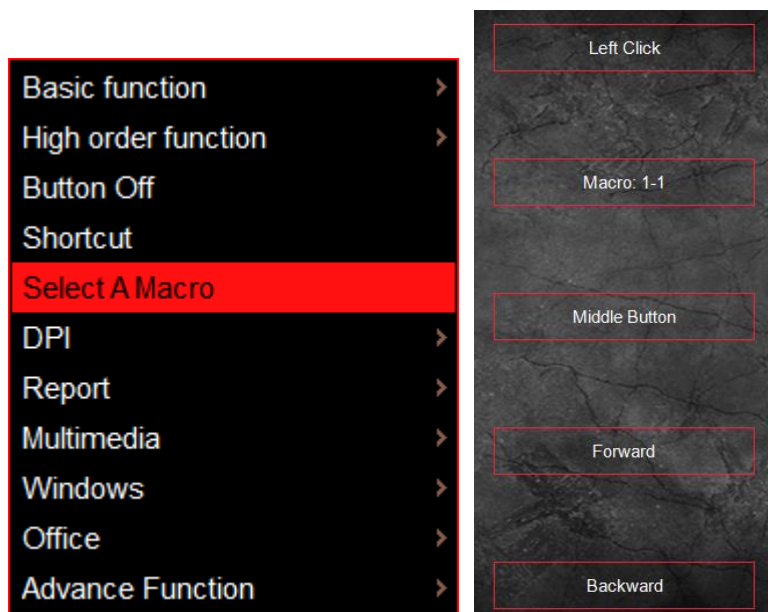

Uninstall

Open the control panel and open the “Add or Remove Programs” window , find “43244003 RGB backlit mouse” and click "delete" to complete the uninstall program.