

# 正面

**anko**

## Instruction Manual

### 2.4GHz Wireless Mouse&Keyboard Combo

Keycode:43247080



#### Safety Instructions:

Please read the instruction manual before using this device and follow all the safety instructions to avoid damage caused by improper use.

- Keep the instruction manual for future reference. Should this device be given to a third party, then this instruction manual must also be handed over.
- Use this device solely for its intended purpose.
- For indoor use only.
- Keep the appliance away from all hot surfaces and naked flames.
- Always put the appliance on a level, stable, clean, dry surface. Protect the appliance from extreme heat and cold, dust, direct sunlight, humidity and drops or jets of water.
- Do not immerse the appliance in water or in other liquids.
- Do not open the housing under any circumstances. Do not introduce any objects into the interior of the housing.

#### Features:

2.4GHz wireless technology  
800DPI/1200DPI/1600DPI adjusting mouse sensor  
Working distance up to 10 m (without any obstructions)  
Compatible with Windows operating systems

#### Multimedia Hotkeys Functions:



<b>FN+F1</b>	Media	<b>FN+F2</b>	Volume Down
<b>FN+F3</b>	Volume Up	<b>FN+F4</b>	Mute
<b>FN+F5</b>	Previous Track	<b>FN+F6</b>	Next Track
<b>FN+F7</b>	Play/Pause	<b>FN+F8</b>	Stop
<b>FN+F9</b>	Homepage	<b>FN+F10</b>	Mailbox
<b>FN+F11</b>	My Computer	<b>FN+F12</b>	Favorite

Some hotkeys function may not work because of the different devices system or application compatibility.

2

# 反面

#### Product Overview:

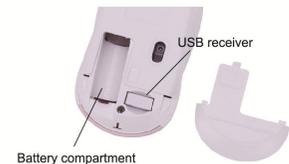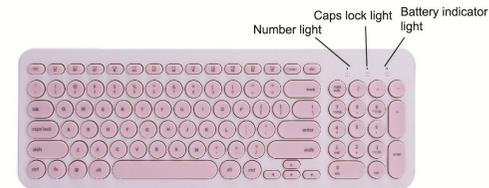

Battery compartment

3

#### User Guide

1. Remove the battery compartment cover of keyboard and insert 2x 1.5V AAA battery. Please pay attention to the polarity diagram printed inside the battery compartment of keyboard.
2. Remove the battery compartment cover of mouse and insert 1x 1.5V AA battery. Please pay attention to the polarity diagram printed inside the battery compartment of mouse. Remove the USB receiver from its compartment inside the mouse. Caution! Danger of explosion if the batteries are incorrectly replaced.
3. Replace the battery compartment cover again, making sure it is closed firmly.
4. Plug the USB receiver into a free USB port on the computer.
5. Mouse and keyboard will connect automatically and can be used immediately.

#### Notes On Batteries

Only use top-quality batteries. Cheap batteries could leak and damage the device as a result.

If the batteries leak, remove them with a cloth and dispose of them accordingly. Ensure that leaking battery acid does not come into contact with skin and eyes. If you do get battery acid in your eyes, flush them thoroughly with lots of water and consult a physician immediately! If battery acid comes into contact with your skin, wash the affected area with lots of water and soap.

If the device is not to be used for an extended period of time, then the batteries should be removed, as the device could become damaged should they leak. If the device functions weaken, replace all batteries.

Batteries do not belong in household waste! Expired batteries must be disposed of in an environmentally friendly way and according to the applicable legal regulations. Batteries are very dangerous if swallowed. Please keep the batteries and the device components away from children at all times. If a battery is swallowed, seek medical attention immediately. Batteries must not be recharged or activated with other means, dismantled, thrown into fire or short-circuited.

Remove the batteries prior to disposing of the device.

#### Keyboard Connect:

"ESC" + "=":

When the keyboard does not match the receiver, please insert the keyboard battery first, then press "ESC" and "=" key at same time until the up right corner battery indicator light turns on. Plug the USB receiver into the computer.

The keyboard will successfully connect to the computer if the indicator light turns off.

Please note this step is only for the keyboard which is not match the receiver successfully. Generally plug the receiver to the computer, the keyboard can directly connect to the computer. And this step can not be used in other brand of receiver and keyboard.

4