

anko

Rotary Shaving Kit Instruction Manual



Model no.: SXG-100
Save these instructions for future reference.

Safety Instructions

Please follow all the precautions listed below for safety and to reduce the risk of injury or electric shock.



WARNING: READ ALL INSTRUCTIONS, FAILURE TO FOLLOW ALL INSTRUCTIONS LISTED BELOW MAY RESULT IN ELECTRIC SHOCK, OR SERIOUS PERSONAL INJURY.

1. Only use the appliance as described in this manual.
2. This appliance contains batteries that are non-replaceable.
3. To protect against the risk of electric shock, **DO NOT** immerse the appliance, USB cable in water or other liquid.
4. **DO NOT** use or store the product near sinks, bath or showers containing water or near running water.
5. Always check the appliance for damage prior to use. If any damage is observed, do not use the appliance.
6. The appliance is intended for indoor use only.
7. Always switch the appliance OFF after use.
8. This appliance has no user serviceable parts inside. Do not attempt to disassemble the appliance.
9. This appliance is for personal use only, not designed for commercial use.
10. Do not use it outdoors.
11. **Do not use** the appliance if it is not working properly, if it has been dropped or if it has been immersed in any liquid.
12. Before using the appliance, ensure that the foil head is securely fitted and not damaged.
13. Do not use the appliance on children.
14. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
15. Children should be supervised to ensure that they do not play with the appliance.
16. Only Charge the Appliance with the USB cable that was supplied with the appliance.
17. Only Charge the Appliance from an Extra Low Voltage Battery Charger (not supplied) with an output rating 5Vd.c. 1A, same as indicated on the appliance's rating label.
18. When charging the appliance, the appliance must be switched off.
19. The appliance must be used only with attachments supplied with the product.
20. This product contains sharp blades, please take utmost care during handling and use.
21. Do not replace the batteries with non-rechargeable batteries.
22. **To avoid personal injury, DO NOT use the appliance if has a damaged shaving head or cutter.**



WARNING: Do not recharge non-rechargeable batteries.



WARNING: Before charging the product, please make sure your hands are dry.



WARNING: Only use the USB charging cable supplied with the appliance. Use of other cable may cause electrical failure and/or fire.

PERSONAL SAFETY

- Never use the appliance on any part of the body other than shaving the face and beard.
- **CAUTION! Do not use the appliance if the rotary head is split or broken.**
- Never leave the appliance unattended while switched ON.
- Do not touch the blades as they are very sharp.
- Always ensure that the hands are dry before operating or when switching it ON or OFF.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

PARTS (supplied with product)



1. Rotary head
2. On/Off switch
3. Hair trimmer head
4. Body trimmer head
5. Nose/ear trimmer head
6. Charging indicator light

7. USB cable
8. Cleaning brush
9. Hair trimmer guide comb
10. Rotary head holder
11. Storage base
12. Pouch

CHARGING

- Please make sure the shaver is switched OFF before charging.
- Fully charge the shaver for approx. 2 hours before first use.
- The red light will turn ON when charging, and goes OFF when fully charged.

NOTE: Normal charging time of the shaver is approx. 2 hours. Do not charge for more than approx. 2 hours.

- When fully charged, the shaver can continuously work for approximately 60 minutes.

IMPORTANT! Use only with the USB cable provided.

BATTERY CARE

- To ensure maximum life of the rechargeable battery in your shaver, follow these guidelines:
- Do not recharge the shaver between sessions. Wait until the battery is exhausted before recharging.
- Discharge the battery completely at least twice a year (switch on and run until the shaver stops).
- If the shaver has not been used for a long period of time, discharge the battery completely, then fully charge it for approx. 2 hours before use.
- Never charge the shaver for more than 2 hours.
- Do not use the shaver while charging.
- Do not charge the shaver when the temperature is below 0°C or above 40°C.
- Avoid recharging the shaver in direct sunlight or near a radiating heat source.

OPERATION



WARNING:

Switch OFF the device before replacing or changing the attachments.

Changing attachment

- To remove the attachment, grasp the appliance body with one hand, grasping underneath the attachment with the other hand, then pull apart the two parts gently.



- To attach, take the desired attachment head, push the attachment head in all the way to the main body until it clicks. Make sure the attachment head is seated properly.

Nose & Ear trimmer

- Use nose/ear trimmer head to trim nose and ears hair.
- Gently and slowly insert the tip of the trimmer head in the entrance of the nose and ears.
- **WARNING! Do not insert it too deep to avoid injuries.**
- Clean the nostril and ear canal after trimming.

Rotary Shaver

1. Attach the shaving head.
2. Turn ON the shaver by rotating handle to align the mark “I”.
3. Stretch your skin and shave against the direction of your beard growth.

NOTE: Applying excessive pressure does not provide a closer shave.

4. While applying gentle pressure, move the shaver head in small circular motions.
5. Turn OFF the shaver by rotating handle to position “O”
6. Clean the shaver carefully after each operation.

Hair Trimmer

1. Attach hair trimmer head. You can also attach the guide comb to adjust trimming height.
2. The comb attachments is with 20 settings for different hair length for you want to choose, with length 0.5-10mm.
3. Turn ON the trimmer by rotating handle to align the mark “I”.
4. Slowly guide the trimmer up to the hair you intend to cut. Always use short strokes to cut your hair.

NOTE: Do not apply too much pressure when using the trimmer. It reduces cutting performance and may cause skin irritation.

5. Turn OFF the shaver by rotating handle to position “O”.
6. The trimmer always generates a straight cutting edge. If you do not want a straight cutting edge, you must hold the trimmer at an angle. For hard-to-reach areas or for very precise cuts, use a comb to check the cut length.

Body Trimmer:

- Body groomer can be used to trim different lengths hair in your back and shoulders, chest and abs, underarms and arms groin area and legs, unique design in surface protect your skin from being scraped.

CLEANING AND MAINTENANCE

NOTE: Always clean the attachments regularly to ensure maximum performance.

- Make sure to switch OFF the shaver and it is disconnected from mains power before cleaning.
- Remove attachments. Tap the shaver/trimmer head/body gently to remove loose hairs and debris.
- thoroughly brush and blow out hair clippings from cutting system, attachment, and top of main body.
- Rinse the attachments and body under warm running water. DO NOT use hot water as this might cause damage.

IMPORTANT! DO NOT submerge the shaver in water or other liquid.

- Carefully shake off excess water and allow all the parts to dry thoroughly.

WARNING! Never dry the shaving unit with a towel or tissue, as this may damage the parts.

Oiling blades:

- Rinsing attachments under water requires lubricating the cutting blades monthly.
- Using only light-grade oils (e.g. sewing machine oil), simply spread 1-2 drops lightly over cutters with fingertip. Wipe away any excess.
- Do not use hair oil, grease, or any oil mixed with kerosene or solvent.

STORAGE

1. Switch the shaver OFF and clean all components. Make sure that all parts are dry before you pack them up.
2. Store the shaver in a clean, dry area.
3. Make sure that the shaver and the accessories are out of the reach of children and animals.

BATTERY DISPOSAL

If the shaver is to be disposed the batteries should be removed from the appliance before it is scrapped. The shaver must be disconnected from the charging cable when removing the battery. The battery should be disposed safely. Used batteries should be taken to a recycling facility and not disposed of with other household waste.

IMPORTANT: Always fully discharge the batteries before removal and ensure it is disconnected from the charging cable.

TECHNICAL SPECIFICATIONS

Model no.	SXG-100
Working time	Up to 1 hour
Charging time	Approx. 2 hours
Input voltage	5Vd.c. 1.0A
Battery type	Li-ion, 500mAh, 3.2V x1 cell
Water resistance	IPX5

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.