

anko

**Portable Clothes Dryer
MZX-Y90
User Manual**



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS

WARNING! Failure to follow these safety instructions could damage the clothes dryer or your clothes.

Only plug this appliance directly into an AC power supply which is properly earthed and had the correct voltage. Refer to the appliance rating plate (located on the rear of your clothes dryer) for the voltage information.

Do not connect the appliance to the mains electricity supply by an extension lead, multi-socket powered board, double adaptor or similar.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

IMPORTANT!

- If supply cord is damaged, it must be replaced by manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- These dryers are for drying clothes, towels and linen at home. They are not designed or intended for use in Commercial environments. Do not use them for any other purpose.
- The dryer is not to be used with any clothing articles which have had industrial chemicals used for cleaning.
- This appliance is intended for use indoors only under cover within a domestic environment. Never use outdoors exposed to weather.
- Adequate ventilation must be provided when using the clothes dryer.
- Never use your clothes dryer to dry items such as latex, foam rubber, waterproof textiles, rubber backed articles, or pillows fitted with foam.
- Ensure all objects are removed from pockets.
- Always check your clothing items care labels to ensure they are suitable for use in clothes dryer.
- To protect against electric shock do not immerse the appliance, power cord, plugs in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- **DO NOT TOUCH hot metal surfaces.**
- Unplug the unit when not in use. Allow to cool before taking off parts.

- DO NOT use the accessories other than what is provided with the appliance.
- Do not pull the cord around sharp edges or corners.
- Keep the cord away from heated surfaces.
- Always operate the appliance on a flat, stable surface. Make sure that there is enough ventilation, so that hot steam can be released safely during use.
- DO NOT wash the cover, it can be wiped clean with a soft cloth.
- **Always ensure the clothes have been spin-dried or hand-wrung well to avoid water dripping onto the main unit and floor.**
- NEVER touch the vent on top of the cover.
- DO NOT cover the air inlet, hot air outlet and vents.
- Unplug the unit after use, before assembly or disassembly and before cleaning.
- NEVER attempt to move the unit during operation.
- **WARNING: This appliance is intended only for drying textiles and garments washed in water.**



CAUTION! hot surface. Motor unit and metal parts may become hot during use. NEVER touch any metal parts as they may cause burns to skin. Keep the appliances away from children during and immediately after use.

WARNING! The appliance must not be supplied through an external switch device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.

Fire Hazards

- Some fabrics are not suitable for use in the clothes dryer. The following **MUST NOT** be placed in your clothes dryer due to the risk of a fire or an explosion:
 - Item(s) that have been spotted or soaked with vegetable oil, cooking oil, suntan oil, linseed oil, salad oil, lubrication oil or grease. Oil affected items can ignite spontaneously, especially when exposed to heat sources such as in a clothes dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If heat cannot escape, the items can become hot enough to ignite. Pilling, stacking or storing oil-affected items can prevent heat from escaping and create a fire hazard. If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a clothes dryer, they should first be washed in hot water with extra detergent - this will reduce, but not eliminate the hazard.
 - Item(s) that have previously been cleaned in, washed in, or spotted with petrol/gasoline, industrial chemicals used only for cleaning, dry-cleaning solvents or other flammable or explosive substances are highly flammable. Highly flammable or explosive commonly found around the house include acetone, (nail polish remover) denatured alcohol, petrol/gasoline, kerosene, some spot removers, turpentine, waxes and wax removers should not be put in the dryer. Items containing foam rubber (also known as latex foam) or similarly textured rubber-like materials. Foam rubber materials can produce fire by spontaneous combustion when heated.



- Rubber-backed articles, clothes fitted with foam rubber pads, pillows, rubber boots and rubber-coated sports shoes.

For your safety, and to reduce the risk of fire or an explosion, DO NOT store or use petrol or other inflammable vapours and liquids near your clothes dryer.

To avoid potential fire hazards, we recommend that you pay for a qualified appliance technician to inspect and clean your dryer periodically.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

KNOW YOUR PORTABLE CLOTHES DRYER

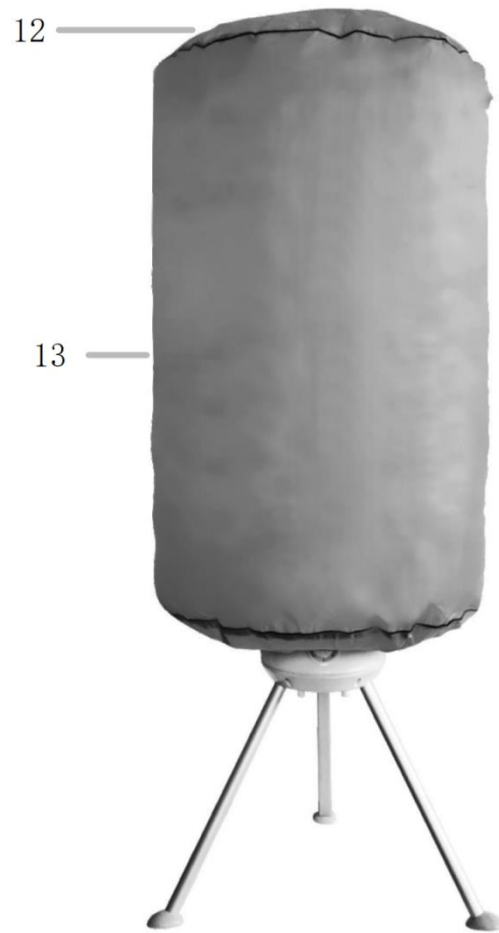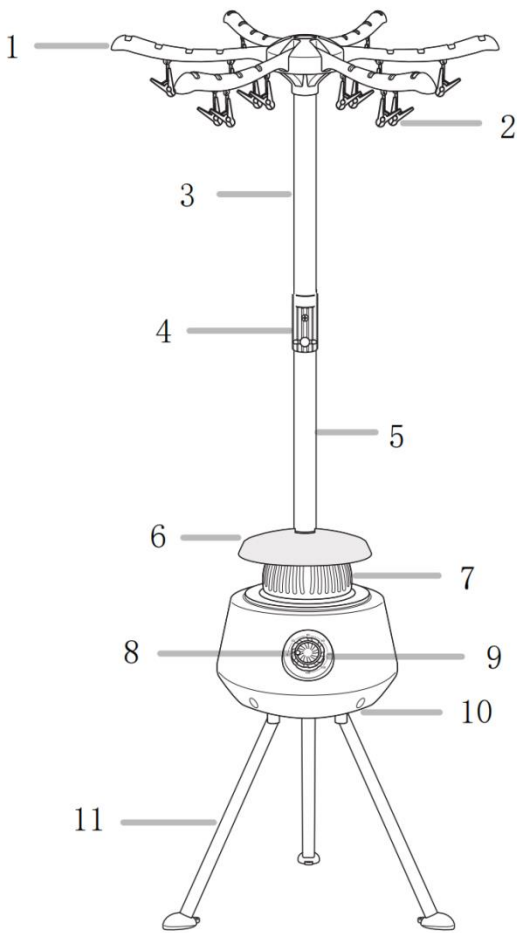

1	Clothes rack	8	Motor unit
2	Clips (12pcs)	9	Timer with On/off indicator
3	Upper support pole	10	Air inlet
4	Pole connector	11	Legs (3pcs)
5	Lower support pole	12	Vent (on top of cover)
6	Waterproof plate	13	Cover
7	Hot air outlet		

WARNING:

**This appliance is intended only for drying textiles washed in water.
Do not use plastic coat hangers in the dryer.**

Before First Use


The appliance has been packaged carefully to ensure the product reaches you in good condition. If the product has been damaged, dropped, has a malfunction in any way, or if the supply cord is damaged, do not use. Return the product to Kmart for replacement.

Carefully unpack your appliance. Make sure you do not discard any packaging material until all parts of the appliance have been found.

Carefully wipe the exterior of the appliance to remove any dust that may have accumulated during production. Dry with a dry towel. Do not use harsh abrasive cleaners.


Assembling the Dryer

1. Attach 3 legs to the bottom of the motor unit. Ensure they are all fitted tightly and evenly.

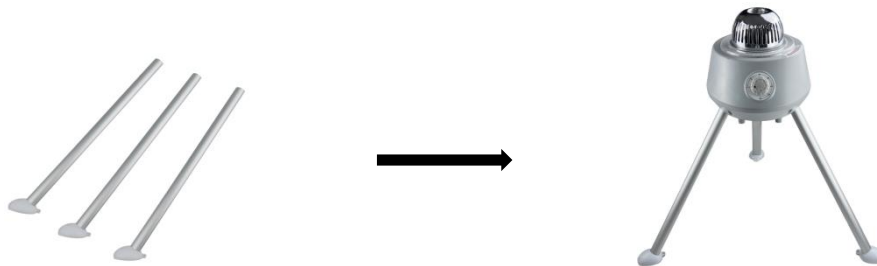


2. Place the Lower support pole through the Waterproof plate, then screw the pole onto the Motor unit until tight.

WARNING! The waterproof plate must be correctly assembled to avoid electrical shock.

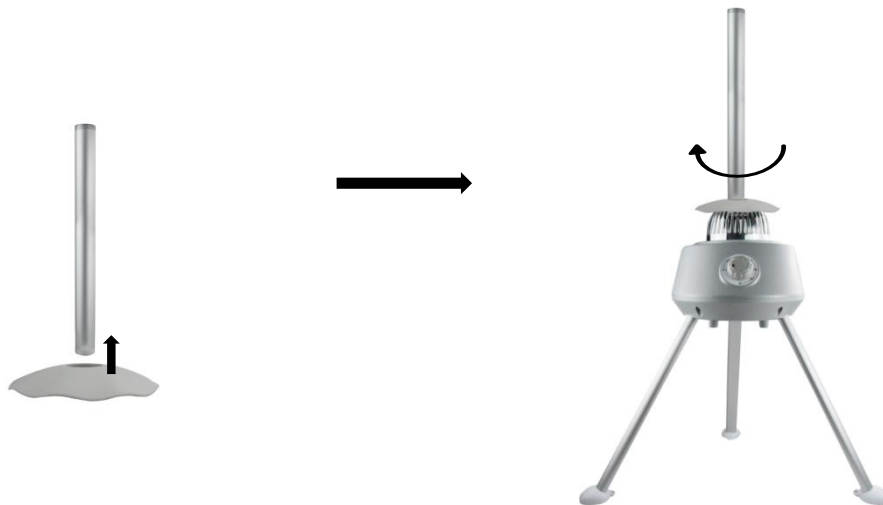

3. Screw the Upper support pole onto the Lower pole until tight. Place the Clothes rack on top of the Upper pole.

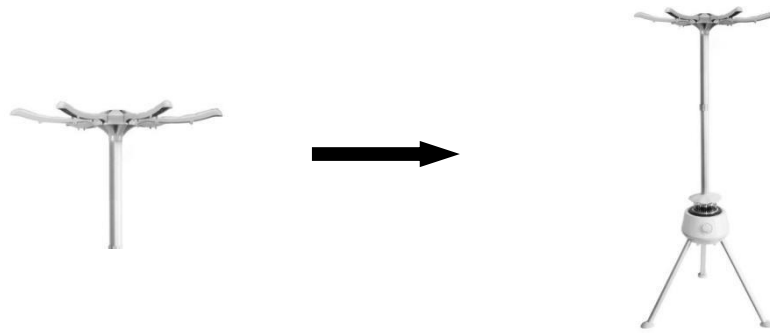

4. Put on the clips if needed.



5. Place the Cover around the Clothes rack, make sure no obstruction at top vents. The bottom black ring of the Cover shall sit around the metal grill on Motor Unit.

Note: Ensure the cover aligns with the motor unit and there is no air leakage



6. Zip up Cover. Flip down the zip cover at top rim.



7. To disassemble the portable clothes dryer, follow the assemble steps in reverse.

HOW TO USE

Ensure the air inlet/outlet and the vent are not blocked and adequate airflow exists with your chosen location.


Always check your clothing articles care instructions to ensure they are suitable for use within a clothes dryer. Not all fabric types/clothing articles are suitable for use in clothes dryers.

CAUTION! Do not overload the dryer. The maximum amount of textile in one load is 15kg.

DO NOT touch the metallic parts of the unit while the appliance is operating. These can become very hot.

IMPORTANT! Always ensure the clothes have been spin-dried or hand-wrung well to avoid water dripping onto the main unit and floor.



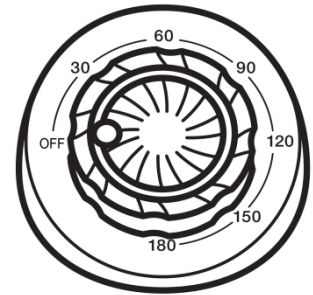








1. Put the dewatered clothes on the hangers or clips and zip up the cover.
2. Connect the appliance to the mains power.
3. Rotate the on/off switch to the preset time, the power indicator will illuminate.
4. The appliance will automatically stop when the set time is up.
5. Unplug the appliance after finished drying the clothes.
6. Unzip the cover to allow the appliance and the clothes cool down.
7. Remove your clothes from the dryer.



Tips

- Clothes should never be dripping when placed inside the unit.
- Long clothes that may obstruct the hot air outlet need to be placed correctly, so that there is no obstruction to air out.
- The air inlet vent should be checked for any sign of dust/ fluff and this should be removed where possible.

Refer to below reference weights of clothes articles (when dry), to assist with avoiding overloading your dryer.

 Mixed-fabric clothes (about 800g)	 Jacket (about 800g cotton)	 Jeans (about 800g)	 Towel quilt (about 900g cotton)
 Single bedsheet (about 600g cotton)	 Work clothes (about 1120g)	 Sleepwear (about 200g)	 Long sleeve shirt (about 300g cotton)
 Short sleeve shirt (about 180g cotton)	 Short pants (about 70g cotton)	 Socks (about 50g mixed-weave)	

GENERAL HINTS

- Clothes should be washed before use within the dryer.
- Always ensure the similar types of clothes are dried together.
- Try to sort your clothes to be dried into load that take a similar time to dry (for example heavier items separate from light items).
- Make sure any decorations or buttons on your clothing items are safe for high temperatures and well protected.
- It is recommended to turn your clothes inside-out.
- Check and empty pockets. Clip, pens, nails and pins can damage your clothes. Other item such as matches or cigarette lighters will cause a fire.
- Drying time will depend on fabric type and construction, load size and wetness.
- The laundry must be thoroughly spun before drying. Do not place hand washed items that have not been spun, into the dryer.
- To avoid static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for clothes dryers.
- Due to variations in dryer load fabric texture and thickness it is possible that not all items will be dried evenly. If you experience uneven dryness, set the extra time but be mindful of the type of fabric being dried to avoid over drying certain types of fabric.
- Drying time will also be affected by room temperature and humidity. Clothes will dry more slowly on a cool or humid day.
- For best results, sort the load according to fabric. Such as heavy items which may take longer to dry (i.e. towels, flannelette sheets, etc) than ones which dry quickly (i.e. cotton shirts and sheets).

- If individual items are still damp after drying, you may need to run extra time, or allow the items to finish drying naturally outside the dryer. This will be necessary particularly for multi-layered items (i.e. collars, pockets, etc).

CLEANING AND MAINTENANCE

CAUTION: Make sure the appliance is unplugged from mains power and allow the appliance to cool down completely before cleaning.

Wipe the appliance with a damp soft cloth.

DO NOT wash any part of the appliance including the cover.

Allow the appliance get dry before next use or storage.

STORAGE

1. Ensure the appliance is disconnected from mains power.
2. Allow the appliance to cool down completely.
3. Do not wrap the power cord around the appliance.
4. Store the appliance in a cool dry location and out of the reach of children.

TROUBLE SHOOTING

No.	PROBLEMS	POSSIBLE CAUSES
1	Drying time too long	Clothes may be very thick. Clothes may have not been sufficiently dewatered. Cover may have not been closed properly and hot air escaped. The room temperature is too low.
2	The appliance doesn't work	Air outlet or inlet blocked or covered, the fuse tripped. Plug is not firmly in its power socket, or the power outlet is not switched ON.

TECHNICAL DATA

Voltage : 220-240V~ 50-60Hz

Power : 1200W
Load capacity: Max. 15kgs
Timer: 0-180 minutes

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.