

anko

Wax Melter
DR-408
User Manual



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:



READ ALL INSTRUCTIONS BEFORE USE.

WARNING:

1. To protect against electrical shock, do not submerge the appliance or allow the power cord to come into contact with water or any other liquid.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. Children should be supervised to ensure that they do not play with the appliance.
4. Never let the appliance operate unattended.
5. Remove the power cord from the electrical outlet when not in use, before cleaning. To unplug, grasp the plug and pull from the electrical outlet. Never pull from the power cord.
6. DO NOT operate any appliance with a damaged cord or plug, or after the appliance malfunctions, has been dropped or damaged in any manner.
7. If the power cord is damaged, it must be replaced by the manufacturer, a certified service agent or similarly qualified persons in order to avoid a hazard.
8. DO NOT let the power cord hang over the edge of table or counter or touch hot surfaces such as the stove.
9. Do not wrap the power cord around the appliance.
10. Always use appliance on a dry, level surface. Sinks, drain boards or uneven surfaces must be avoided.
11. DO NOT operate this appliance on or near any hot surface (such as gas or electric burner or in a heated oven).
12. Never use an unauthorized attachment.
13. DO NOT fill more than 100g wax.
14. DO NOT operate the appliance empty.
15. THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY. Do not use this appliance for anything other than its intended use. Do not use outdoors.
16. Check the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
17. Keep the appliance out of the reach of children.
18. Do not attempt to repair or disassemble the appliance. There are no user-service able parts.
19. For cleaning, please refer to CLEANING AND STORAGE section.
20. Do not use near or in bathtubs, showers, sinks or other vessels containing water.
21. Do not use with wet hands.
22. Do not place or store the appliance where it can fall into a tub or sink.
23. Do not place in or drop into water or other liquid.
24. If the appliance falls into water while plugged in, unplug it immediately. Do not reach into the water.
25. Never operate this appliance if it has a damaged power cord, if it is not working properly, or if it has been dropped, damaged or dropped in water.
26. Always unplug the appliance after use. Wait until the appliance has cooled down before you clean or store it.

27. The appliance must not be immersed.

28. CAUTION: The heating element surface is subject to residual heat after use.

PRECAUTIONS



Please note that hair removal can cause trauma to the skin, and normal skin reactions or irritation may occur, such as redness, swelling, tenderness, etc.

- Always follow instructions from Wax Supplier.
- Before waxing, do a 24-hour patch test to see how skin reacts.
- Beware of burns. Wax can reach high temperature and cause burn injuries!
- Do not wax area with redness, inflammation, swelling, open wounds, burns, eczema or psoriasis.
- Please consult with your doctor before use if you are susceptible to allergic reactions or have any health concerns.
- Waxing is not suitable for the elderly, diabetics or people taking oral retinoids.
- Always leave 72 hours between hair removal sessions.

WARNING! Use this Wax Melter only for its intended use as described in this instruction manual. Misuse of the appliance may cause potential injury!

Keep the product away from children.

CAUTION! Wax pot is hot during use. Do not touch until its cool to room temperature.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

KNOW YOUR WAX MELTER



1. Lid
2. Scraper bar
3. Main unit
4. Indicator light
5. Removable wax pot
6. Temperature control knob

USE YOUR WAX MELTER

BEFORE START

- Wash the area you are about to wax to remove dirt and skin care products like cream, anti-perspirant or oil. Afterwards, dry your skin thoroughly.
- For best result, make sure your hair is about 2mm long. If hair is longer than 5mm, trim it shorter so that waxing will be less messy.

USING WAX MELTER

Place the Wax Melter on a flat, stable surface.

1. Take off the lid and fill the wax pot with 20-100g wax beads, close the lid.
2. Connect the appliance with mains power, turn the temperature control knob to MAX position.
3. After the wax is melted into a liquid consistency, re-adjust to a lower temperature, avoid wax become too viscous.
4. The wax temperature will remain constant, the indicator light will switch ON and OFF during operation. This means the Melter will automatically turn ON to heat wax when it drops below the desired temperature; turn OFF when desired temperature is reached.

APPLYING THE WAX

If you have not waxed before, we recommend starting by removing hair from the legs. Only when you have experience then progress to the sensitive areas of underarm and bikini line.

We do not recommend waxing the same area of skin twice during one waxing session.

1. Allow the wax to melt completely.
2. The best indication that your wax is at the right applicable temperature is when it resembles the consistency of thick honey.
3. Always use with caution. It is important to test a small amount of melted wax on the inside of your wrist before application, to make sure the wax is not too hot.

4. Make sure your skin is completely dry before waxing. Apply some baby powder to soak up any excess moisture if necessary.
5. Using the spatula (not provided), spread the wax in direction of hair growth. Ensure each hair is shrink-wrapped with wax.
6. Wait 30-60 seconds and allow the wax to harden.
7. It is ready to be removed as soon as it's no longer sticky to the touch. Hold skin taut. Flip the edge of the wax strip up and pull quickly AGAINST direction of hair growth.
8. Repeat over different sections until the desired area is soft, silky hair-free.

TIPS

- Apply wax in direction with hair growth and remove in opposite.
- Hydrate and exfoliate a day or two prior to waxing.
- Try to make the end of the strip (towards ankle) thicker so that you can grip it when you remove it. You can do this by applying extra wax at the lower end of the strip.
- When removing, pull the wax parallel and close to your waxed skin.
- Use some used wax or baby oil to remove wax traces, if the wax doesn't come off with water, soap or alcohol.

AFTER WAXING

- Skin may be slightly red after waxing. This is normal, but bathing the area with cool water will help to soothe.
- If you feel a bit of irritation, don't scratch. Instead, gently press your skin with your hand. Any discomfort shouldn't last-if it does, see your doctor.

CLEANING AND STORAGE

You DO NOT need to clean the wax pot after each use!

The left-over wax can be melted and reused for your next waxing session.

However, you may need to clean the outer rim of the pot after each use.

- Ensure the pot has been switched OFF but is still warm.
- Use some body oil to remove any excess wax from the rim of the pot.
- Wipe the rim of the pot with a clean piece of dry kitchen cloth to remove the oil residue.
- Leave the pot to cool before storage.

Do not use a sharp object to remove solidified wax or clean the pot.

The internal of main unit is subjected to residual heat after use, take care when handling.

Do not allow contact with or immerse the main unit in water.

CAUTION: To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.

TECHNICAL SPECIFICATION

Voltage: 220-240V~ 50-60Hz

Power: 100W

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.