

PORTABLE CHARCOAL BBQ

INSTRUCTION MANUAL
Keycode: 43265992

IMPORTANT:

This instruction manual contains important information necessary for the proper assembly and safe use of the Portable Charcoal BBQ.

Read and follow all warnings and instructions before assembling and using the appliance. Failure to follow all guides and instructions could cause personal injury or property damage. When using this appliance, always exercise basic safety precautions.

PORTABLE CHARCOAL BBQ

SAFETY INFORMATION

Please read the advice below before using the product.

Warning: This appliance is not intended for use by children. Persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

1. Read all instructions prior to first use and retain this instruction manual for future use.
 2. This appliance is intended to be used in a normal domestic (residential) environment only and for private use only.
 3. always use outdoors on a firm and stable surface.
 4. Due to the risk of carbon monoxide poisoning, do not use the appliance indoors or in any other confined space including tents, caravans or boats.
 5. If the appliance malfunctions or has been damaged in any manner, cease use and return the appliance to your nearest Kitchen Warehouse store for assistance.
 6. Do not use the appliance for anything other than the intended use.
 7. Before using the barbecue, test the batteries and never replace the batteries while the barbecue is in use or when it is still hot, wait for it to have cooled down.
 8. Only use charcoal.
 9. Never leave the appliance unattended when in use.
 10. Children and animals should always be supervised when the appliance is in use.
 11. Always wear heat resistant gloves when touching the hot grill grid.
 12. Never pour water into the charcoal container in order to extinguish the charcoal.
 13. Always use appropriate barbecue utensils to turn and remove food.
 14. Do not use spirits or petrol for lighting or re-lighting.
 15. Beware of the risks of burning or suffocation when cooking with this appliance.
-

QUICK FEATURES

PRODUCT DIMENSIONS **28.0cm (diameter) x 15cm(height)**

NET WEIGHT **2.1kg**

POWER **4 x AA batteries (6V) (included)**

- The appliance consists of five removable parts which are easy to clean.
- The built-in Turbo Fan System means the charcoal barbeque is ready within 10 minutes and will cook food efficiently and evenly.
- The product comes with a charcoal box, charcoal box lid, ignition plate, oil catcher/ashbowl(powder coated, non-detachable) and grill rack.
- a portable carry bag is optional for easy and safe transportation.
- The outer shell is made of powder coated cold rolled steel.
- The safety lock design prevents grill from moving around the top and all flexible parts(charcoal box and its cover, ignition plate, oil catcher)are safely locked in their position.


OPERATING INSTRUCTIONS

Warning: Due to the risk of carbon monoxide poisoning do not use the appliance indoors or in any other confined space including tents, caravans or boats.

Assembly


- Unpack and remove all packaging from the appliance.
- Check all listed parts and components have been included with the appliance before set up.

Note: The charcoal container may contain a thin oil film on the surface due to its production process. This oil may cause smoke on the first use.

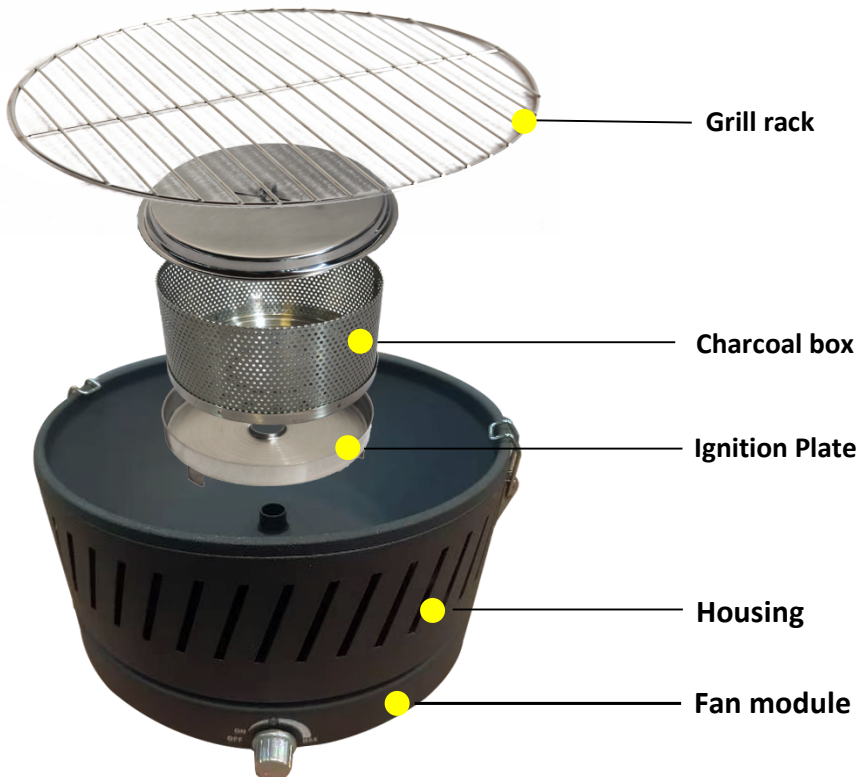

How it works

- ✓ The charcoal box heats up completely within 10 minutes due to the battery powered fan in the base.
- ✓ The heat from the charcoal box, which heats the inner pot and grill rack, provides even cooking and browning.
- ✓ The box cover prevents fats and oils from dripping onto the charcoal, minimizing oil fumes during cooking.
- ✓ The heavy duty outer shell stays cool to the touch so you can carry it without risk of personal injury, even when it is lit.

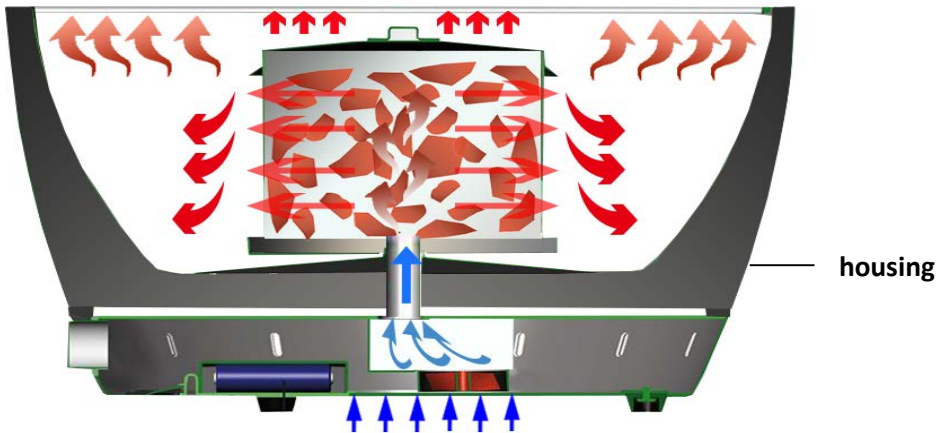

How to use it

- Open the battery case at the bottom of the outer bowl. Insert four AA batteries and close the case.
- Place the inner pot into the outer bowl.
- Place the ignition plate in the base of the inner pot.

You then have two options for lighting the charcoal box. Choose one of the below options:

Option 1. Light the charcoal box using cube firelighters

- Put the ignition plate into the inner bowl and the charcoal box on the ignition plate.
- Place 3 to 4 cube firelighters in the charcoal box then fill it with heat beads.
- Light the cubes using a match or automatic firelighter and wait a few seconds before covering the charcoal box with the lid.
 - Turn the turbo fan knob clockwise to the maximum position (the ventilation must be on so that the flame is not extinguished).

Option 2. Lighting the charcoal box using lighter gel

- Put the ignition plate into the inner bowl.
- Apply a circular layer of lighter gel on the ignition plate, approximately 10mm wide.
- Turn the turbo fan knob clockwise to the maximum position (the ventilation must be on so that the flame is not extinguished).
- Light the gel until it burns, being careful not to touch the flame.
- Place the charcoal box on the ignition plate, taking care to place it evenly.

Having implemented the steps above for your chosen lighting method, continue set up with the following steps:

- Put the lid on the charcoal box.
- Put the grill rack on top of the inner pot and pull down the latch (if available) to lock the device.
- After approximately 10 minutes, the grill should be ready for use.

Note: The fan must stay on at all times while you are cooking.

ADVANTAGES

Easy to use

Once you've lit the charcoal the barbeque will heat up within 10 minutes and is ready to start cooking.

Easy cooking

- The battery powered fan enables you to control the heat
- Perfect for grilling smaller portions of food
- Meat and vegetables cook quickly

Easy to clean

- The grill consists of 5 simple parts, which are easy to fit together, operate and clean, no tools required.
- All the stainless steel parts can be put in the dishwasher (Grill Rack, Charcoal Box Lid, Charcoal Box and Ignition Plate).

Warning: Let the grill cool off entirely before cleaning.



Safety lock design

The charcoal burns inside a closed mesh container at all times and has a safety lock that prevents that container from falling outside the grill in the event that it is dropped.

Independent charcoal grill

Produces a minimal amount of smoke due to the coal in the coal box, which makes for a more comfortable cooking experience.

Note: The grill may or may not produce smoke at the beginning of the process depending on the quality of the fuel used.



MAINTENANCE AND STORAGE

By following these recommendations your portable charcoal bbq will provide many years of use

1. The grill must be allowed to cool off completely before cleaning.
2. Do not use water to cool off the hot grill. Burns and scalding might occur.
3. Clean grill grid, inner bowl and other dirty parts after each use.
4. Grill grid and inner bowl are dishwasher safe or can be cleaned by hand with standard dishwashing liquid.
5. We recommend the use of commercially available barbecue cleaners for cleaning of hard to remove residues.
6. Clean the outer bowl (containing electronic unit) with a wet cloth or brush only.
7. Do not use acidic, solvent or other flammable liquids.
8. Remove batteries if storing for a longer period of storage.
9. Do not wet the charcoal container to clean, use a dry brush.

After Use:

1. Dispose of any batteries at a battery collection point, do not put them in your household rubbish.
 2. Dispose of charcoal in non-combustible or metal containers only. Do not use plastic or any other flammable materials to dispose of them.
-