

Assembly Instructions

43274918 4 TIER TROLLEY ADJUSTABLE

WARNING: Do not stand or lean on the trolley. Use only on a flat surface. Do not use until all screws, bolts and knobs are firmly secured. This product contains small parts, keep away from children and babies. Adult assembly required. Load items on each tier evenly and don't place heavy items alone on the top tier to prevent from tipping over.









Failure to follow these warnings could result in serious injury.

 




CARE INSTRUCTIONS: Wipe clean with a soft dry or damp cloth. Do not use abrasive materials solvents. Check and tighten all parts regularly. Keep away from water and direct sunlight.

For indoor and domestic use.


MAXIMUM LOADING WEIGHT: 10kg each tray.

Hardware list

	a	12PCS		e	2PCS
	b	12PCS		f	4PCS
	c	4PCS		g	2PCS
	d	1PC		h	2PCS





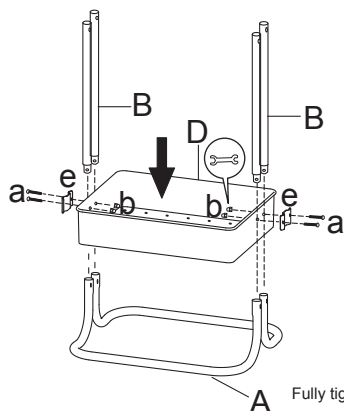

	A	2 PCS		B	4 PCS		C	4 PCS		D	2 PCS		E	2 PCS
---	---	-------	---	---	-------	---	---	-------	---	---	-------	---	---	-------

STEP 1





 
 


Tool required
Philips Head Screw Driver
(Not Provided)

Fully tighten the tubes after completing


 Ax2  Bx4  Dx1
 ax4  bx4  ex2

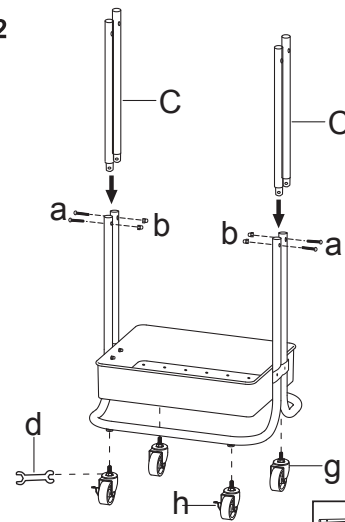




STEP 2

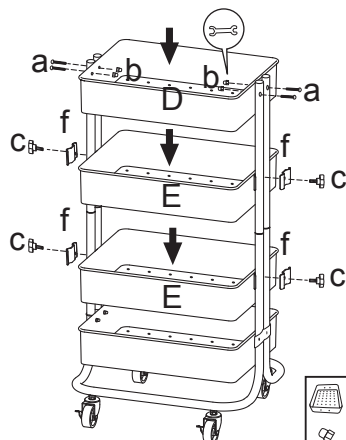

 Cx4  ax4  bx4
 gx2  hx2


STEP 3



 Dx1  Ex2  ax4
 bx4  cx4  fx4

STEP 4

Remove items from the tray before adjusting the position of the tray.
To prevent the tray from sliding down, the knob must be fully tightened after adjusting to the desired position.

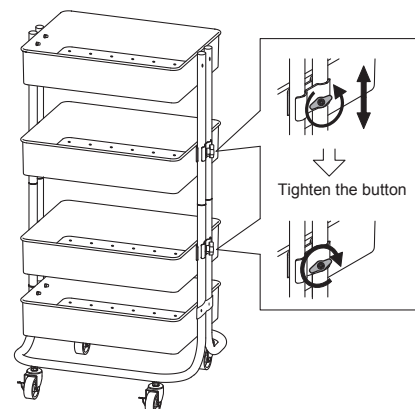

Tighten the button