

# anko

Instruction Manual

Keycode : 43303458

LED NEON GLOBE MOON

## WARNING:

Before using the unit please read this manual carefully.

1. Children must not use this product without adult supervision.
2. Do not expose the product to fire or high temperatures over 45 °C .
3. Keep away from water, liquids, or wet areas.
4. Use a dry cloth to clean this product. Do not use chemicals on this product.
5. Make sure the product has plenty of ventilation during charging.
6. Do not place the product in direct sunlight, heat or the under the windshield.
7. Do not try to repair or disassemble this product.
8. When the unit is not in use, make sure it is correctly turned off and stored in a cool dry place.
9. When disposing of this product. Do so responsibly following local government requirements.
10. Product runs on a rechargeable battery. Do not connect to a lamp or light fitting.

**WARNING: READ AND FOLLOW ALL ABOVE INSTRUCTIONS CAREFULLY. DO NOT DROP OR APPLY EXCESSIVE FORCE TO THIS PRODUCT. DO NOT EXPOSE TO HIGH TEMPERATURES. IMPROPER USE OR HANDLING OF THIS PRODUCT MAY RESULT IN FIRE OR EXPLOSION CAUSING SERIOUS INJURY OR PROPERTY DAMAGE.**

## Production Specification

USB Input Power: DC 5V 1A

Battery information:3.7V 250mAh

Power supply mode: USB plug

Charging time:around 2-3 hours

Operation time: around 3-4.5 hours

## 1.Accessories Quantities:

USB Cable x1, Globe light x1

## 2.Connecting the light:

- 1.You can turn on/off the light by press the switch on the bottom.
- 2.Put the light on the desk or any flat surface.
- 3.Charging: when the light shows dark, please plug the USB cable into a free USB port or USB wall charger with 5V 1A output, the bottom of the product will show the red indicator light when charging. It will off when finish charging.

## Warning:

Use provided charging cable to charging 43303458 led neon globe moon product only.

Do not charge the product for long time.

Please charge the battery in time when it runs out or it will affect the battery life.

Turn off the switch when the product is no longer use. Please charge the battery for every 1 Month.