

Assembly Instructions

3 TIER ROUND TROLLEY

WARNING: Do not stand or lean on the trolley. Use only on a flat surface. Do not use until all screws, bolts and knobs are firmly secured. This product contains small parts, keep away from children and babies. Adult assembly required. Load items on each tier evenly and don't place heavy items alone on the top tier to prevent from tipping over.




 

 

 


Failure to follow these warnings could result in serious injury.


CARE INSTRUCTIONS: Wipe clean with a soft dry or damp cloth. Do not use abrasive materials solvents. Check and tighten all parts regularly. Keep away from water and direct sunlight.

For indoor and domestic use.

MAXIMUM LOADING WEIGHT: 10kg each tray.


Hardware list

	A	Top Tube	2PCS		E	Screw	12PCS
	B	Middle Tube	4PCS		F	Gasket	12PCS
	C	Bottom Tube	2PCS		G	Nut	12PCS
	D	Tray	3PCS		H	Spanner	1PC
					I	Wheel without break	2PCS
					J	Wheel with break	2PCS

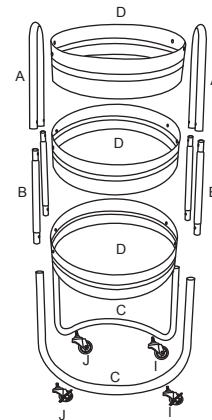


Do not tighten the screws fully during assembly. Fully tighten screws after the final assembly steps.

STEP 1

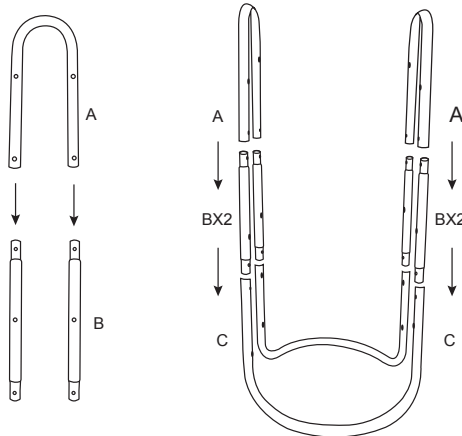


Connect tube A and Bx2 together, then connect to tube C.

STEP 2

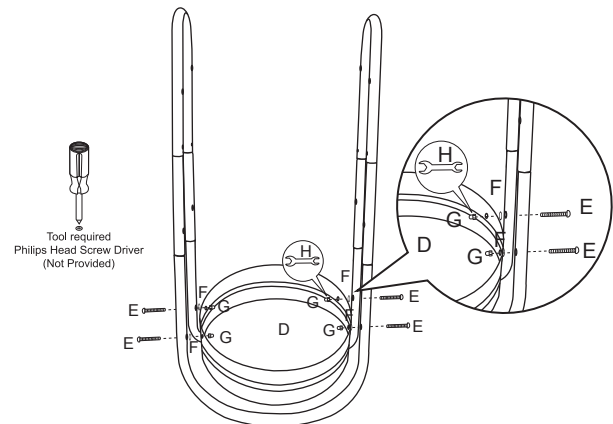

Tool required
Philips Head Screw Driver
(Not Provided)

STEP 3

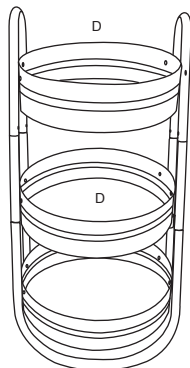

STEP 4

