


BUILD IT ROTATING TARGET CROSSBOW

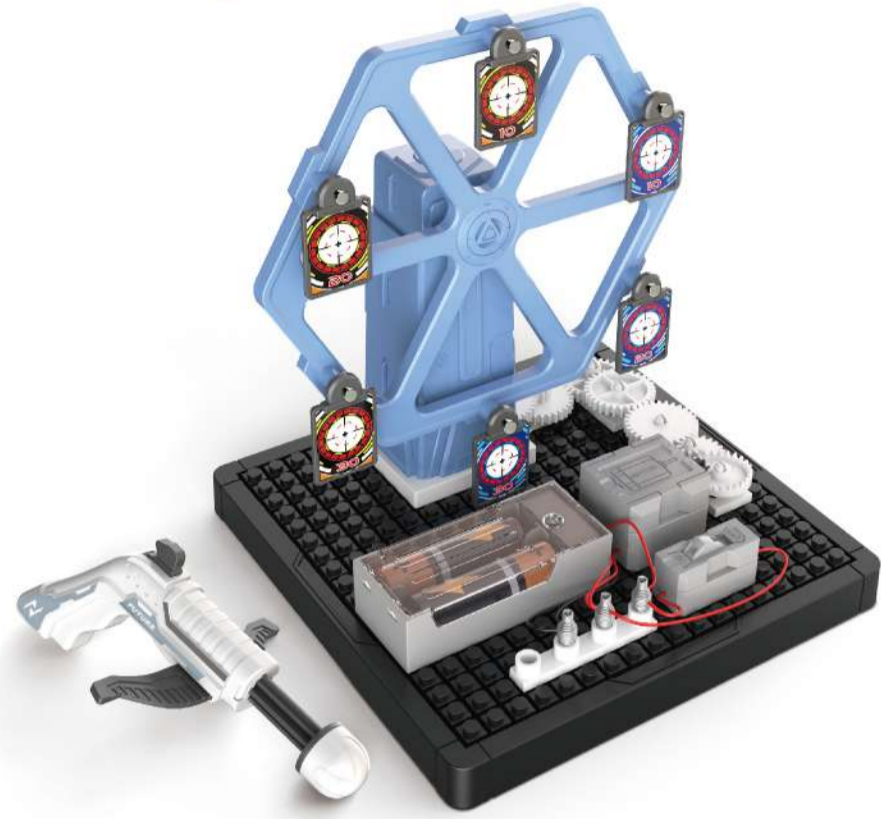

STEAM 8+ YEARS 65 PIECES


Safety Warning!

1. Read and fully understand this manual before assembly.
2. This product needs to be used and assembled under adult supervision.
3. Only suitable for children aged 8 years or older.
4. Not suitable for children under 3 years old. This product contains small parts which may be accidentally swallowed or inhaled. If swallowed, it can cause asphyxiation in children under 3 years old. If this does occur go to the doctor immediately.
5. This product contains pieces with sharp edges/corners e.g. on the components lead and plastic parts. Please keep away from children under the age of 3.
6. To assemble the model you will need to use tools(not included). Adult supervision is recommended.
7. Be careful when handling metal parts while constructing the model. These parts contain sharp corners and sharp edges.
8. Please keep this instruction manual as it contains important information.


Operating Specification Tips

1. Before assembling this product, please carefully check that all wires are connected correctly. Note: If any errors in the wiring are discovered, please fix them before plugging in the battery and the power supply. Failure to do so may result in damage to parts of the product.
2. After operation, please make sure to disconnect the battery switch and turn off the device.
3. Do not lock the motor or other moving parts, otherwise it may cause the parts to overheat.
4. The number of power supplies connected to this product cannot exceed the recommended number.

Self-Provided Tools and Use Skills

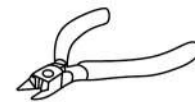


Diagonal Plier

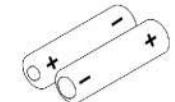

2x1.5V AA Battery


Please read through the tips below before starting and follow them during the assembly and usage of the product. Please cut out the required parts according to the assembling procedure. Please cut off burrs (raised parts, protrusions) of the parts cleanly to avoid any gaps during assembly.

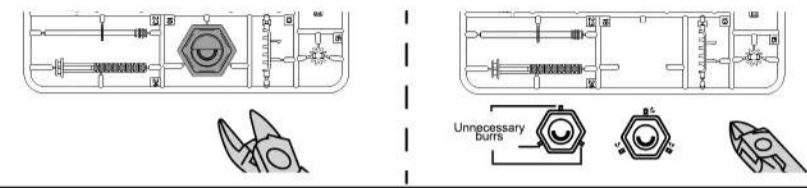


Introduction to gameplay

This is a simple rotating target with a crossbow. The whole rotating bracket is driven by gear transmission, and then six targets are installed on the bracket to form a rotating moving target. It's a self-rotating device that uses a single motor to drive 10 gears, which works like a gearbox. The rotating target is mounted on a stand, and then you shoot your crossbow at the rotating moving target to practice your hand-eye coordination.











⚠ The product contains sharp corners and sharp edges. Use with care.

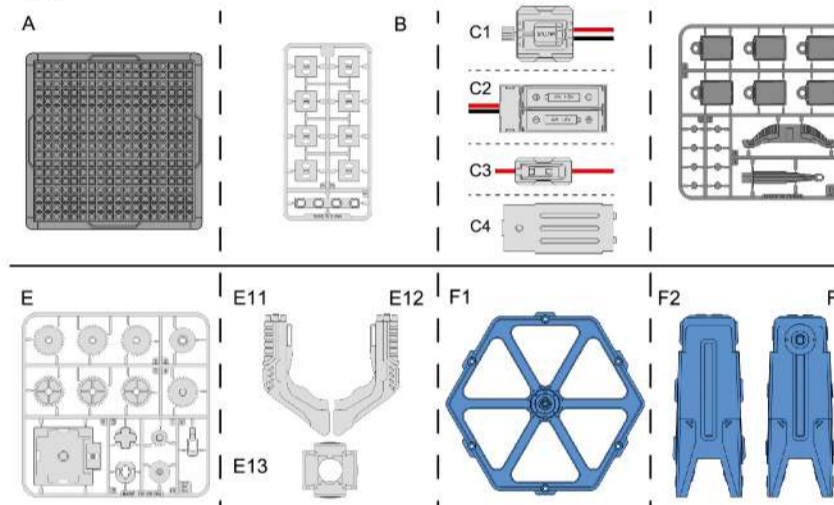


Parts list

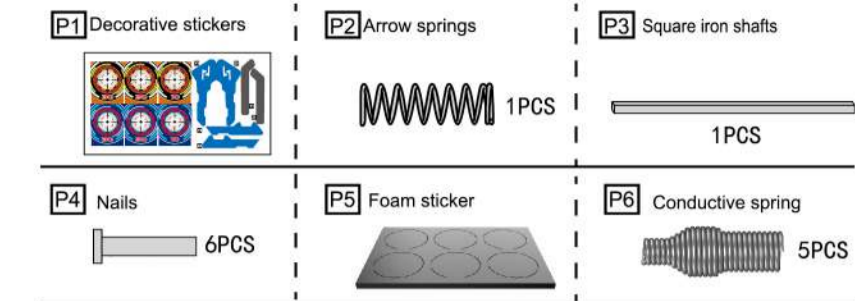



Installation steps

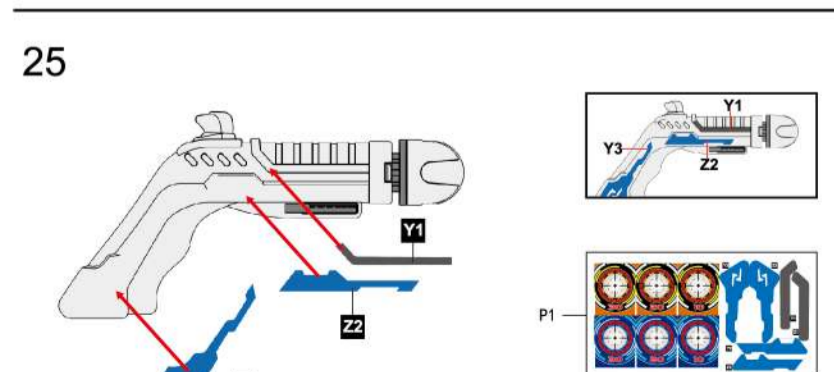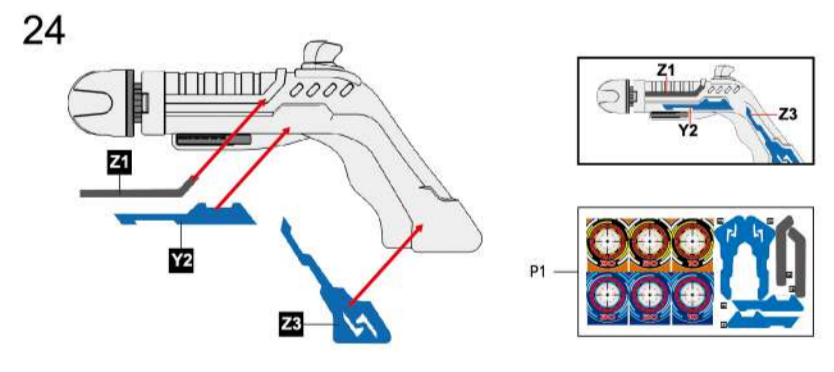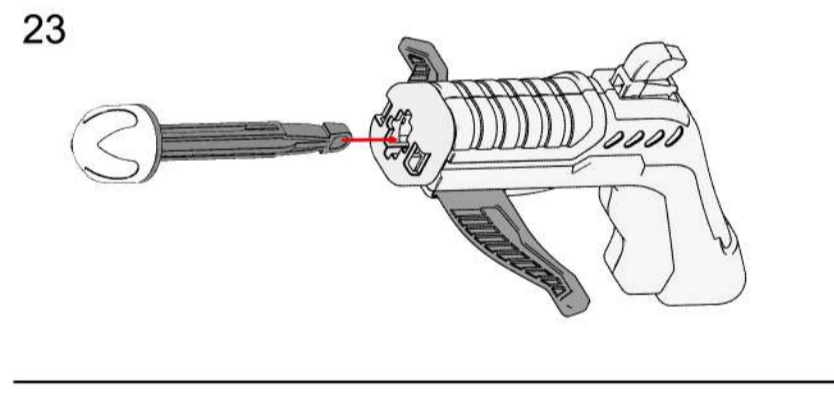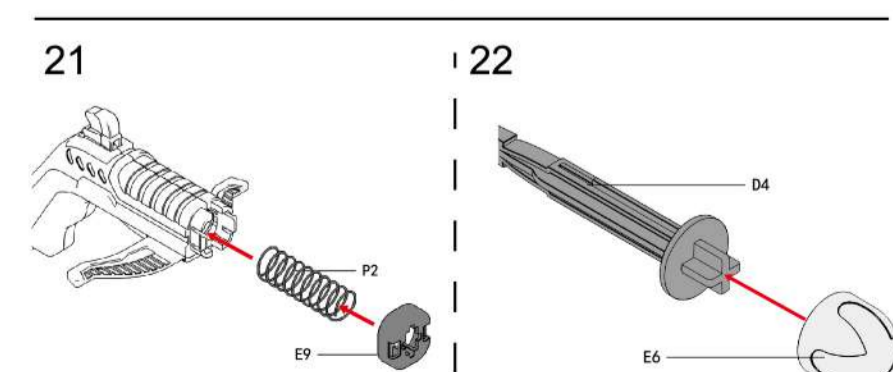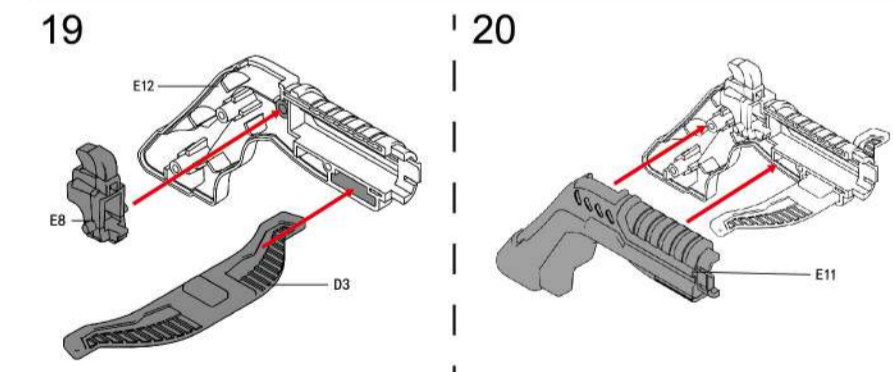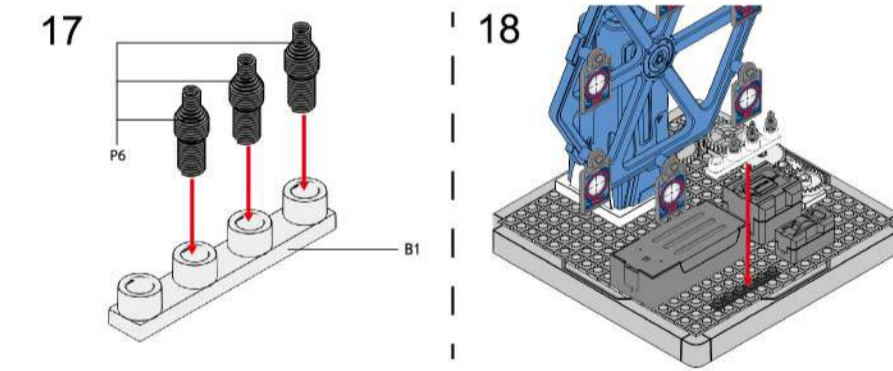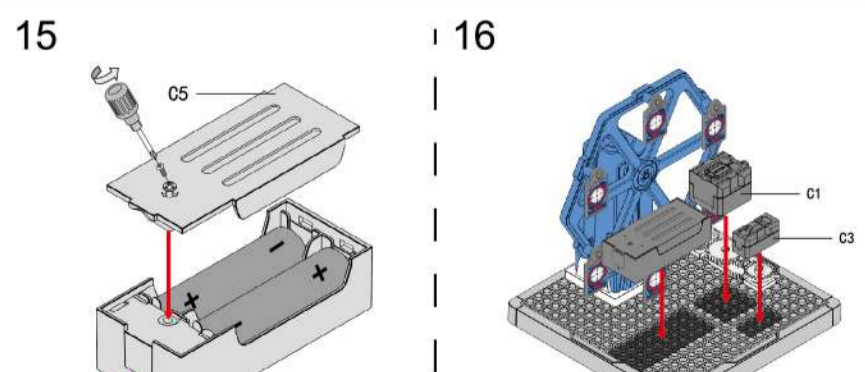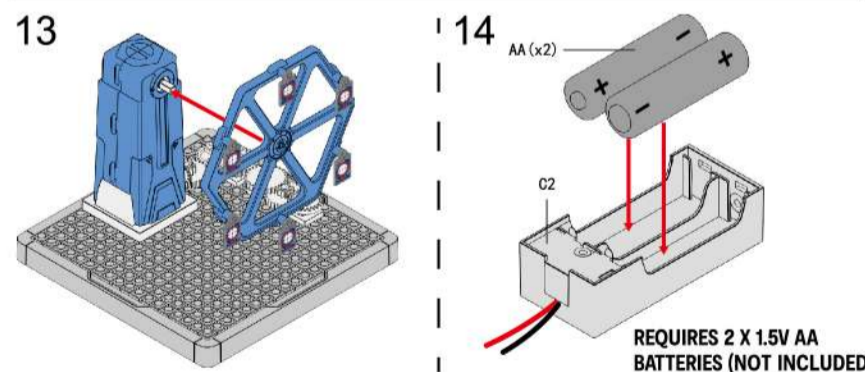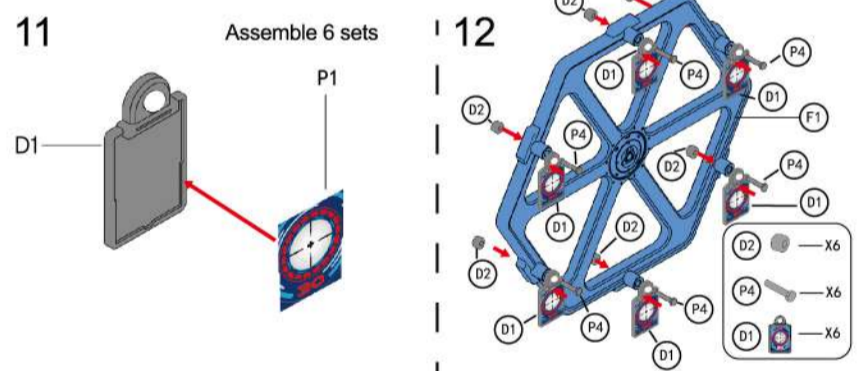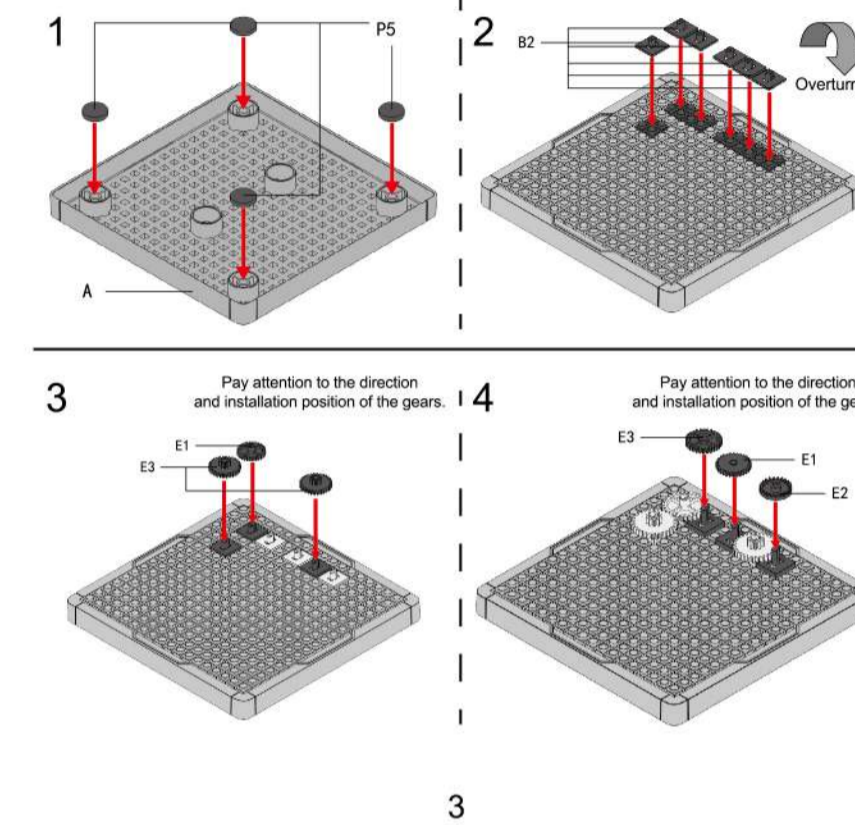

Installation steps

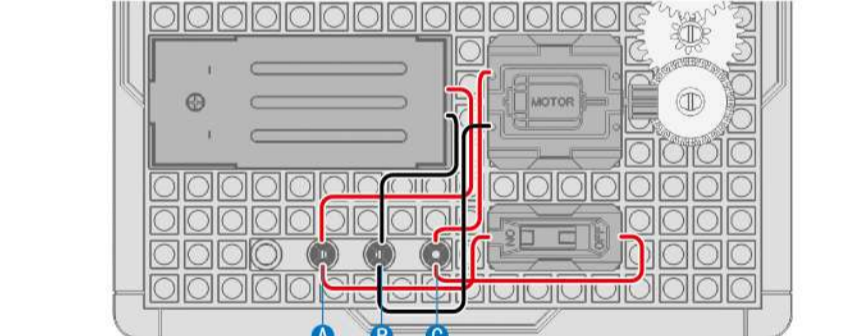

Name of accessory	Spring A	Spring B	Spring C
Battery Box	Red Wire	Black Wire	
Switch	Red Wire		Red Wire
Motor		Black Wire	Red Wire

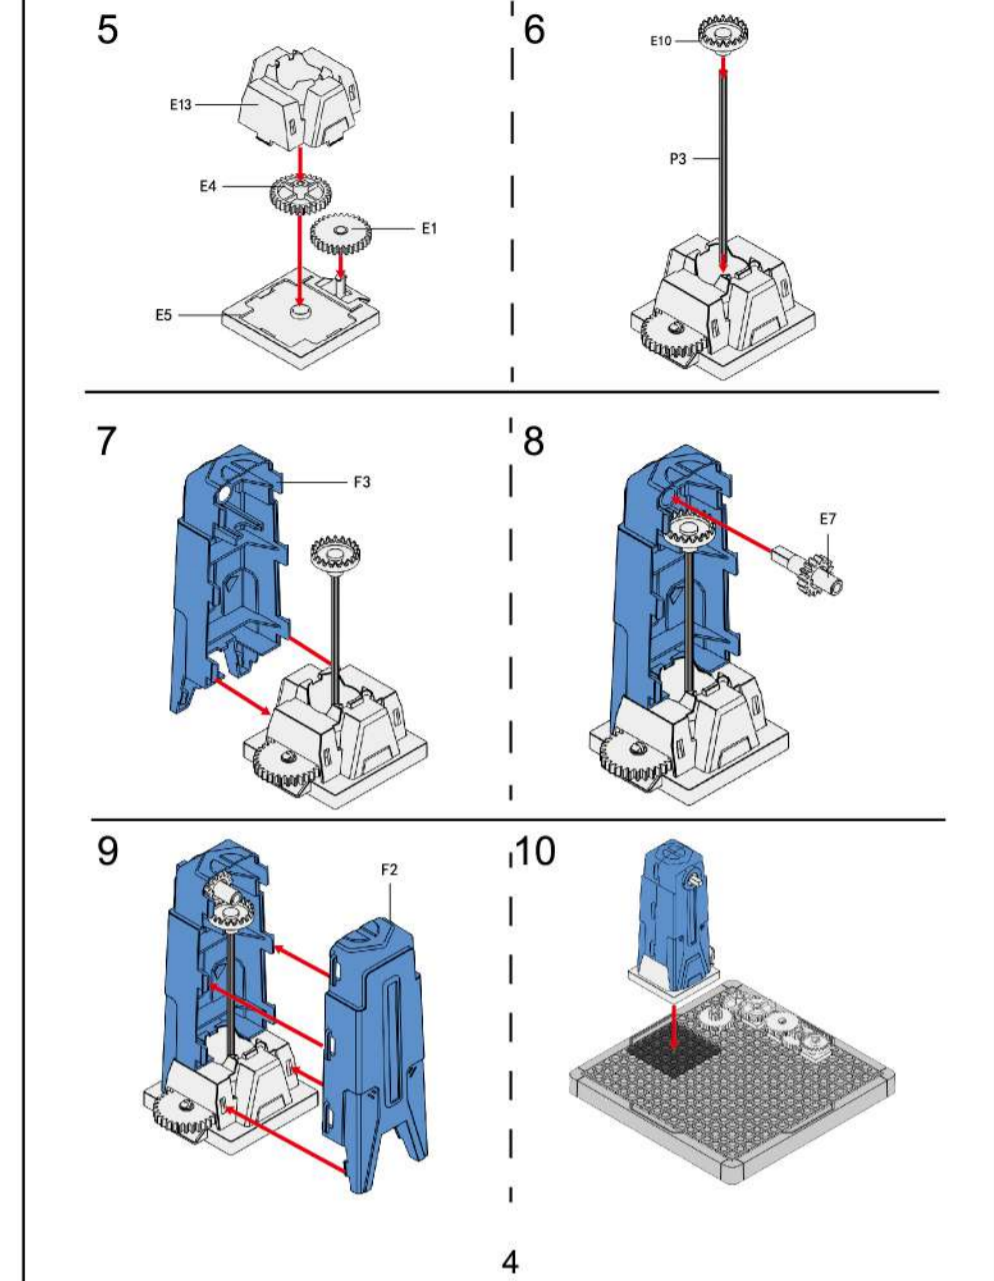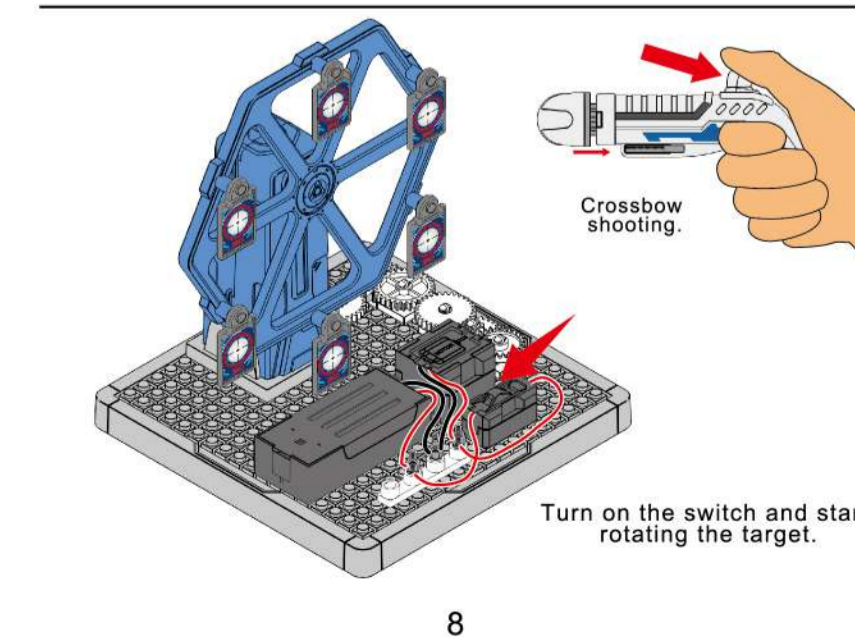

WARNING: DO NOT AIM AT EYES OR FACE. DO NOT USE PROJECTILES OTHER THAN THOSE SUPPLIED BY MANUFACTURER.

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

WARNING: CHOKING HAZARD
SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS, AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

WARNING: CONTAINS FUNCTIONAL SHARP POINT AND SHARP EDGE. USE WITH CARE.

ADULT SUPERVISION REQUIRED. PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN. PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE.

MADE IN CHINA
CUSTOMER SERVICE:
K MART AU: 1800 124 125
K MART NZ: 0800 945 995
TARGET AU: 1300 753 567

Keycode:4333541