

Assembly Instructions

43351268 TEDDY LOUNGE CHAIR

CARE INSTRUCTIONS: WIPE CLEAN WITH A SOFT DAMP CLOTH. DO NOT USE ABRASIVE MATERIAL AND SOLVENTS. SPOT CLEAN IF NEEDED. STORE IN A DRY PLACE. CHECK AND TIGHTEN ALL PARTS REGULARLY. FOR INDOOR AND DOMESTIC USE.


WARNING: DO NOT STAND ON THE CHAIR. USE ONLY ON A FLAT SURFACE. DO NOT USE UNTIL ALL SCREWS, BOLTS AND KNOBS ARE FIRMLY SECURED. ADULT ASSEMBLY REQUIRED. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.

MAXIMUM SAFE LOAD: 100KG.


Ax1








Cx4

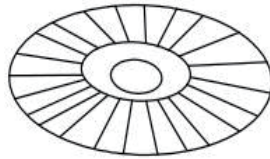

Bx4

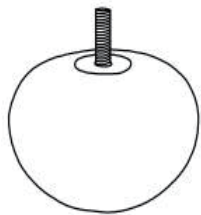


Dx4

    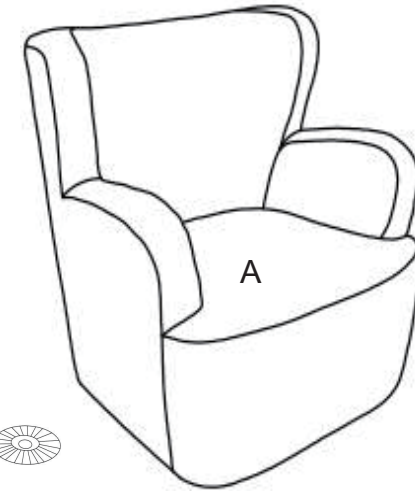


Feet tied with red rope in the carton

STEP 1

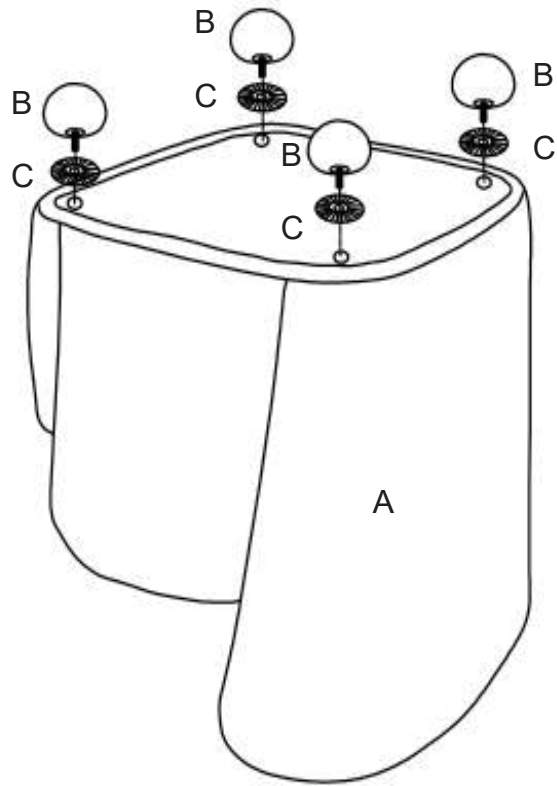

STEP 2

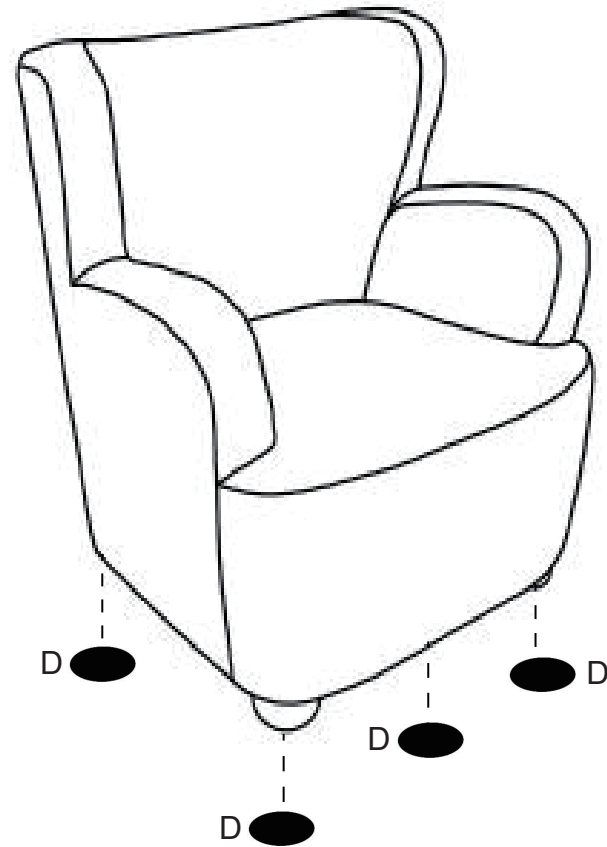

If the chair is not smooth after assembly, please use the part D to stick on the bottom of the foot to level.