




## Instruction manual

K: 43351299

### 3 IN 1 KEYBOARD SET

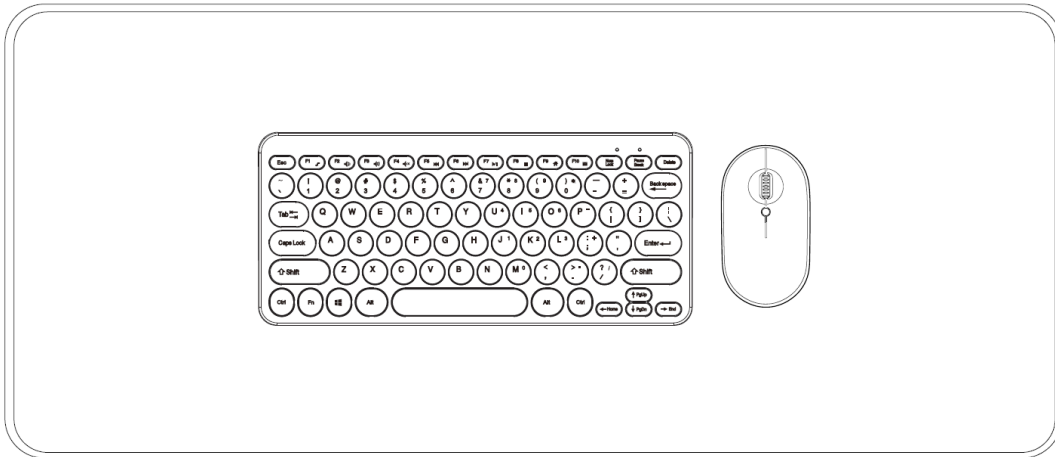

Please read all the information carefully before you use the product and keep the manual for future reference.

#### **Safety Instructions:**

Please read the instruction manual before using this device and follow all the safety instruction to avoid damage caused by improper use.

- Keep the instruction manual for future reference. Should this device be given to a third party, then this instruction manual must also be handed over.
- Use this device solely for its intended purpose.
- Only use this appliance indoors.
- Keep the appliance away from all hot surfaces and naked flames.
- Always put the appliance on a level, stable, clean, dry surface. Protect the appliance from extreme heat and cold, dust, direct sunlight, humidity and drops or jets of water.
- Do not immerse the appliance in water or in other liquids.
- Do not open the housing under any circumstances.
- Do not introduce any objects into the interior of the housing.
- Should the device malfunction due to electrostatic discharge or a short power surge, disconnect it from your computer and then reconnect it again.

#### **Features**

2.4GHz wireless technology

800DPI / 1000 DPI / 1200 DPI adjusting mouse sensor

Working distance up to 10m (without any obstructions)

## System requirements

Compatible with Windows, Mac OS, Android operating systems

## Before first use

1. Unpack the device and check if all parts are there and undamaged.  
Should this not be the case, return the product to store for replacement.
2. **Danger of suffocation!** Keep all packaging materials away from children.
3. Dispose of the packaging materials properly. Inform yourself at the local authorities regarding collection points or garbage separation.
4. Remove all protective foils and packaging material prior to use.

## Product Overview



## Install the Battery

1. Remove the battery compartment covers of the mouse and keyboard, and insert 1xAA battery to mouse and 2 x AAA batteries to keyboard (not included in the package). please notice the Battery place of anode and cathode of the mouse and keyboard. Caution ! Danger of explosion if the batteries are incorrectly replaced.
2. Replace the battery compartment covers again, making sure it is closed firmly.

## Notes on batteries

Only use top-quality batteries. Cheap batteries could leak and damage the device as a result.

If the batteries leak, remove them with a cloth and dispose of them accordingly. Ensure that leaking battery acid does not come into contact with skin and eyes. If you do get battery acid in your **eyes**, flush them thoroughly with lots of water and consult a physician immediately! If battery acid comes into contact with your skin, wash the affected area with lots of water and soap.

If the device is not to be used for an extended period of time, then the batteries should be removed, as the device could become damaged should they leak. If the device functions weaken, replace all batteries.

Batteries do not belong in household waste! Expired batteries must be disposed of in an environmentally friendly way and according to the applicable legal regulations.

Batteries are very dangerous if swallowed. Please keep the batteries and the device components away from children at all times. If a battery is swallowed, seek medical attention immediately.

Batteries must not be recharged or activated with other means, dismantled, thrown into fire or short-circuited.

Remove the batteries prior to disposing of the device.

### **Connecting the USB Receiver**

1. Remove the USB receiver from its compartment inside the keyboard.
2. Plug the USB receiver into a free USB port on the computer, then the mouse and keyboard are connected. The device does not require a driver.

### **Auto Wake Sleep**

After a period of non-use, your mouse and keyboard will enter sleep mode to save battery life. To wake your keyboard, simply press any key or move your mouse.

### **Mouse pad**

Size: 70\*30cm