

Disney FROZEN

BLUETOOTH DUAL MIC KARAOKE STAND



INSTRUCTION MANUAL

Please read these instructions carefully and retain for future reference.



DY-7541-FZ

INTRODUCTION

Let your children's lyrical talents shine with this Dual Mic Karaoke Stand! What makes this product an ideal accessory for any household is that during music playback, the child can sing along to the currently played song or add lyrics of their choice to the notes that are being played. It also makes mimicking your favorite musical stars enjoyable and effortless.

HIGHLIGHTS

- Bluetooth
- Mic Input
- Preloaded Melodies
- Includes 2 x Wired Microphones
- Adjustable Height (76 -105 cm)
- LED lights built into the base and the stand
- Speaker Built into the Base of the Stand


PACKAGE CONTENTS

- Double Mic Karaoke Stand
- 2 x Wired Microphones
- Instruction Manual

SPECIFICATIONS

- Impedance : 8 Ω
- Battery Type : 3 x AA Batteries
- Frequency Response : 2.2Hz - 12kHz
- Rating : 4.5V --- 0.12A, 0.5W
- Height Adjustment : 76 cm – 105 cm
- Speaker size : 57mm

IDENTIFYING PARTS

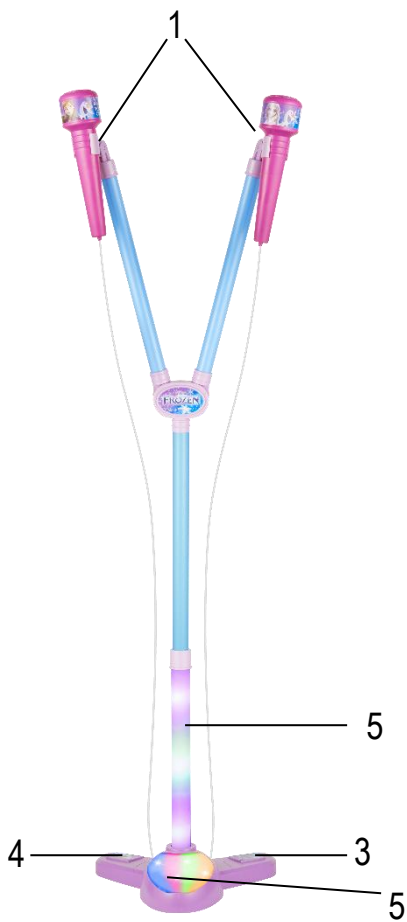

1. Double Microphones
2. ON / OFF Switch
3. Pause/Resume
4. Play Melodies/ Next Track
5. LED lights
6. Microphone Auxiliary Ports

INSTRUCTIONS FOR USE


LOADING BATTERIES

- Remove the battery cover at the back of the Karaoke stand and insert 3 x AA batteries.
- When inserting batteries, make sure the + positive side of the batteries fits into the side marked with a + and the – negative side is inserted into the side marked with a – symbol.
- When the battery level is too low, the music will start to sound slow and / or unclear and the light effects will also appear dim or unstable.
- It is time to replace the batteries with new ones to continue enjoying the Karaoke.

Note:

- Please do not put any other batteries than the AA-size batteries into the Karaoke stand.

ASSEMBLY INSTRUCTIONS

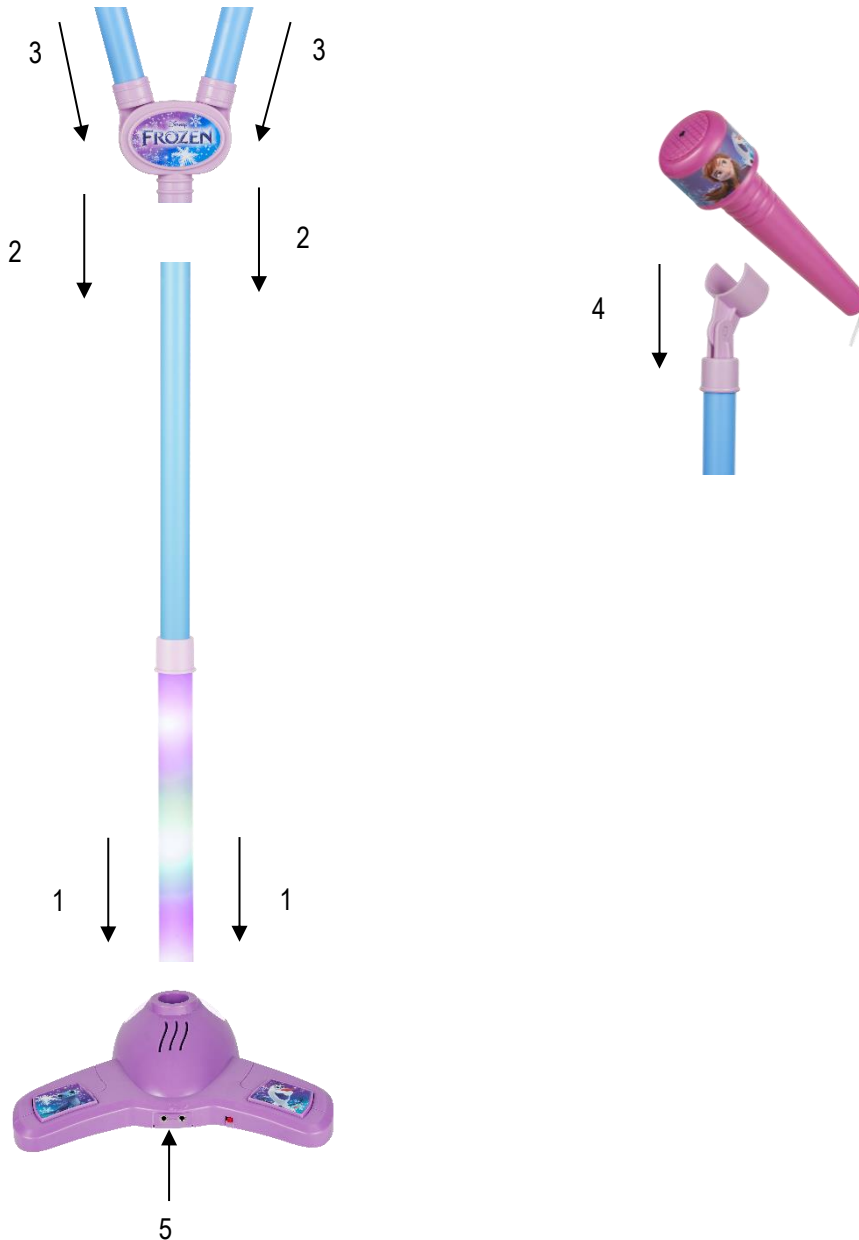

1. Insert the LED Light Pole into the Base of the Stand.
2. Connect the Dual Mic Joint to the Pole.
3. Insert the Mic Poles into the Mic Joint'.
4. Connect the Mic Holder to the Mic Poles and insert the Mics.
5. Connect the Mics by inserts the Auxiliary tip into the Auxiliary Port at the Base of the Stand.

GETTING STARTED

FUNCTION	OPERATION
Switch ON / OFF	Switch the ON/OFF button to ON
Select Next Track	Press the PLAY/NEXT TRACK Button to Play the built-in melodies. Press the PLAY/NEXT TRACK Button again to Play the next song
Increase / Decrease Volume	The volume may be increased or decreased when connect to your Mobile Phone
Pause /Resume songs	Press the PAUSE/RESUME button to Pause/Resume songs
Connect Mobile Phone in Bluetooth Mode	The Karaoke stand is automatically in Bluetooth mode. Pair the Karaoke stand with your device by searching for “Frozen”

TROUBLESHOOTING

1. **When I play music on my phone, I cannot hear it on the speaker.**
 - a) Ensure the device's volume is not off or low.
 - b) Ensure that your phone's volume is at your preferred level.
2. **The Karaoke speaker cannot switch on.**

Remove the batteries and re-insert them. Ensure that your batteries are not flat.
3. **The karaoke speaker plays music at very low volume even if I increase volume.**
 - a) Ensure your batteries are full or at least not low on power.
4. **I want to play a different music from the preloaded songs on my karaoke speaker.**

Simply press the button on the right foot of the machine to play the built-in melodies.
5. **Why can I not remotely control the karaoke from my smartphone when playing music?**

The music played through your karaoke speaker is directly picked up by the double microphones on the sides of the speaker; so, if the device from which the music is played is far, the microphones lose signal strength and cannot receive the transmitted sound.
6. **Why is the LED Light Pole Not Working?**

Ensure the Light Pole has been firmly inserted into the base.

SAFETY PRECAUTIONS



- This product is not intended for commercial use and has been tested for household use only.

- To reduce the risk of fire or electric shock, never use your Karaoke Speaker Unit near water or in areas where it can come into contact with water. Never handle the Karaoke speaker if they have been dropped into water or any other liquid. If the product comes into contact with water while switched on, this poses a safety hazard.
- Always make sure your hands are dry before replacing the batteries.
- **CAUTION:** Do not remove the panel covers by unscrewing them. To reduce the risk of electric shock, do not remove the cover. No user-serviceable parts inside. Refer servicing to a qualified service personnel.
- **DO NOT** use any batteries or power connections not recommended by this document, or of a lesser Amperage or Voltage.
- **DO NOT** operate the product with flat batteries or electrical power connection, or after it has malfunctioned, it has been dropped or damaged in any way.
- **WARNING:** Always keep optional accessories, small parts and packaging out of the reach of babies and small children, as these items may pose a choking hazard.
- Always make sure to switch off your Karaoke Speaker Unit when not in use; this will help lengthen battery life.
- **CAUTION:** Do not disassemble the battery or dispose of it in a fire.

CLEANING AND CARE INSTRUCTIONS – GENERAL

- **Before Cleaning:** Ensure that your Karaoke Speaker Unit is turned off before cleaning or maintaining your device.

Cleaning: Wipe down the surface of your Karaoke Speaker Unit using a soft, slightly damp cloth.

- Do not use any harsh or abrasive cleaning chemicals or materials on your Karaoke Speaker Unit; doing so may damage or scratch the surface finish.
- Do not expose your Karaoke Speaker Unit to direct sunlight or high temperatures for extended periods of time.
- Do not store in temperatures over 60°C.
- Do not expose the battery to excessive heat such as sunshine, fire or the like. Store in a cool, dry place.


ENVIRONMENTALLY FRIENDLY DISPOSAL

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH THE EUROPEAN UNION DIRECTIVE ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT.



At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority designated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

- Never dispose of used electronics with ordinary solid waste since they contain toxic substances.
- Always dispose of used electronics in accordance with the prevailing community regulations that apply to the disposal of electronics. If there are no regulations concerning electronics disposal, please dispose of the device in a waste bin for electronic devices.

 WARNING	Lithium-ion Batteries and/or products that contain Lithium-ion Batteries can expose you to chemicals including cobalt lithium nickel oxide and nickel, which are known to the State of California to cause cancer and birth defects or other reproductive harm.. For more information, go to www.P65Warnings.ca.gov .
---	---



DISCLAIMER

All product and company names are trademarks™ or registered® trademarks of their respective holders. Use of them does not imply any affiliation with or endorsement by them.