


Backpack Safe

STRAP INSTALLATION

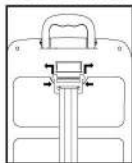

Money note slot



Coin slot



OPEN THE SAFE

1. Enter a three-digit password (The default password is 000)
2. Scan the fingerprint to open the safe.



CHANGE THE CODE

1. Press the default code 000 to unlock the safe.
2. Press and hold the "*" button until the red light flickers. Input a new 3-digit code and press the "#" button to save it.

Note: If you forget the password, it can be reset to the default one by removing and reinstalling the batteries.



WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

K: 43-393-022

T: 69-577-895

ADULT SUPERVISION REQUIRED.

PRODUCT MAY VARY FROM IMAGE SHOWN.

PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE.

WARNING: CHOKING HAZARD AND STRANGULATION HAZARD - SMALL PARTS AND LONG CORD. NOT FOR CHILDREN UNDER 3 YEARS.

CAUTION: BATTERY INSTALLATION BY ADULT REQUIRED.

WARNING: THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

 
MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567



REQUIRES 3 X 1.5V AA BATTERIES (NOT INCLUDED).