



anko

Medium Fish Tank

K: 43448630 | T: 70016314

Capacity: 9.5L

Dimension: 32cm(H) x 20cm (W) X 20cm (D)

Input: USB 5Vdc

USB adaptor not included

Filter not included

Note:

- Suitable for a small/tetra sized fish.
- A water treatment such as aquarium conditioner (not included), must be used when adding water to the tank. Read instructions on aquarium conditioner packaging on how to use.
- Do not add fish immediately into the aquarium after setting up. A minimum of 1 week is required after aquarium conditioner is added. This 1-week period will allow for any chemicals and pollutants to be adequately dissolved in the water, along with producing good bacteria to grow in the tank.
- Before adding the fish to the aquarium, float your new fish in the bag provided for about 30 minutes, so that the water temperature in the bag is the same as that in the aquarium.

Instructions:

- 1.Choose a position away from direct sunlight and cold drafts. Too much sunlight can result in excessive algae growth in your aquarium.
- 2.Rinse the tank and decorations (gravel, decoration, etc. not included) before use. Do not use soaps or detergents as these are harmful to the fish.
- 3.Place the tank on a flat level surface. Don't position the tank on top of other electrical appliances (e.g. fridge). Remember, once the tank is filled with water, it becomes heavy, and moving the tank could result in damage to the tank.
- 4.Fill up the tank with water (Fig. 1)
- 5.Connect the USB plug to any idle USB port at home (USB adaptor is not included). To turn on colour changing LED, touch the on/off icon located on top. (Fig. 2)
- 6.Remember to always unplug the USB before undertaking any maintenance, ensuring the plug remains dry.



Fig. 1



Fig. 2



Fig. 3
Aquarium Pump with
Filter available
K: 41863565
T: 68745653

FAQS

If the LED doesn't light up – Make sure the USB cable is plugged into the adaptor and is securely connected. Your fish will also need a filter (Fig. 3). These are not included but can be purchased separately.

Maintenance:

- Water health and colour will determine how often the tank requires maintenance. Generally, maintenance should be carried out every 2 weeks.
- Remove the fish with water taken from the aquarium. Clean the gravels and decorations (if any) and remove dirt, debris & fish feces. Put back fish and water taken from the aquarium.
- In the event of changing water, only change 25% of the water, and fill with tap water. Do not forget to add aquarium conditioner to the tap water.

Cleaning the LED light:

Clean the LED light regularly to remove debris gathered on the plastic cover. Remove the LED light by removing four screws, clean with a dry cloth, then reassemble LED light.

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us