


---

# anko

**Cordless Water Kettle  
WK8256N  
Instruction Manual**

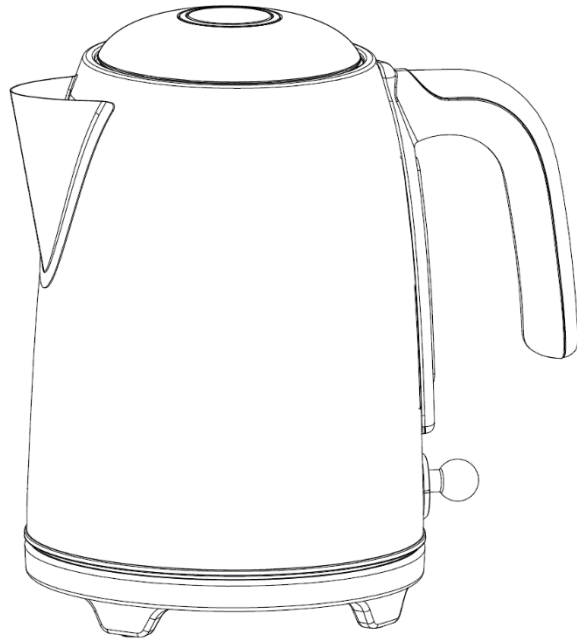

## **IMPORTANT INSTRUCTIONS**

- Please read these instructions carefully before using the water kettle for the first time.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- For electrical safety, if the supply cord is damaged, it must be replaced by qualified electrical person.
- If the kettle is overfilled, boiling water may eject out of the spout.
- Kettle is only to be used with the stand provided.
- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments,
  - farmhouses,
  - by clients in hotels, motels and other residential type environments,
  - bed and breakfast type environments.

- 
- Do not operate the kettle if damaged, after an appliance malfunction or it has been damaged in any manner, return to the product to Kmart/Target.
  - Avoid spillage on the connector.
  - Heating element surface is subject to residual heat after use.
  - Use the kettle according to instructions in this manual, any misuse may cause electric shock or other hazards.
  - This appliance is not intended to heat liquid other than water.
  - Regarding how to clean the kettle, please refer to section with heading <Cleaning >.
  - Before you connect the kettle to mains power, make sure that the voltage indicated on the rating plate, located on the bottom of the water kettle matches the mains voltage in your home. If it does not, do not use. The kettle is tested and certified for use in Australia and New Zealand.
  - The kettle will switch off automatically when the water has boiled. If you want to stop the heating process before the kettle automatically switched off, press the ON/OFF switch up.
  - After the kettle has switched off automatically (or has been switched off manually) it may need time to cool down. After 15-20 seconds, the kettle can be switched on again.
  - Always fill the kettle with water before switching it on.


- For electrical safety, the kettle is designed to disconnect electrical power to the heating element during abnormal operating conditions. If the water kettle is accidentally switched ON without water, the boil dry protection circuit will activate.
- If the kettle ever boils dry, the power indicator will go out. Allow 15 minutes to cool before refilling with cold water. The safety cutout will automatically reset during this time.
- Place the kettle on a stable flat surface.
- Do not use this appliance outdoors.
- Ensure that the kettle is switched off before removing it from its base.
- Do not remove the kettle from its base during operation.
- Never immerse the kettle, base unit or cord in water or any other liquid. Do not allow liquid to penetrate the electrical parts of this kettle.
- Prevent children from pulling on the mains cord or knocking the kettle over.
- Ensure that the mains lead does not overhang the benchtop surface.
- The outside surface of the kettle may get hot during use, please take care when using the kettle.
- Never fill in water more than the maximum acceptable water level.
- Never use the kettle with the lid open.

- 
- To prevent scalding, do not open the lid when steam is coming out of the spout.
  - Before cleaning the kettle, disconnect the power cord from the mains power outlet socket and wait until it has completely cooled down.

**CAUTION:** Do not operate the kettle on an inclined plane. Do not operate the kettle unless there is water in the kettle above the minimum water level mark. Do not move while the kettle is switched ON.

**CAUTION:** To prevent damage to the appliance, do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.

## FEATURES OF KETTLE

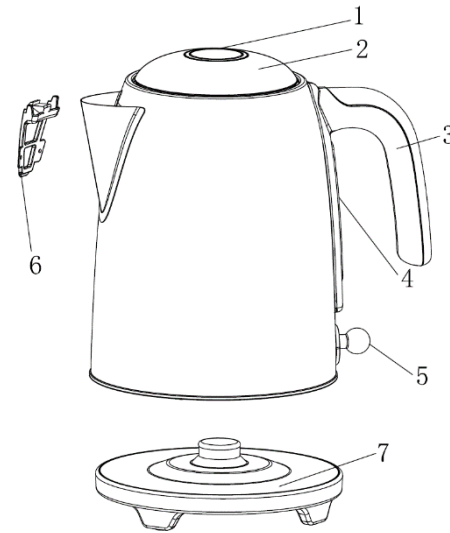

1. Lid Button
2. Lid
3. Handle
4. Water level indicator
5. Power Switch Button
6. Filter
7. Base Unit

---

## **Before first use**

Before first use, it is recommended to operate the kettle for 2 or 3 times following the instructions below. This will remove any dust or residues remaining from the manufacturing process.

- Lift the kettle from the base before filling.
- To fill the kettle, open the cover by pressing the lid button downwards, then fill to the desired level (Min. 0.6L – Max. 1.7L). Close the lid by pressing it down until it clicks into place.
- Plug the power supply cord into a mains power outlet socket. Press the ON/OFF switch, and the power indicator should light up.
- When the water has boiled, the kettle will automatically switch itself OFF. You can stop the boiling process at any time by lifting the On/Off switch. The power indicator light should go out.

## **Cleaning**

- First read the instructions in the section titled “IMPORTANT INSTRUCTIONS”.
- Always disconnect the kettle from the mains power outlet before cleaning.
- Before cleaning, make sure the kettle has cooled down.
- Empty the kettle and clean the exterior surface of the

kettle with a clean, damp cloth to preserve its original highly polished finish. Dry and polish with a soft cloth.

- Do not use abrasive cleansers or scouring agents of any kind inside or on the exterior of the kettle.
- Only use a dry cloth to wipe the base of the kettle.
- Avoid wetting the electrical parts.
- Do not immerse the kettle or power base in water or other liquid, and make sure the electrical kettle socket is kept dry.
- To clean the filter, empty the kettle and allow it to cool. Open the lid, lift out the filter, rinse the filter under warm water and brush off any impurities.
- Refitting is the reverse of removal.

## **Descaling**

- Half fill the kettle with tap water and add the juice of 1 lemon to the water.
- Boil this mixture and allow it to stand for 15 minutes. Re-boil the mixture and allow it to stand a further 15 minutes. Re-boil this mixture a third time, then rinse the kettle well.

## **TECHNICAL DATA**

Voltage: 220-240V~ 50-60Hz

Power: 1850-2200W

## 12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at <a href="http://kmart.com.au">kmart.com.au</a>	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at <a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a>