

anko

Multistylus Starter Kit Instruction Manual



TO-2000

Rev 01

To ensure proper operation of this device, please read this instruction manual carefully before using the device and keep it for further reference.

IMPORTANT SAFEGUARDS

The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

Children being supervised not to play with the appliance.

Burn hazard. Keep appliance out of reach from young children, particularly during use and cool down.

WARNING: For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

Ask an electrician for advice. Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the mains socket.

After use, ALWAYS TURN OFF THE APPLIANCE AND UNPLUG FROM THE MAINS SUPPLY. Allow to cool in a safe place out of the reach of young children.

Do not leave the appliance where children could touch it and be injured. After use, the barrel may take up to one hour to cool to a safe temperature.

WARNING: When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off. Do not use this appliance near bathtubs, showers, basins or any other vessels containing water.


THE MULTISTYLER HANDLE AND BARRELS ARE DESIGNED TO BE EXCLUSIVELY COMPATIBLE WITH EACH OTHER. DO NOT ATTEMPT TO USE THEM IN COMBINATION WITH ANY OTHER PRODUCTS.

- This appliance must not be used outdoors.
- Avoid allowing any part of the appliance to come into contact with the face, neck or scalp.
- Do not use the appliance while drowsy.
- Do not leave the appliance unattended while plugged in.
- Only set the appliance down on the silicone mat provided.
- Do not operate with wet hands.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use any extension cord with this appliance.
- Do not let the cord hang over the edge of a table or counter or let it come in contact with any hot surfaces.
- Do not carry the appliance by the power cord.
- Do not wrap the cord around the unit. Check the cord regularly for any sign of damage.
- Do not place the appliance on soft furnishings or surfaces that may be damaged by heat or any combustible materials.
- If the power cord becomes damaged, discontinue use immediately and return the appliance to your nearest authorised service dealer for repair or replacement in order to avoid a hazard.
- Do not use the appliance if it is damaged or malfunctions.
- Do not take the appliance apart. There are no serviceable parts inside. Always ensure the unit is locked either straight or at 90° when using.
- Let the appliance cool down before cleaning and storing away.
- Do not allow metal parts of the barrels to touch bare skin, the barrel reaches high temperatures and will cause burns.
- Care should be taken while styling the back of your head to avoid any burn on arms, neck or ears.
- This appliance should only be used for styling human hair. Do not use on synthetic hair or wigs.
- Always place the appliance with the stand, if any, on a heat-resistant, stable flat surface.

FEATURES



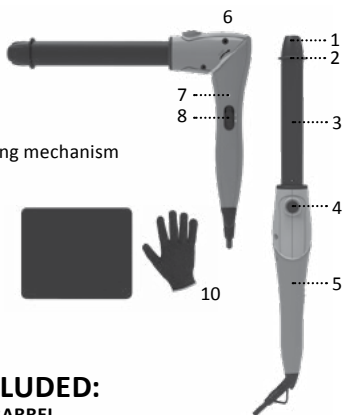

1. Curling Barrel Tip
2. Curling Barrel Edge*
3. Ceramic curling barrel
4. Eject Button
5. Handle
6. 90° "twist and swivel" rotating mechanism
7. Digital on/off display
8. Power Button
9. Heat resistant silicone mat
10. Heat resistant glove

*NOTE: Curling Barrel Edge will become hot when in use. Do not touch.



ADDITIONAL

ATTACHMENTS INCLUDED:

-  **SOFT WAVES BARREL**
Glamorous soft waves
-  **CONICAL WAND WITH DETACHABLE SPIRAL**
Perfectly defined luxurious drop curls
-  **DEEP BEACH WAVER**
Big, bouncy 'S' shaped beach waves
-  **SMOOTH BRUSH**
Fast and Effortless detangling, shape and smooth results

MULTISTYLER BARRELS

The Multistyler Starter Kit comes with a ceramic curling barrel. Other styling attachments can be purchased individually.

TWIST & SWIVEL HANDLE



The Multistyler Handle can be used straight like a regular styling wand or rotated to 90° making it easier to curl. To rotate the handle, take hold of the purple part of the handle and twist the black part away from you in an anti-clockwise direction until it locks into place, making sure to keep your hands away from the heated barrel. The heated barrel should always be pointed away from you when twisting.

We recommend you practice twisting the handle with the Multistyler switched off and attachment cool, before using for the first time.

BEFORE USING YOUR MULTISTYLER

Ensure the hair is dry and tangle-free.

For extra protection, apply a heat protection spray of your choice. Clip up your hair ready for styling.

ADDING & CHANGING THE BARRELS

Always ensure the appliance is turned off. Always allow the appliance to cool off before fitting or changing barrels.



1. To remove the existing barrel, press the eject button and carefully drop it off onto the heat resistant mat. Align "FRONT" arrow on the barrel with the "eject" button of the handle. In case the hot barrel doesn't automatically eject from the handle, cautiously grab the curling barrel tip of the barrel wearing your heat resistant glove and firmly pull the barrel away from the handle before placing it on the heat resistant mat.
2. To fit the new barrel, push it firmly into the barrel. It will automatically be locked. Make sure the barrel is safely locked into the handle before turning the appliance on.
3. Once fitted correctly, it should not be possible to remove the barrel without pressing the "eject" button.

GET STYLING

- Plug the product into a 220-240V mains power supply.
- Slide the power button to switch on.
- The appliance has 1 heat setting with a default temperature of 200°C. This temperature is not suitable for artificial hair such as hair extensions or wigs.
- Use the heat resistant glove to avoid any accidental burns.
- Section the hair prior to styling. Style the lower layers first.
- **The handle can be used straight like a regular styling wand or rotated to 90° making it easier to curl.**
- Hold the handle and wrap a section of hair around the heated barrel.
- Wait about 5-8 seconds, depending on your hair type, for curl to form.
- Unwind the hair and release the curl.
- Allow the hair to cool before styling.
- Repeat this around the head to create as many curls as desired.
- After use, switch off the appliance, unplug, place styler on the heat resistant mat and allow to cool before storing away.

Please note:

- This is a high performance product, avoid frequent use to prevent hair damage.
- Burn hazard. Keep appliance out of reach from young children, particularly during use and cool down.
- Regular use of styling products may deteriorate the coating.
- Do not scratch the surface of the product as this will deteriorate the effectiveness of the coating.

NOTES

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases

Kmart Australia Ltd.
C/- Customer Service Centre
690 Springvale Road,
Mulgrave Vic 3170
Customer Service: 1800 124 125
(Australia) or 0800 945 995
(New Zealand) or via
Customer Help at kmart.com.au

Contact for Target purchases

Target Australia Pty Ltd
C/- Customer Service Centre
2 Kendall Street, Williams Landing, Vic, 3027
Customer Service: 1300 753 567
or via Customer Help at
target.com.au/help/contact-us

anko