


anko

Shoe Dryers S5 User Manual

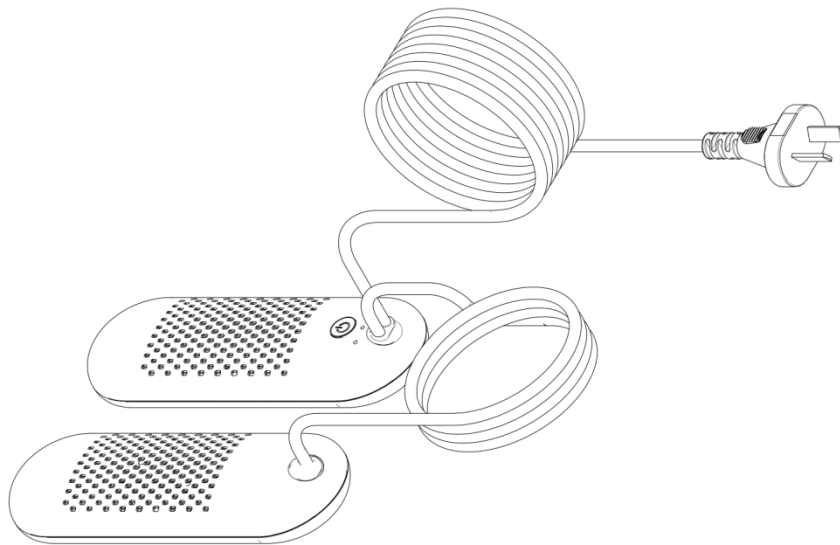


PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS

- **WARNING!** Failure to follow these safety instructions could damage the shoe dryers or your shoes.
- Only plug this appliance directly into an AC power supply with correct voltage. Refer to the appliance rating plate for the voltage information.
- Do not connect the appliance to the mains electricity supply by an extension lead, multi-socket and adaptor or similar.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- **IMPORTANT!**
- Keep surrounding area clean and well lit.
- Adequate ventilation must be provided.
- **DO NOT** operate in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.
- **NEVER** block air flow from freely exiting the boots or shoes being dried.
- **DO NOT** place gloves, mittens, hats or socks that may close off or reduce the air from escaping the shoe dryer.
- **DO NOT** operate in standing water.
- **DO NOT** expose the product to rain or snow.
- To reduce risk of damage to electric plug and cord, pull only by the plug rather than cord when disconnecting unit.
- Make sure cord is positioned so that it will not be stepped on, tripped over, or otherwise subjected to damage or stress.
- If supply cord is damaged, it must be replaced by manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- This appliance is for drying shoes at home. It is not designed or intended for use in Commercial environments. Do not use it for any other purpose.
- The appliance is not to be used with any shoes that have had industrial chemicals used for cleaning.
- This appliance is only intended for use indoors only within a domestic environment.
- To protect against electric shock do not immerse the appliance, power cord, plugs in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug the unit when not in use. Allow it to cool down before handling or cleaning.
- Keep the appliance away from heated surfaces.
- **IMPORTANT! Always operate the appliance on a flat, stable, and heat-resistant surface. Make sure that there is enough ventilation, so that hot steam can be released safely during use.**
- **CAUTION! For electrical safety DO NOT use on extremely wet shoes.**
- Ensure the shoes have been spin-dried before using the shoe dryers.

- Unplug the unit after use and before cleaning.
- **WARNING!** This appliance is intended only for drying shoes washed in water.
-  **CAUTION!** hot surface. The appliance may become hot during use. NEVER touch the appliance during use as they may cause burns to skin.
- **WARNING!** The appliance must not be supplied through an external switch device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.


Fire Hazards

Some fabrics on shoes are not suitable for use with the shoe dryers. The following **MUST NOT** be dried with the shoe dryers due to the risk of a fire or an explosion:

- Shoes that have been spotted or soaked with vegetable oil, cooking oil, suntan oil, linseed oil, salad oil, lubrication oil or grease. Oil affected items can ignite spontaneously, especially when exposed to heat sources such as shoe dryers. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If heat cannot escape, the items can become hot enough to ignite. Piling, stacking or storing oil-affected items can prevent heat from escaping and create a fire hazard. If it is unavoidable that shoes contain vegetable or cooking oil or have been contaminated by hair care products to be dried with shoe dryers, they should first be washed in hot water with extra detergent - this will reduce, but not eliminate the hazard.
- Shoes that have previously been cleaned in, washed in, or spotted with petrol/gasoline, industrial chemicals used only for cleaning, dry-cleaning solvents or other flammable or explosive substances are highly flammable. Highly flammable or explosive commonly found around the house include acetone, (nail polish remover) denatured alcohol, petrol/gasoline, kerosene, some spot removers, turpentine, waxes and wax removers should not be dried with shoe dryer. Items containing foam rubber (also known as latex foam) or similarly textured rubber-like materials. Foam rubber materials can produce fire by spontaneous combustion when heated.
- For your safety, and to reduce the risk of fire or an explosion, **DO NOT** store or use petrol or other inflammable vapours and liquids near the shoe dryers.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

KNOWING YOUR SHOE DRYERS

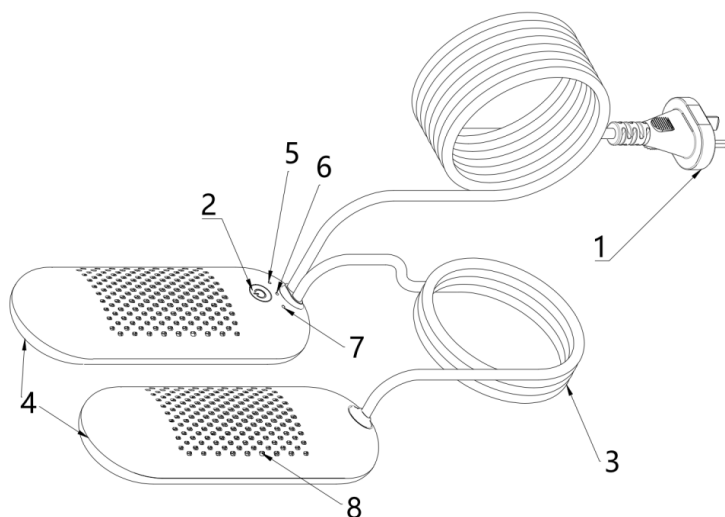

1	Power plug	5	Indicator-3 hours time setting
2	On/Off/Time setting button	6	Indicator-6 hours time setting
3	Power cord	7	Indicator-9 hours time setting
4	Main units	8	Hot air outlets

BEFORE FIRST USE

- After unpacking the appliance, check for transport damage and that all the parts mentioned in this manual are present. In the event of damaged or missing parts, return the product to Kmart.
- Do not discard the original box. It can be used for storage and dispatch to avoid transport damage.
- Clean the appliance as described in Cleaning and Maintenance. For your safety, make particular attention to the safety instructions in the manual.

HOW TO USE YOUR SHOE DRYER

This product is suitable for shoes, boots that are damp or slightly wet but not dripping with water, and socks that are spin dried in the washing machine. It can also be used to warming shoes and boots.

WARNING! Before using the appliance, please follow shoe manufacturer's instructions to ensure the shoe dryers can be safely used without damaging the shoes. If unsure, do not use.

1. Put the main units into damp shoes, boots or socks.
2. Connect the appliance to the mains power.

3. Press the on/off/time setting button to the pre-set time, and the corresponding indicator will illuminate.
4. The appliance will automatically stop when the set time is up. You can also stop drying by press the On/Off/Time setting button one or few times until the indicator goes out.
5. Unplug the appliance after finish drying.
6. Remove the main units from the shoes, boots or socks.

Tips

- Items must be thoroughly spun before drying, they should never be dripping with water when using the shoe dryers.
- To ensure the best drying effect, try to hang the shoe dryers in the air when drying socks.
- The air outlet should be checked for any sign of dust/ fluff, and this should be removed where possible.
- Drying time varies depending upon extent of moisture present in the boots or shoes, the size of the boots or shoes and the surrounding or ambient temperature and humidity. Shoes will dry more slowly on a cool or humid day.
- If shoes/boots are still damp after drying, you may need to run extra time or allow the items to finish drying naturally.

WARNING! To prevent heat damage, DO NOT put the shoe dryers directly on carpet, wooden floor or any fabric after it is turned on or immediately after use. Always place it on a heat resistive surface.

CLEANING AND MAINTENANCE

CAUTION: Make sure the appliance is unplugged from mains power and allow the appliance to cool down completely before cleaning.

Wipe the appliance with a damp soft cloth.

DO NOT wash any part of the appliance in water or any other liquid.

Allow the appliance to get dry before next use or storage.

STORAGE

1. Ensure the appliance is disconnected from mains power.
2. Allow the appliance to cool down completely.
3. Do not wrap the power cord around the appliance.
4. Store the appliance in a dry location and out of the reach of children.

TECHNICAL DATA

Voltage: 100-240V~ 50-60Hz

Power: 15W

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us