

Collapsible Washing Machine

Instruction Manual

Keycode: 43472192



Please read completely before using this machine.

Warning and Notice:

- This appliance is only to be used with the adapter provided.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Please do not let wet hands touch the plug and do not hold wire pull out socket.
- Please do not store gasoline in the vicinity of the washing machine or other combustible gases and liquids (so as not to cause fire).
- Please do not put water in the lower part of the washing machine main body or water (may cause the machine does not work because of its poor electrical).
- Please do not put water over 23°C directly into the washing machine.
- Children must be far away from the washing machine.
- When washing machine is working, please do not tilt or move the machine.
- Please pay attention to prevent scour splashed into eye.

Part List

Machine x1 ; Cigarette lighter x1; Water hose x1; Spin dryer bucket x1



Assembly Instruction


- Take out whole machine from color box and check if there's any missing parts.
- Fix the lid into the hole as below pic and check if it's assembled well from the outside and inside.



CHECKING



- Open the lid. One hand presses the bottom and one hand pull the handle to make the machine unfolded.

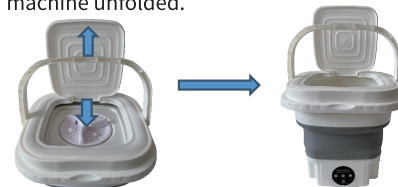

Technical Data

Keycode	43472192
Rated capacity:	0.5kg
Drum volume:	8L
Rated Voltage:	12VDC
Water temperature:	≤23°C

Detergents Function

It can effectively reduce the adhesion between stains and clothing and enhance the washing effect.

Detergent selection

It is recommended to use low-foam or non-foam soap powder that is commercially available;

Solution of adding detergent: When adding detergent, please put the detergent directly into the washing tub.

Operation Guide

- Check the water outlet is closed and then put a clean water directly into the washing machine.



WARNING: Please don't put water over 23°C. Don't overfill the water.

- Plug the cigarette lighter and then the machine will light up.



- Long press the following button 2-3 seconds for start.

- 1) Press the button slightly to choose which mode you need.

Please kindly note that after finishing one washing, you need to long press the button for start again and press slightly to choose other modes.


Please note that after modes switching, washing start needs to wait for seconds.

3 modes:

- 10min standard washing (normally for one pc T-shirt)
- 15min soft washing (normally for underwear)
- 2min semi dehydrated (need to assemble spin dryer bucket).



- 2) After finishing washing and before using semi dehydrated mode, please cut off the electricity and then remove the cover on the water outlet or use the hose to draw off the water.

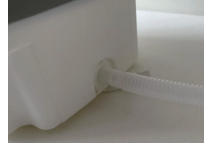

- 3) Fix the spin dryer bucket into the bottom turntable and put your clothes into it. After re-powering, press the button 2~3 seconds for start and press slightly again to choose 2min semi dehydrated.



- After finishing working, machine will be stopped automatically. If you need to stop the machine when it's under working, long press the following button 2-3 seconds for stop.
- **Scan this code to watch instructions.**



Cleaning and maintenance

After washing When the washing program is finished, please drain the dirty water from the washing machine, avoiding standing for a long time to spoil the water. Please wipe the machine clean and fold the washing machine as the folding method and put the cover on the bottom.

CAUTION: Make sure the adapter is disconnected from the socket and machine before cleaning the parts.