
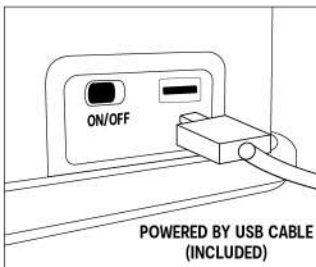


Candy Grabber

TWO POWER SUPPLY OPTIONS

Tip: Remove the batteries when using USB cable.


BATTERY INSTALLATION

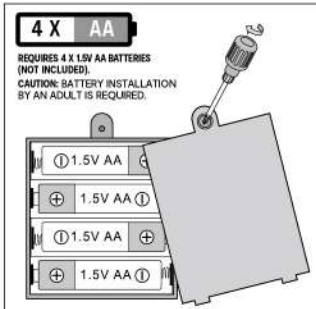

HOW TO PLAY

- 1 - Lift the lid and add candy into the machine. It is recommended to use pre-wrapped candy.
- 2 - Press the middle button to start the game.
- 3 - Manoeuvre the left-hand direction control lever to your desired location.
- 4 - Pull down the right-hand claw control lever to try to grab some candy.
- 5 - Once you have successfully grabbed some candy, move the left-hand direction control lever to the exit and drop off the candy by pulling down the right-hand claw control lever.
- 6 - Collect your win and enjoy!

Note - Each play will last about 45 seconds. If you are unsuccessful in grabbing some candy, restart the game by pressing the middle button.

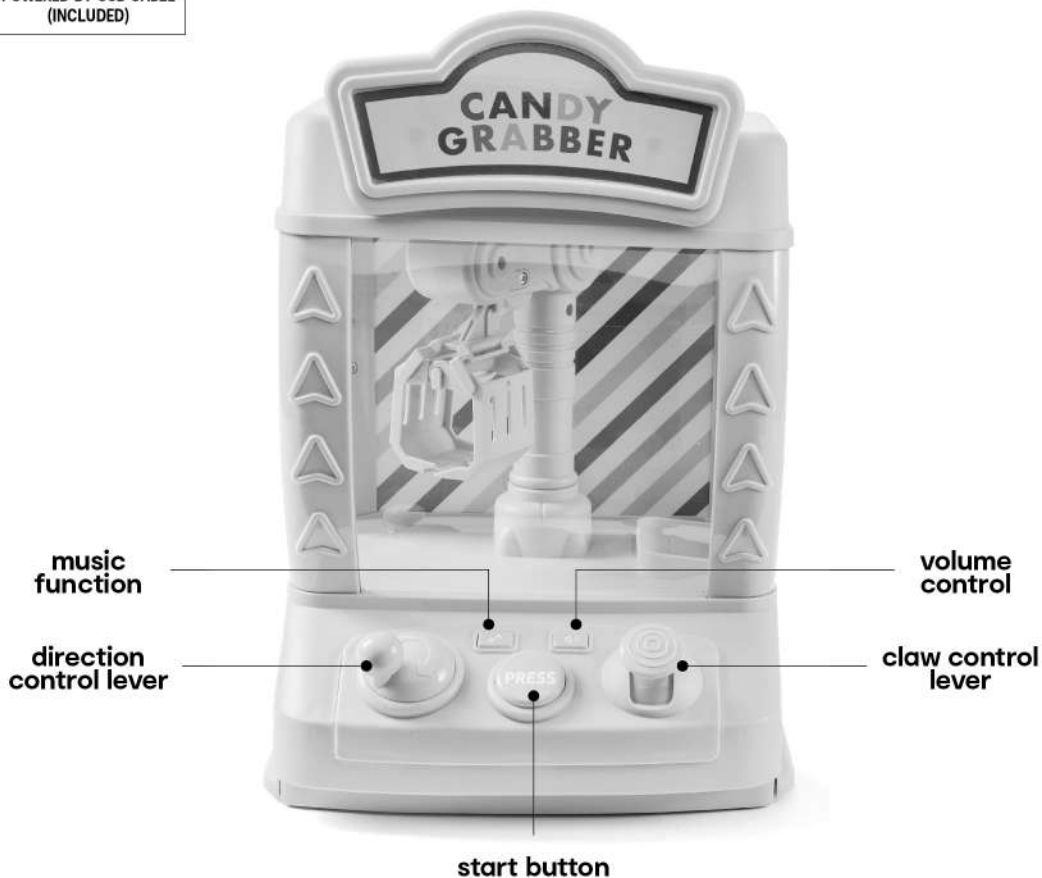

WARNING: CHOKING HAZARD
SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.

ADULT SUPERVISION REQUIRED.
PLEASE KEEP PACKAGING FOR FUTURE REFERENCE.
PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN.

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.



MADE IN CHINA

CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567

KEYCODE: 43480050