

Assembly Instructions

43488872 CARTER ARCHED CHEST OF DRAWERS

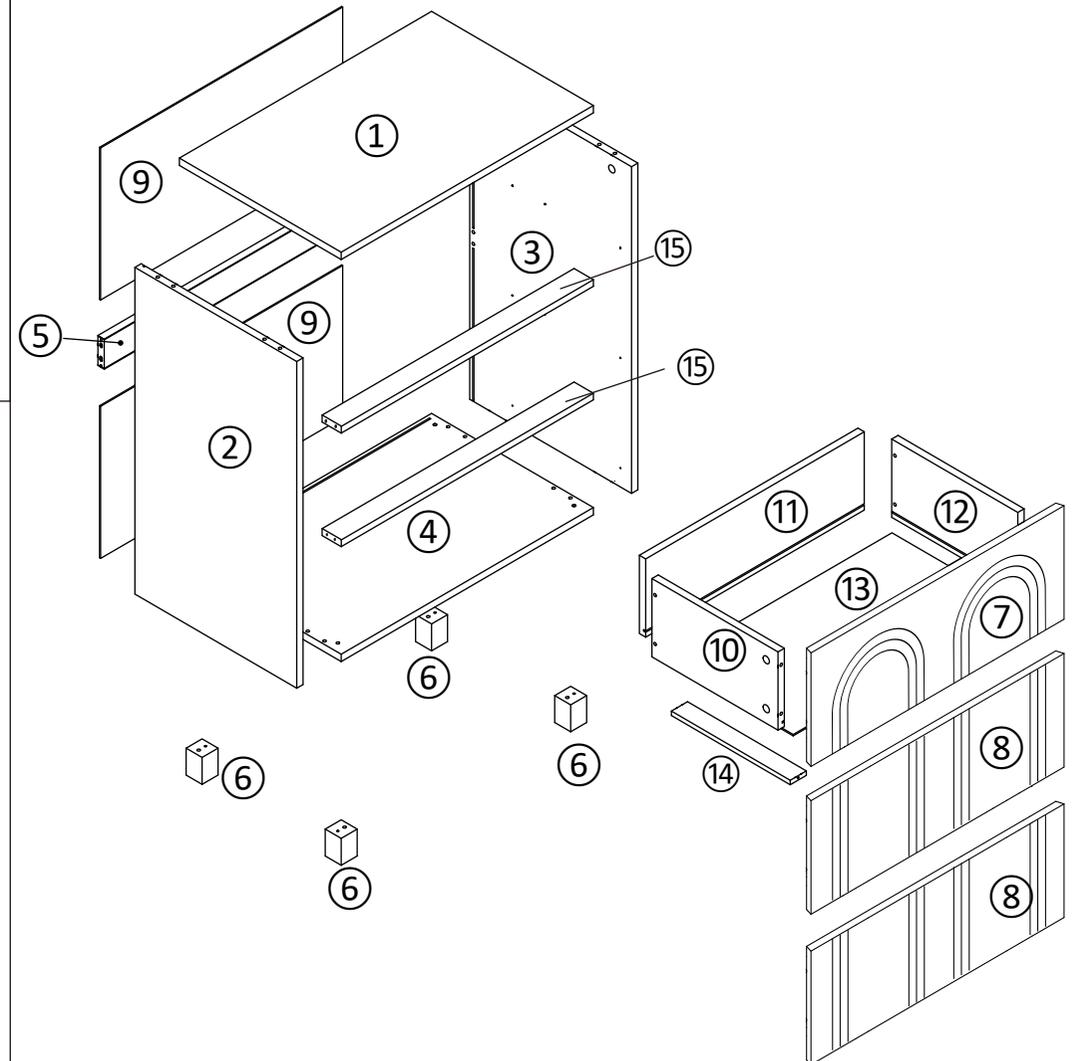
WARNING: DO NOT STAND OR SIT ON THIS UNIT. DO NOT USE THIS UNIT UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED. DO NOT KNOCK OR DRAG THIS UNIT. USE ONLY ON A FLAT SURFACE. ADULT ASSEMBLY REQUIRED. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY. LOAD DRAWER EVENLY TO PREVENT FROM TIPPING OVER. THIS PACKAGE CONTAINS SMALL PARTS AND SHARP POINTS. KEEP AWAY FROM CHILDREN AND BABIES.

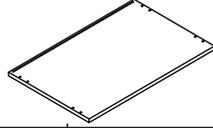
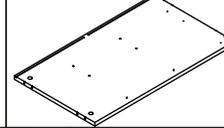
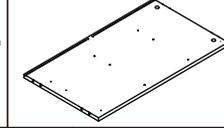
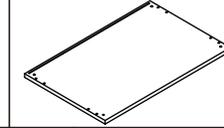
 
 
 
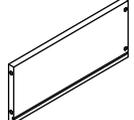
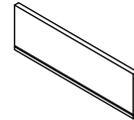
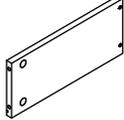
 
 
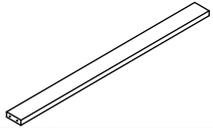
CARE INSTRUCTIONS: WIPE CLEAN WITH A DRY CLOTH. DO NOT USE ABRASIVE MATERIALS AND SOLVENTS. CHECK AND TIGHTEN ALL PARTS REGULARLY. DO NOT PLACE HOT ITEMS SUCH AS COFFEE CUPS DIRECTLY ON THE SURFACE. KEEP AWAY FROM WATER AND DIRECT SUNLIGHT. STORE IN A DRY PLACE. FOR DOMESTIC USE ONLY. FOR INDOOR USE ONLY. A MILD ODOUR MAY BE PRESENT WHEN FIRST OPENING THIS CARTON. SIMPLY ALLOW TO AIR OUTSIDE AND THIS WILL FADE.

MAXIMUM SAFE LOAD:TOP 15KG DRAWER:7KG

	a	M6x35	27pcs
	b	M15x10	27pcs
	c	M3x12	42pcs
	d	M6x30	12pcs
	e	M4x35	19pcs
	f	M4x50	4pcs
	g		3pcs
	h		3pcs


	i		3pcs
	j		3pcs
	k	M3x14	8pcs
	m		8pcs
	n		2sets
	s		2sets
	o		1pc
	r	M8x30	4pcs
	t		4pcs



			
① 1pc	② 1pc	③ 1pc	④ 1pc
			
⑤ 1pc	⑥ 4pcs	⑦ 1pc	⑧ 2pcs
			
⑨ 2pcs	⑩ 3pcs	⑪ 3pcs	⑫ 3pcs
			
⑬ 3pcs	⑭ 3pcs	⑮ 2pcs	


step 1

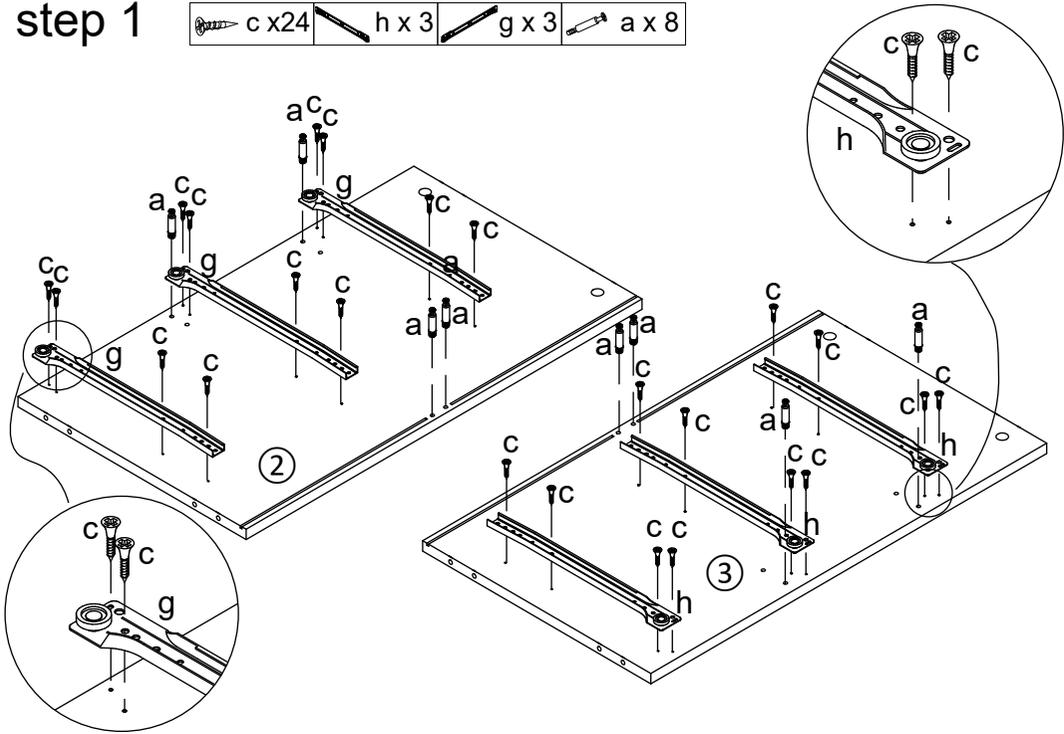c x 24 h x 3 g x 3 a x 8




step 2

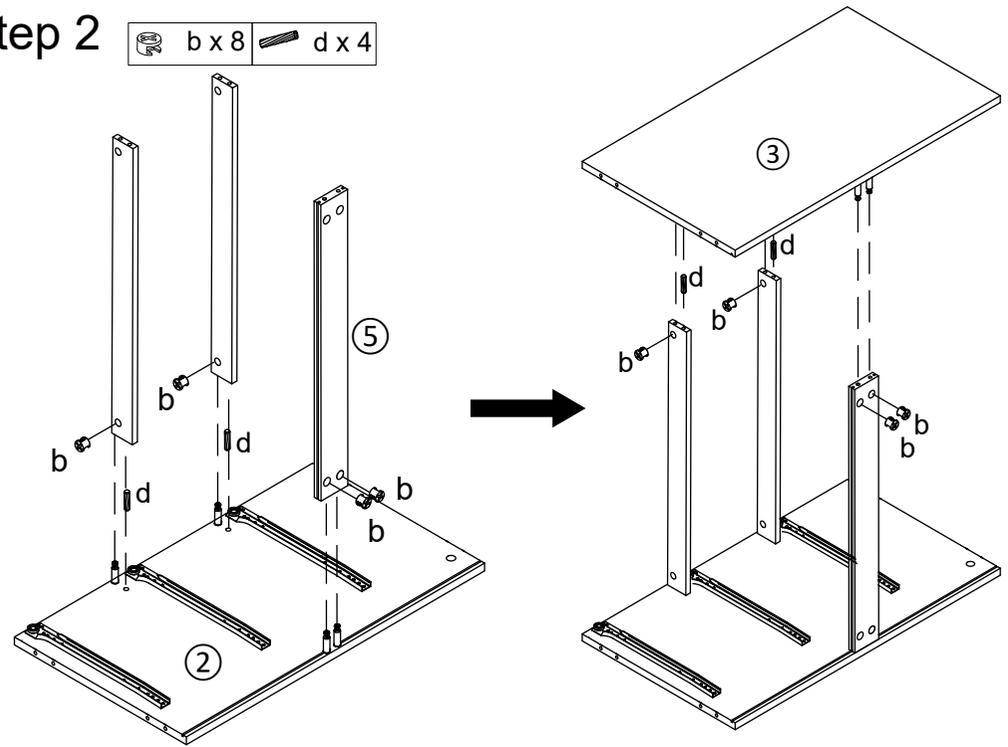b x 8 d x 4




step 3

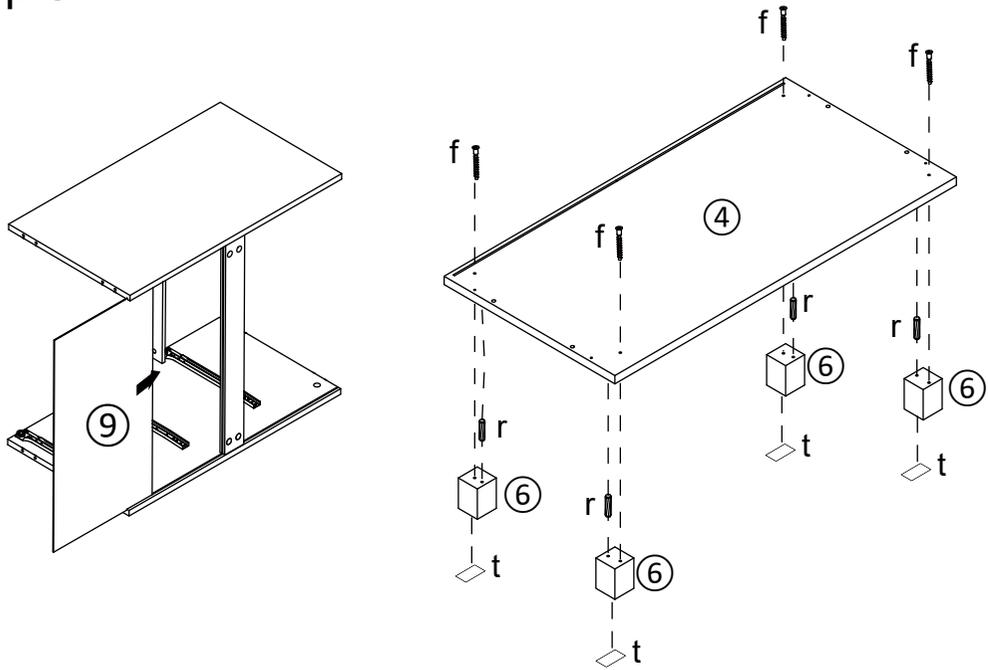r x 4 fx 4 tx 4






step 4

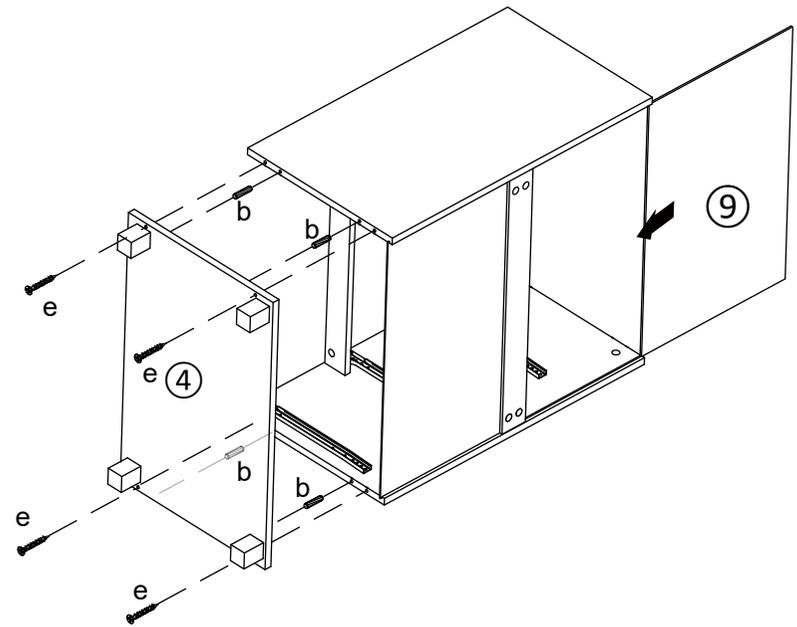d x 4 ex 4



  
step 5

 a x 4  b x 4  d x 4

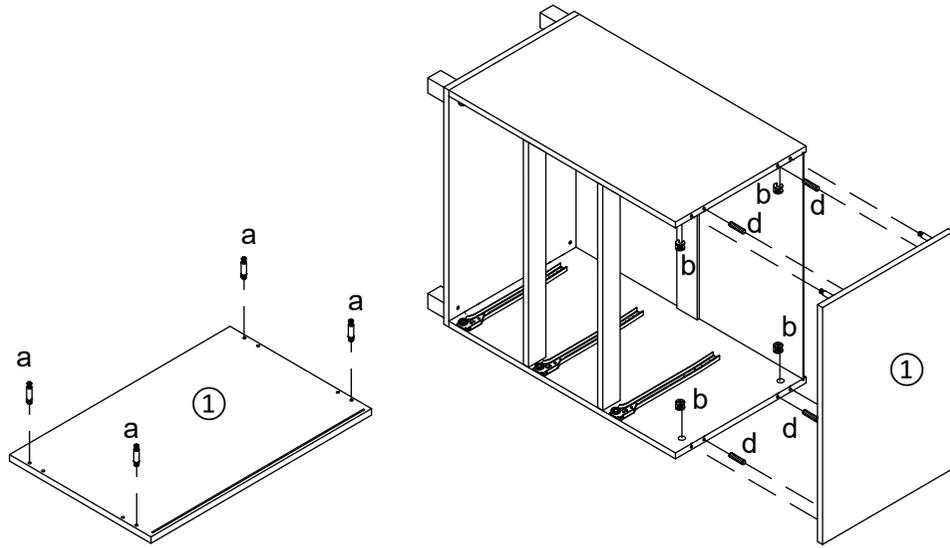



step 6

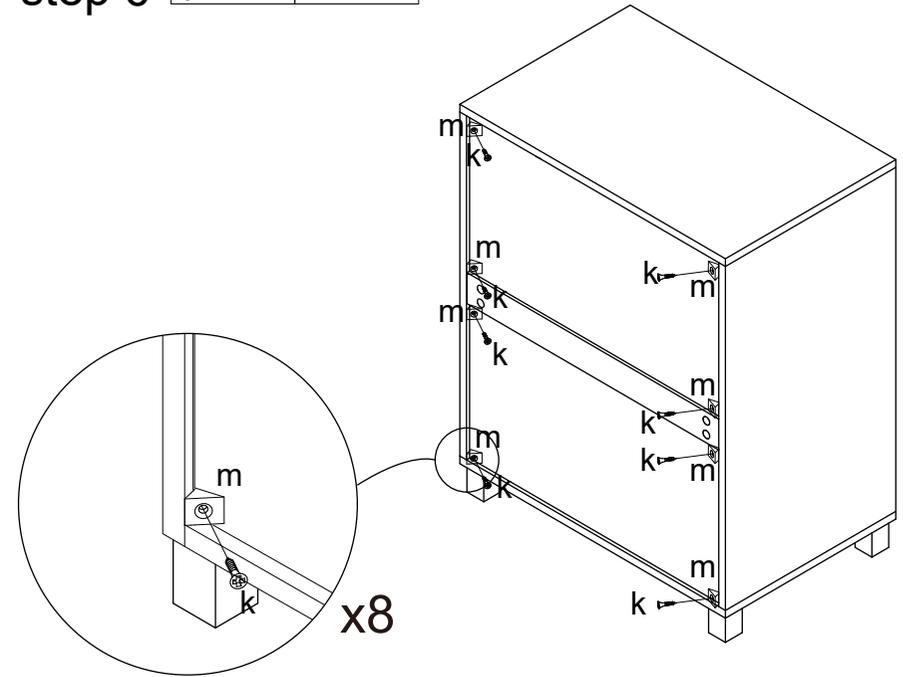 k x 8  m x 8



 
step 7

 a x 15  e x 15

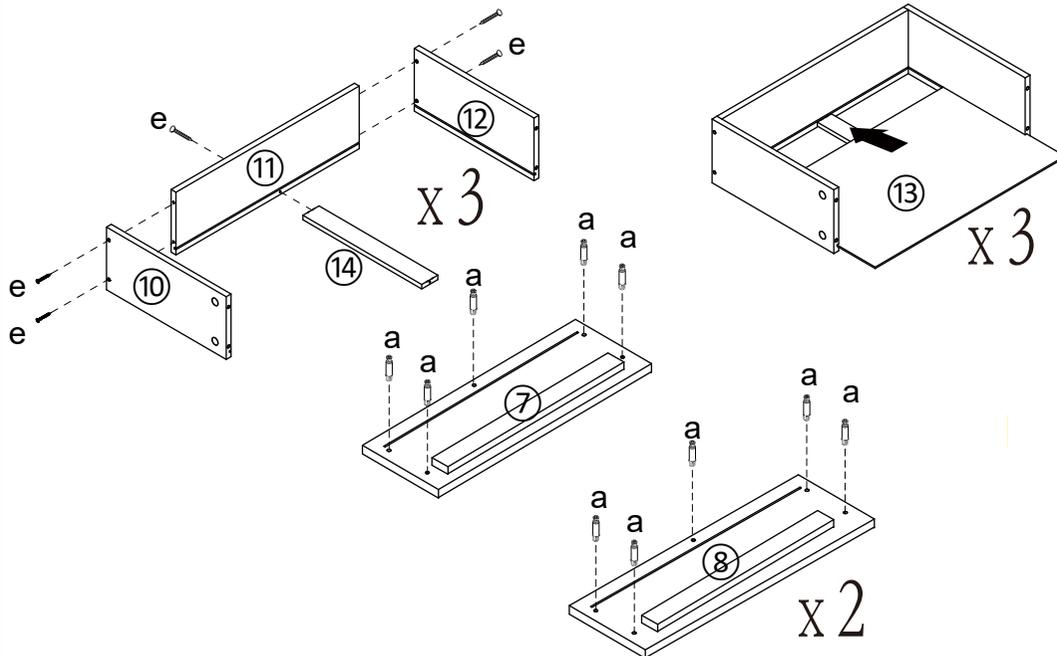



step 8

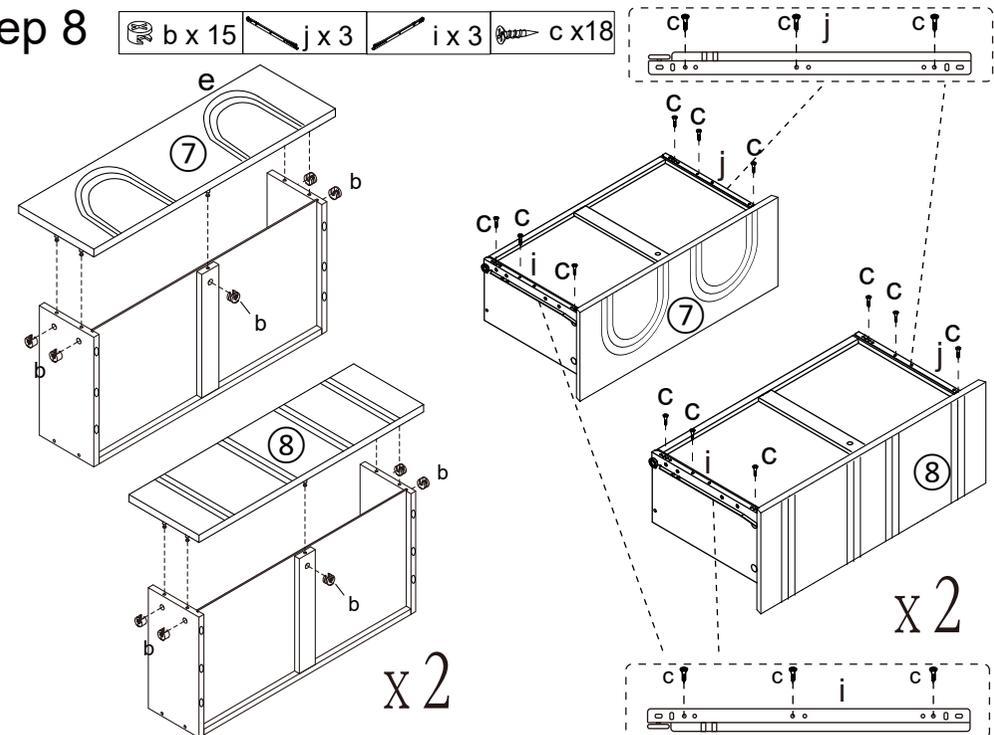
 b x 15  j x 3  i x 3  c x 18



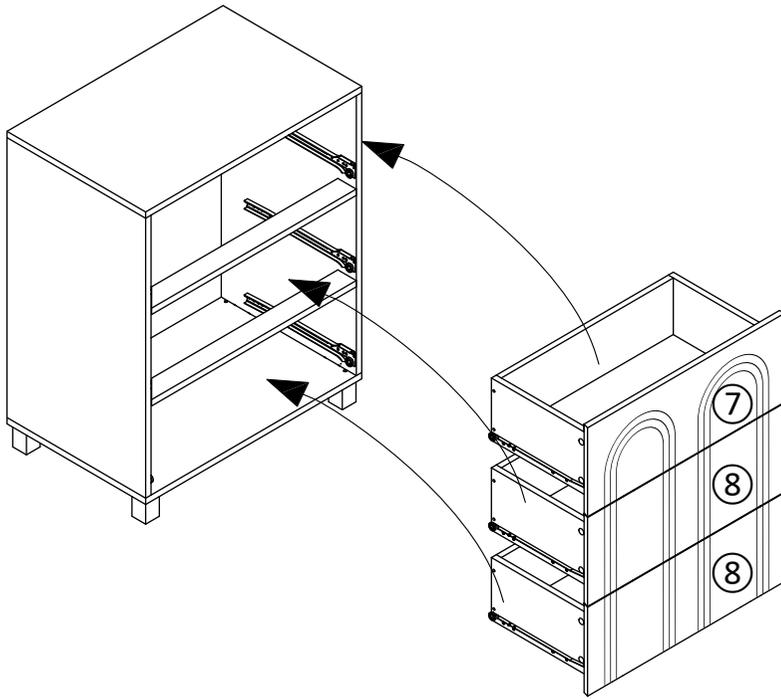 
step 9



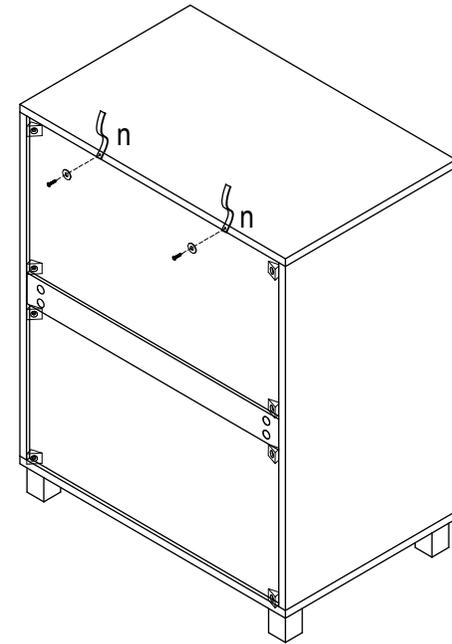step 10  n x 2



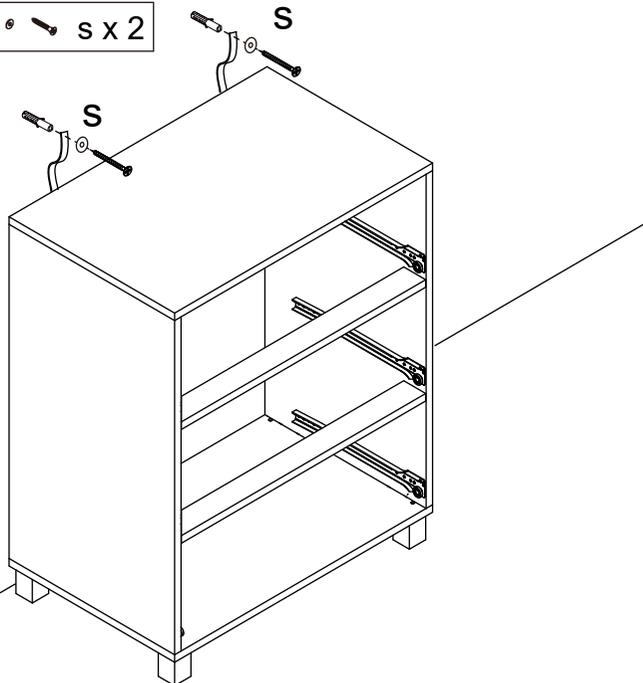step 11  s x 2




TOPPLING FURNITURE WARNING:

- It is strongly recommended that this product is permanently fixed to the wall.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture .

CAUTION: for your safety when attaching the anchor fixings, please note the following:

- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).

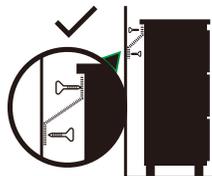▲ WARNING

Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture 

This is a permanent label. Do not remove!



WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.

